




MUD NAS Defender Soft Top Speaker Fitting Instructions

The MUD NAS speaker panels are a snug fit within the body corners and will require some degree of flexing in order to get them to fit. Don't worry too much about bending the plastic – it's a tough material!

For this reason, we recommend you install your speakers within the panels AFTER the speaker panels have been located in the vehicle corners. This is to ensure the panel remains as flexible as possible for fitting.

Installation Tip: We recommend folding the top edge of the speaker panel under the body capping first and then working the panel into place.

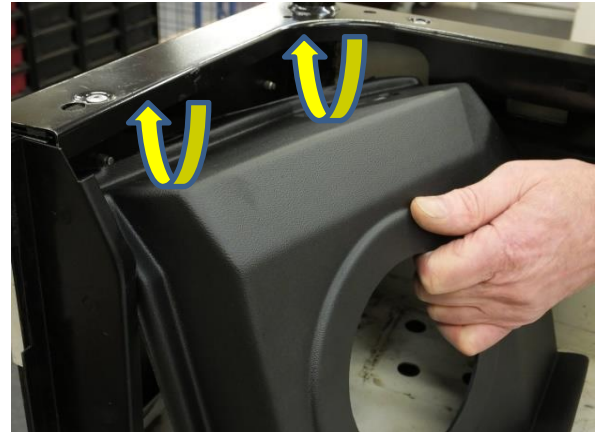

The MUD panels were modelled on a Genuine NAS90 Soft-Top Defender and accurately replicate the original Land Rover part profile and dimensions. On non NAS Soft-Top Defender models there may be a degree of trimming of the plastic required around the door pillar area to take into account the differences in body type and model years or simply because of the typical level of vehicle butchery that a Defender experiences within its lifespan.

Installation Tip: Adding some sound deadening material to the back of the panels and the area of bodywork behind the panel will improve the sound quality from your speakers.



Position and drill the fixing holes into the base lip of the new panel to correspond with the original Land Rover parts NAS panel and/or fixing holes in the top of bodytub/wheelarch. Alternatively, use the fir-tree fixings supplied. The fir-tree fixings will require a 6mm fixing hole drilled through the panel into the top of the bodytub/wheelarch. Tap the fix-tree fixings into place with a soft hammer.

