

# Land Rover Defender Genuine Rear Door Trim Post 2002 Fitting Instructions


Remove the door-handle plastic insert/escutcheon. The trim clips into place and can be removed with a trim tool or a small flat bladed screwdriver.



Remove the door grab handle. The grab-handle is secured by 4 x TX25 Torx fasteners.



The trim is secured to the door by fasteners in the locations illustrated in red below. Be careful when prising the old trim away from the door so as not to damage the fragile trim clips (LR Part# EYC000230). When you have released all eight fasteners around the outside edge of the door frame, the central fastener is located within a slotted moulding on the door. To release the panel from the door, slide the entire trim panel downwards.

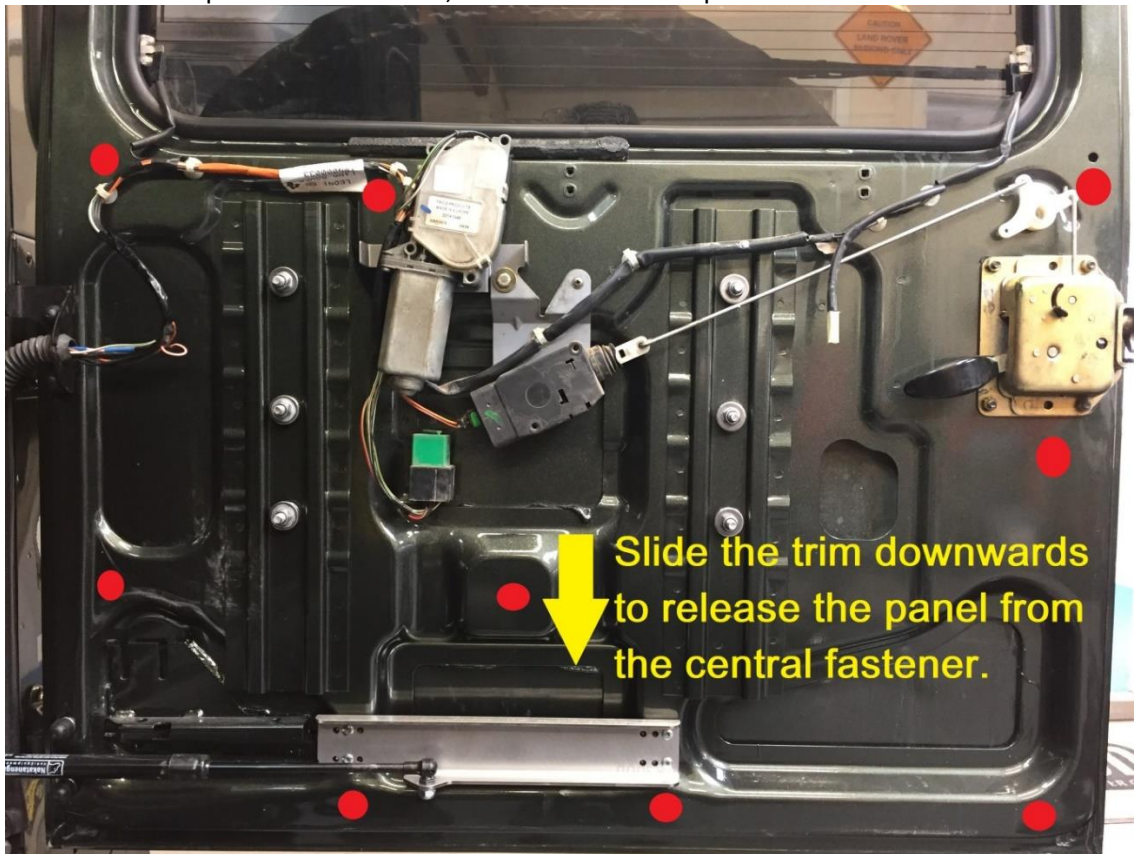

Fitting is the reversal of the removal. We recommend fitting the net to the trim before you fit the trim to the door. Position the net within the recess on the trim and use a 2.5mm drill or bradawl to create the net fixing holes. Fix the net in place using the small self-tapping screws supplied. Push the screw caps into place. Use the head of a screwdriver if the screw-caps are a tight fit.

