


delta

Composite Road Bottle Cage

Assembly instructions BT8000

Tools Required

Allen Key

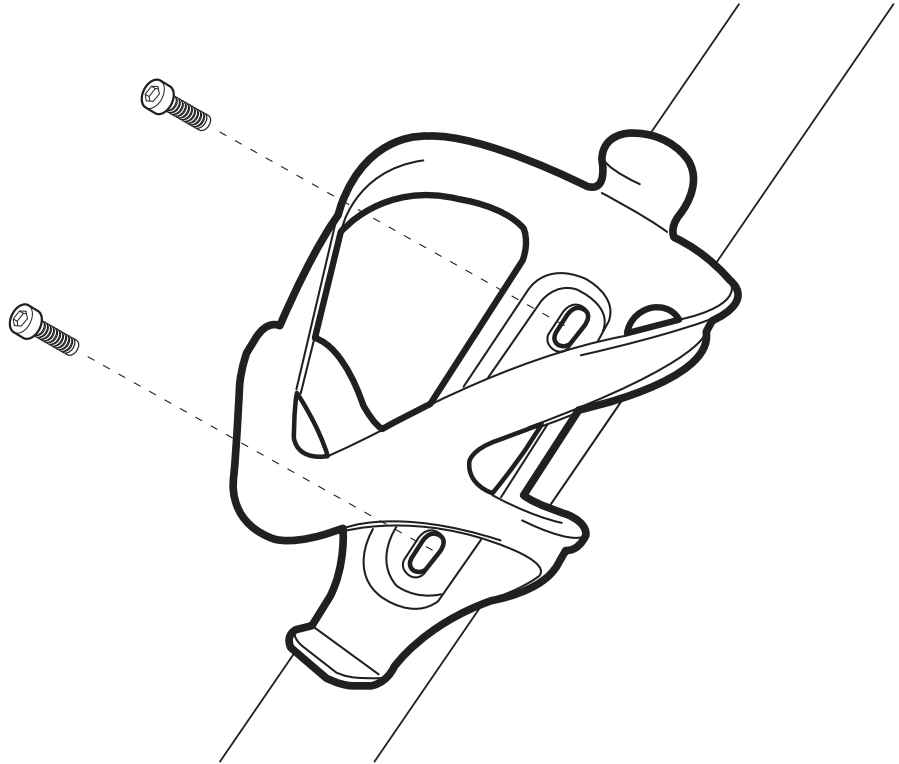

WARNING

Check frequently to ensure all bolts are properly tightened.