


## Tilner Mirror Installation Instructions/Care Guide

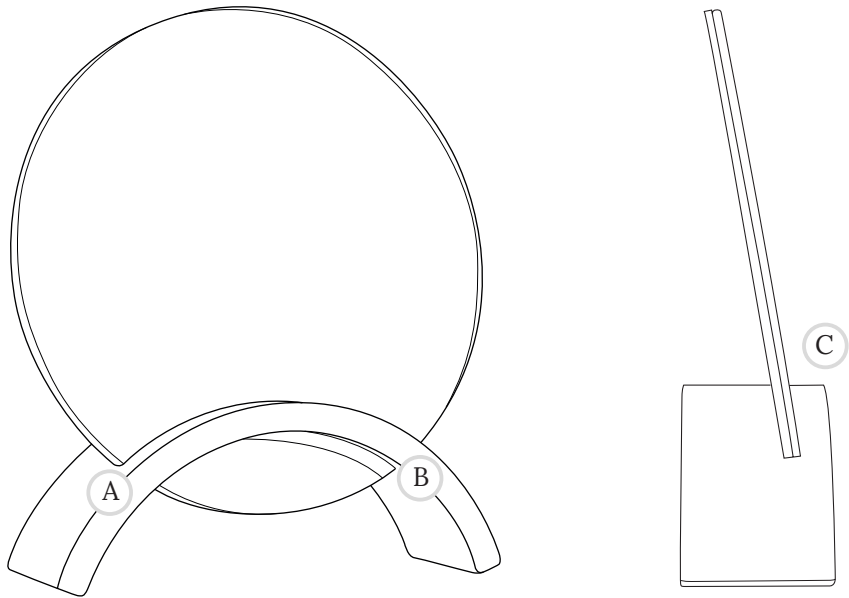

1. Stand the steam bent wooden base upright on a flat surface and carefully place the mirror into the slot ensuring the TR logo on the reverse is upright and level. Ensure the mirror is pushed down all the way and touches the edges of the slot on both sides (A and B). Avoid touching the reflective surface where possible as this will leave fingerprints. Make sure the reflective surface is at the front of the base (C). The mirror should lean backwards and face out into the room.
2. To clean the mirror surface, carefully remove the mirror from its base and clean using a suitable glass cleaner and then dry using a soft, dry, lint free cloth. Dust the steam bent wooden base with a soft, dry, lint free cloth. Mild furniture polishes can be used on the wood. Slot the mirror back into the base following the steps above.