


HOW TO INSTALL: CABLE-CF-ADAPTER

1

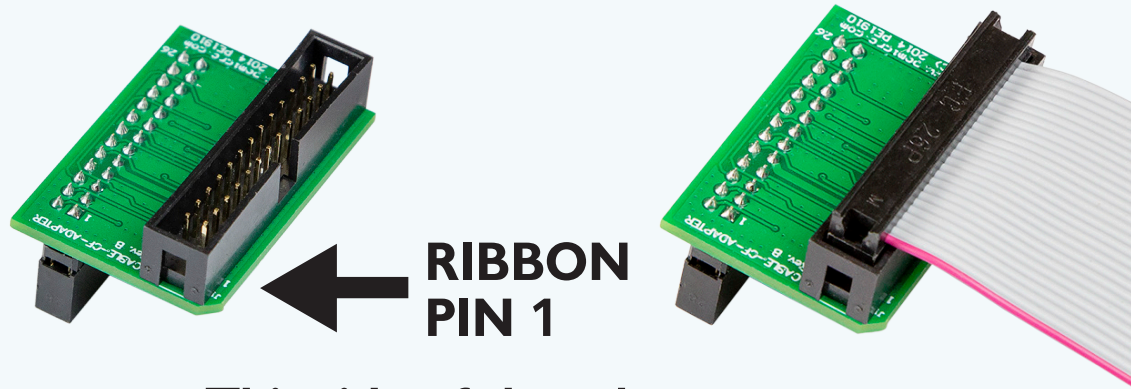


**RIBBON
PIN 1**

This side of the adapter connects to the ribbon cable. **PIN 1** is labelled.


2

TARGET PIN 1

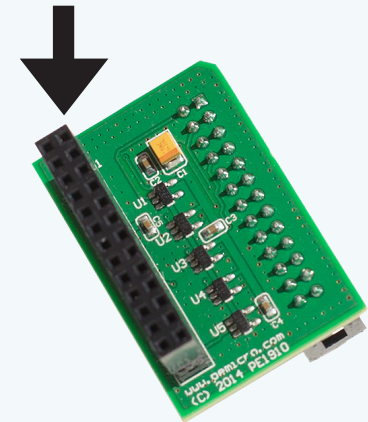

This side of the adapter connects to the target board header. **PIN 1** is labelled.

3

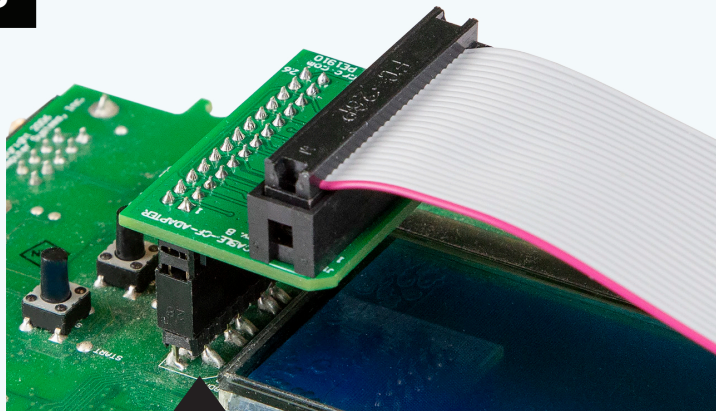

TARGET PIN 1

This shows **CABLE-CF-ADAPTER** correctly installed on the target header.

The other end of the ribbon cable connects to the 26-pin ColdFire header on a compatible Cyclone programmer or Multilink debug probe.



Visit us at pemicro.com