

KARPENTER

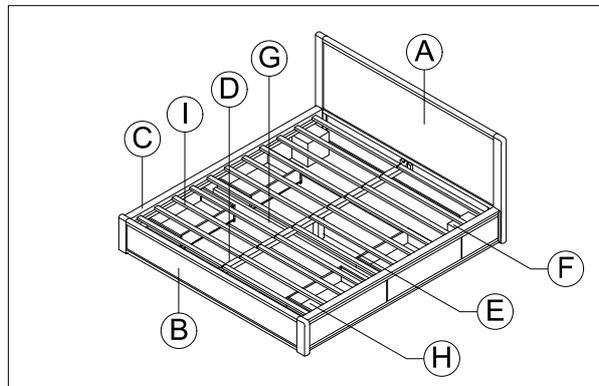
Designed by Us Defined by Nature

ASSEMBLING INSTRUCTION





BED



Pre Assembly :



- Please read all instructions before beginning assembly
- Place all parts on a carpet or foam in shipping box. Find the letter (A,B,C,...) or the number (1,2,3,...) on each part and check with below part list to ensure we have all components.
- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.
- This cart requires one people to do assembly.




Parts Included :

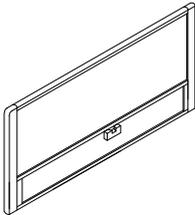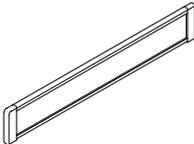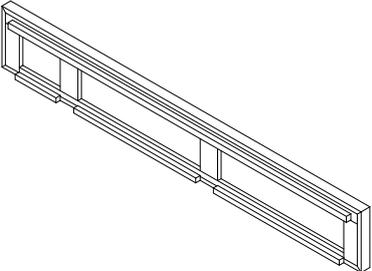
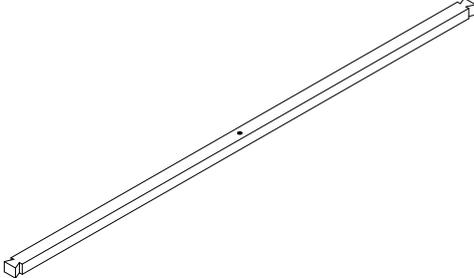
A - Headboard - 1 pc	B - Footboard - 1 pc
	
C - Side Rail - 2 pcs	D - Center Rail - 1 pc
	


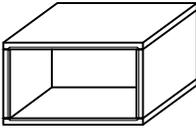
E - Extra Leg - 1 pc	F - Extra Box - 2 pcs
	

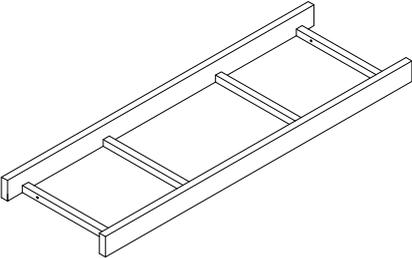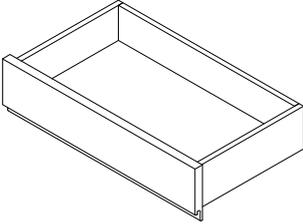G - Cross Rail - 2 pcs	H - Drawer - 4 pcs
	

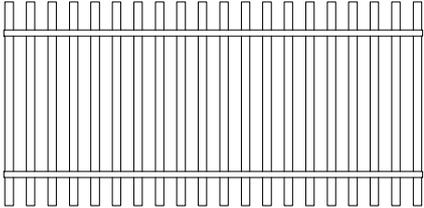I - Slats - 2 set

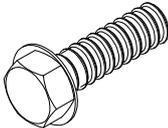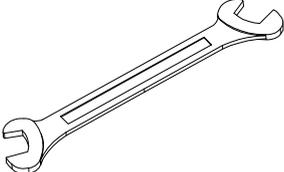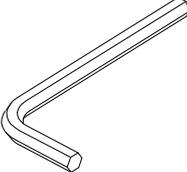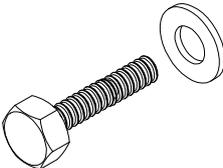
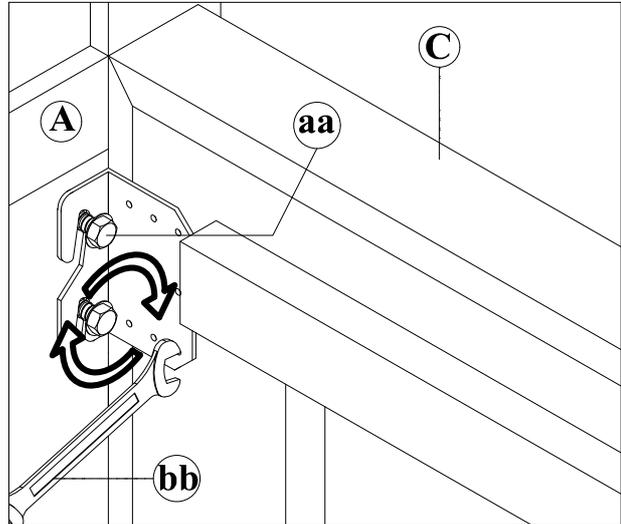
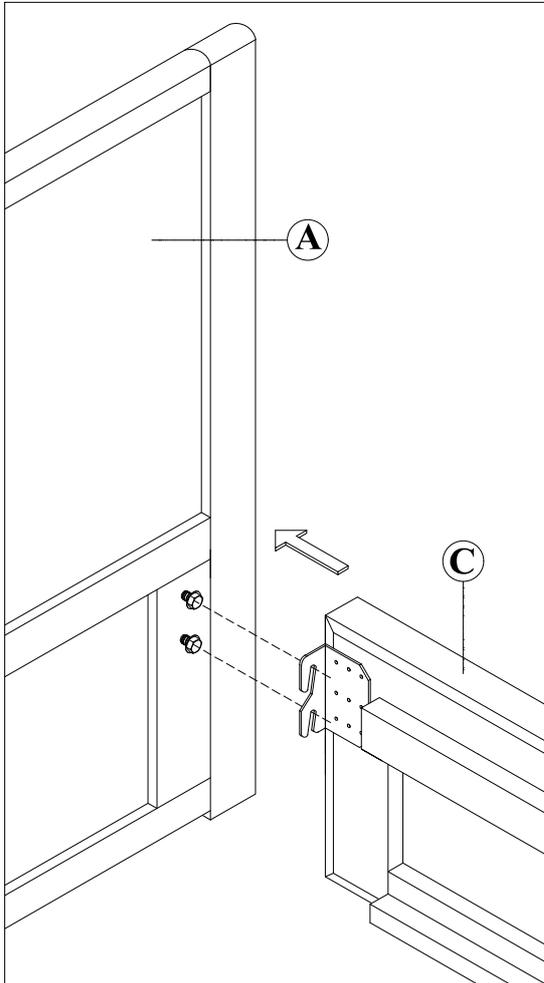
Hardware Enclosed :

aa - Hexagonal bolts - 8 pcs	bb - Wrench - 1 pc	cc - JCBC Bolt - 8 pcs
Short 		


dd - Allen Key - 1 pc	ee - Bolt w/ Washer - 12 pcs
	Long 

Assembly Instructions :



1. Lay all components (A, B, C,...) onto clean smooth surface as carpet or cardboard.
2. Attach Side Rail (C) to the Headboard (A).
 - 2.1. Please carefully note all letter or number at component that indicates homing destination as not to misplace components.
 - 2.2. Please hang the brackets to the Short Hexagonal bolts (aa) and leave bolts a little bit loosen (see below diagram).



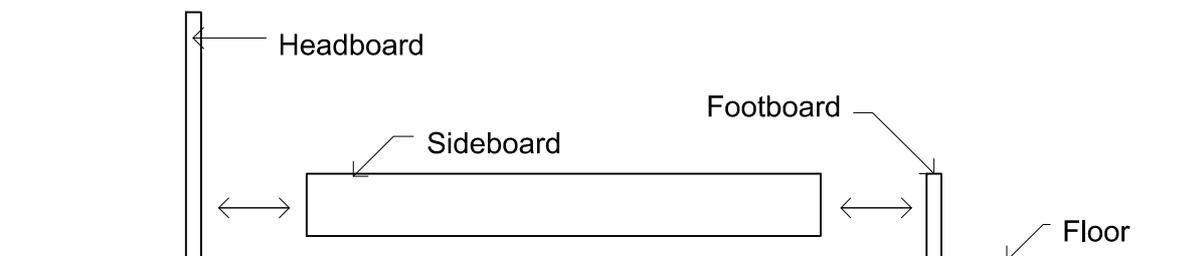3. Attach Footboard (B) to the components.
 - 3.1. Please note the indicating letter for homing guidance.
 - 3.2. Position the siderail (C) aligned / straight with the Footboard (B) and the Headboard (A).
 - 3.3. Make sure the bracket is aligned with the Hexagonal bolts (aa).
 - 3.4. Insert Hexagonal bolts (aa), leave bolts a little bit loosen.





(see below diagram).

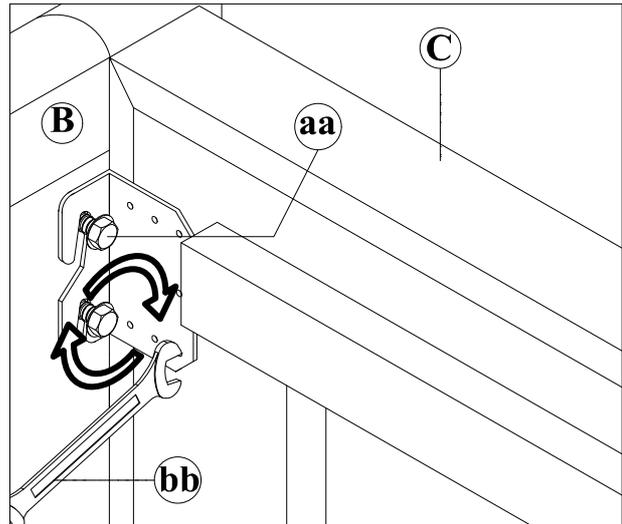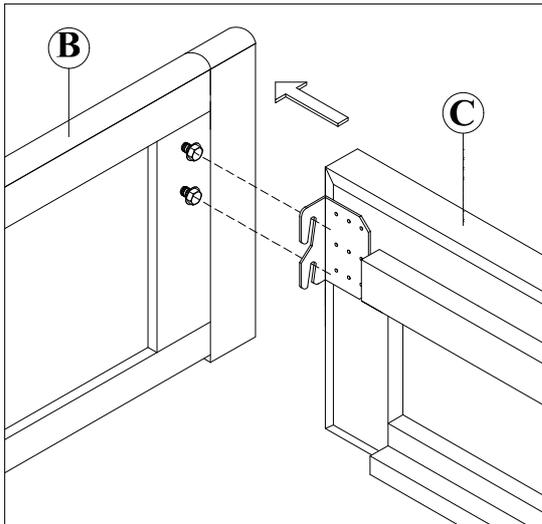


4. Make sure to tighten all bolts by using Wrench (bb).

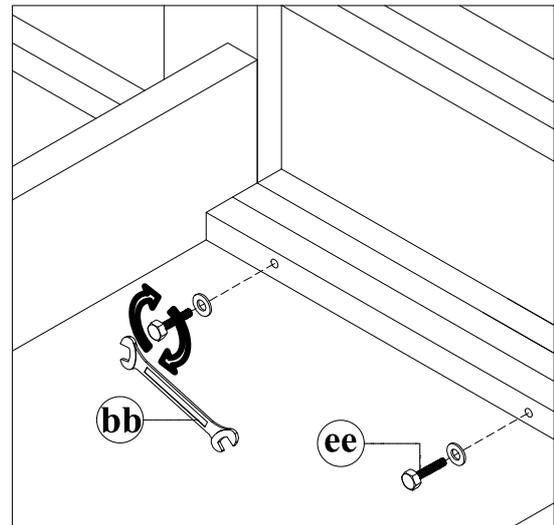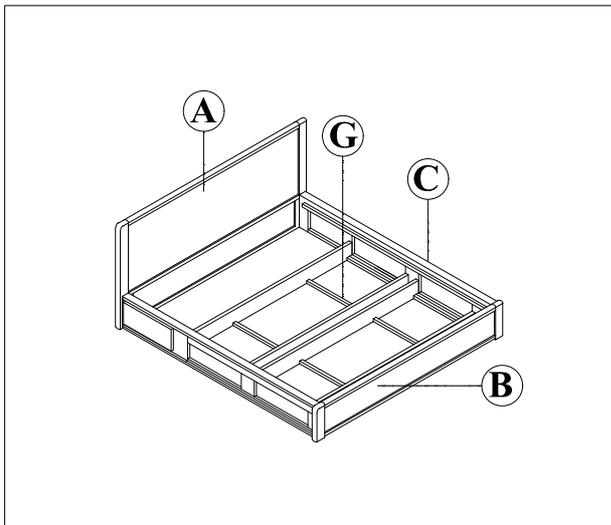
5. Attach Cross Rail (G) to the Side Rail (C). Secured by Long Hexagonal Bolt with washer (ee). Tighten by using Wrench (bb)




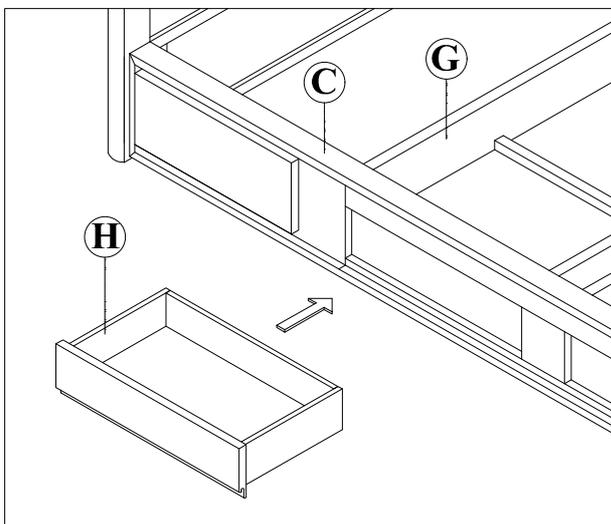
6. Insert Drawer (H) to the hole of Side Rail (C). Fix the Drawer Runner.



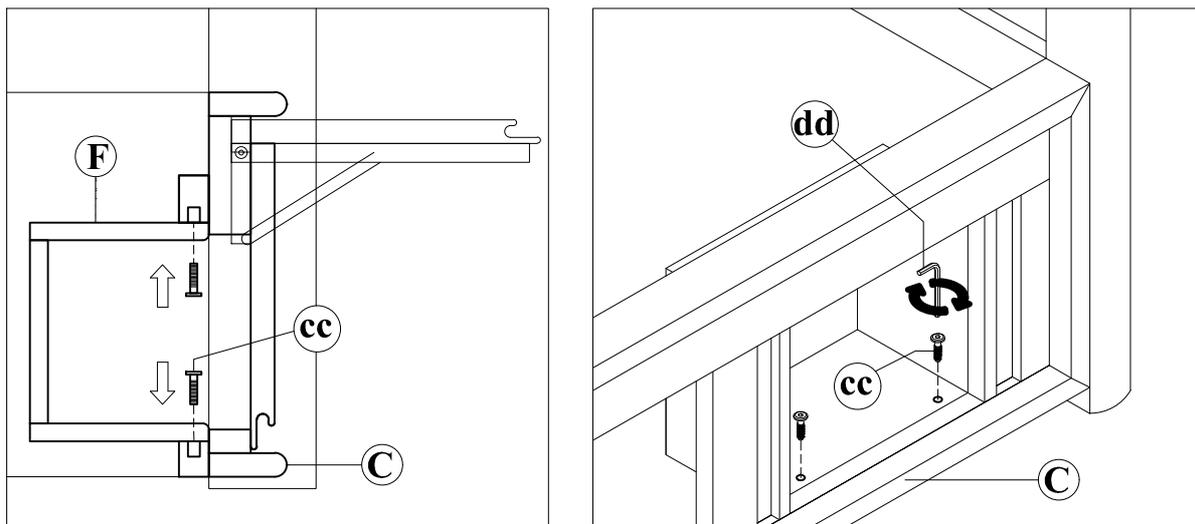
7. Insert Extra Box (F) to the hole of Side Rail (C), secured by JCBC Bolt (cc) from inside of the box. Tighten by using Allen Key (dd)




8. Attach Extra Leg (E) to the Center Rail (D). Tighten Clockwise

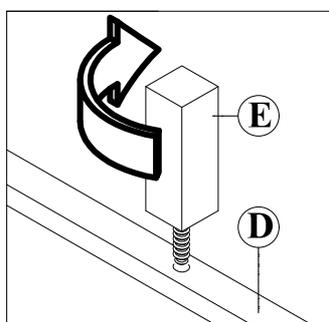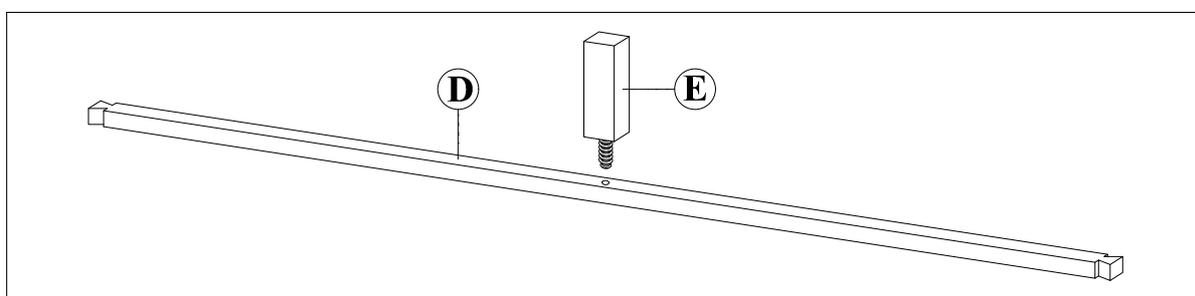

9. Attach Center Rail (D) with Extra Leg (E) to bed. Please DO NOT attach Center Rail (D) without first securing Extra Leg (E) to the whole body otherwise Center Rail (D) can break.

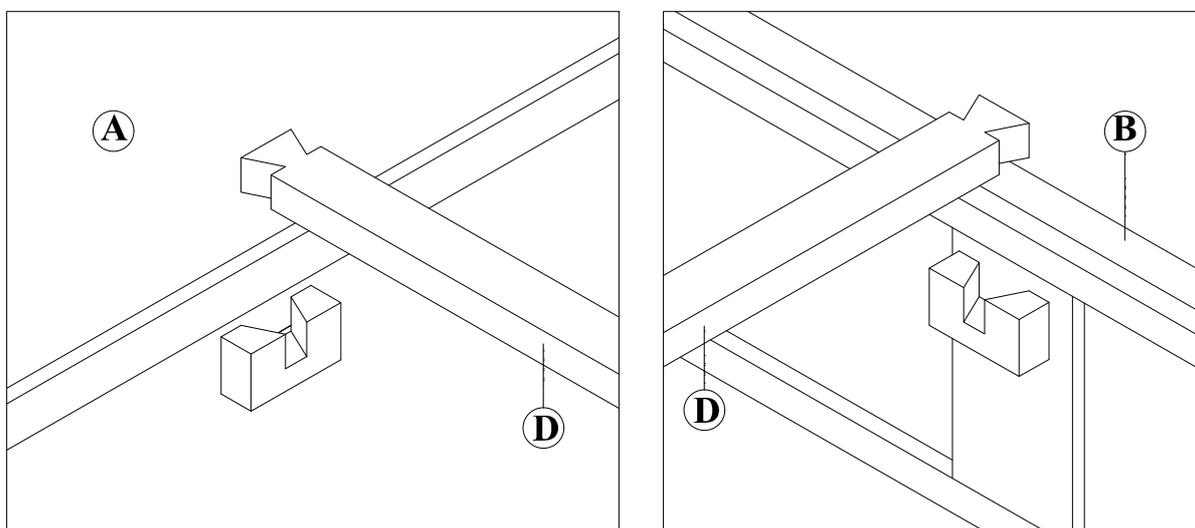

10. Attach Slats (I) to the whole body. Use the wood stopper to guide.
ASSEMBLY IS COMPLETED

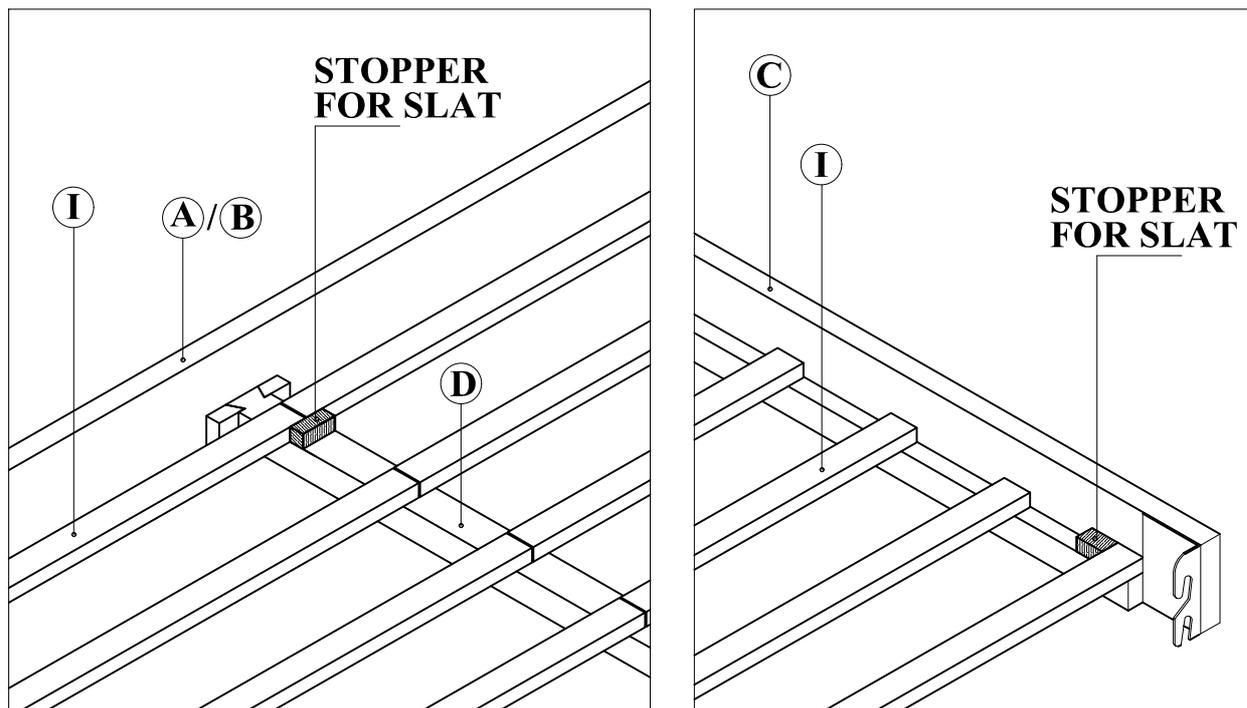

Care Instructions :

- Hardware may loosen over time. Periodically check to make sure all components are tight. Re-tighten if necessary.
- Dust with soft dry cloth.
- Avoid abrasive cleaners. If a cleaner is needed, use a mild-cleaner spray and blot with an absorbent cloth.
- For indoor use only.