

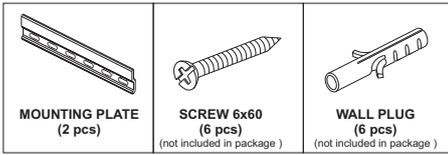


## 51224 OAK NORDIC II NIGHTSTAND - 1 DRAWER - HANGING ASSEMBLY INSTRUCTION FOR HANGING NIGHTSTAND INSTALLATION


### HARDWARES

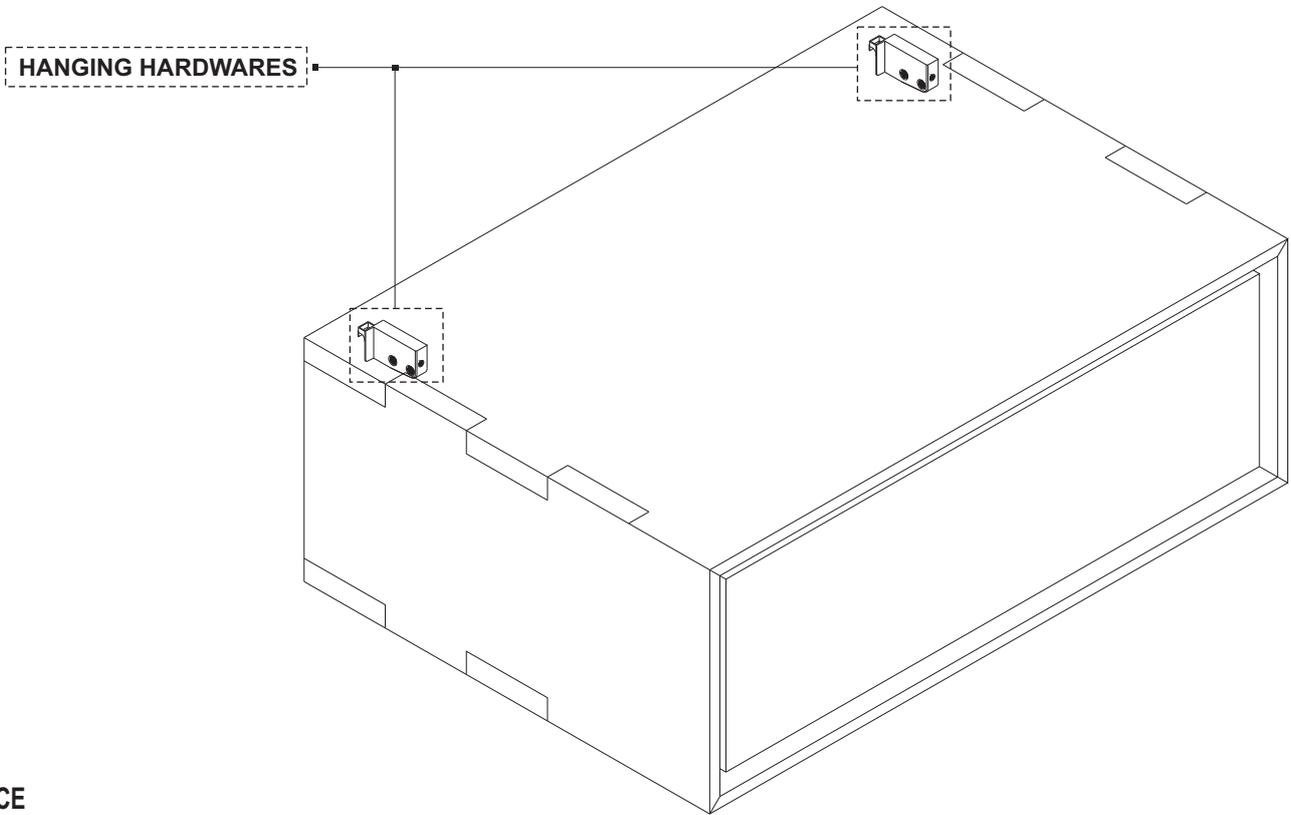

### TOOLS

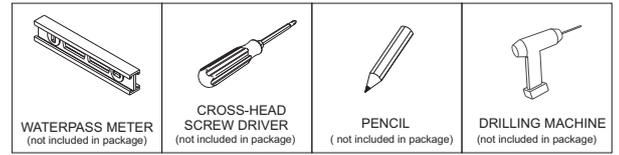


### NOTICE

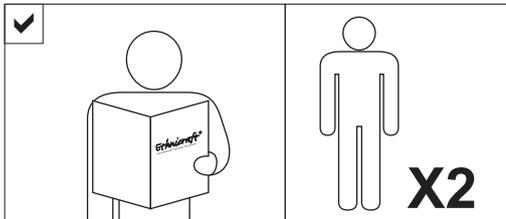

### SYMBOLS



DIRECTION




NUMBER OF PERSON NEEDED



USE PENCIL TO MARK



USE SCREW DRIVER TO TIGHTEN

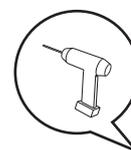


USE DRILLING MACHINE




USE WATER PASS METER

## 51224 OAK NORDIC II NIGHTSTAND - 1 DRAWER - HANGING ASSEMBLY INSTRUCTION FOR HANGING NIGHTSTAND INSTALLATION

### A. SET DESIRED HEIGHT

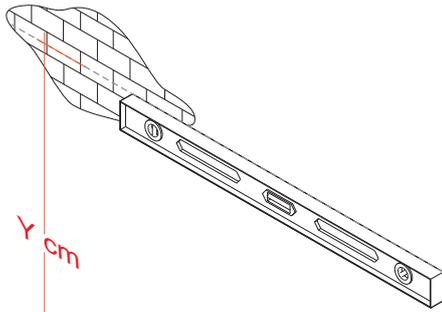







### B. MAKE MARKS FOR DRILLING POINT

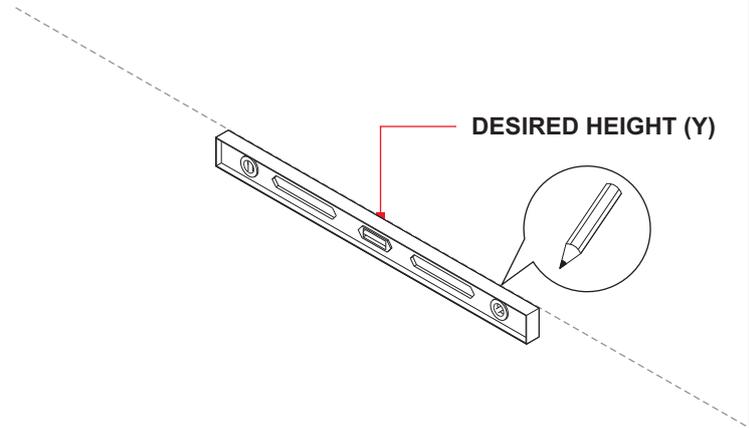

**!** USE WATER PASS FOR ALIGNMENT  
Y = DESIRED HEIGHT OF THE ITEM

### C. INSTALLING MOUNTING PLATES



NOTE :

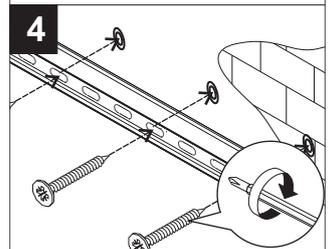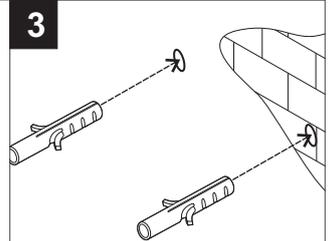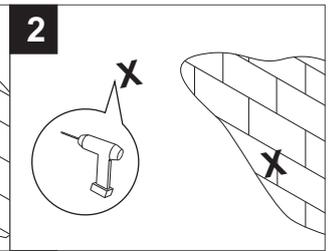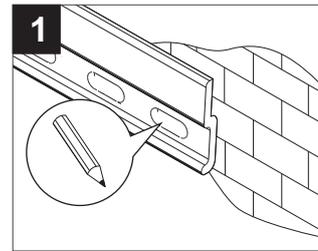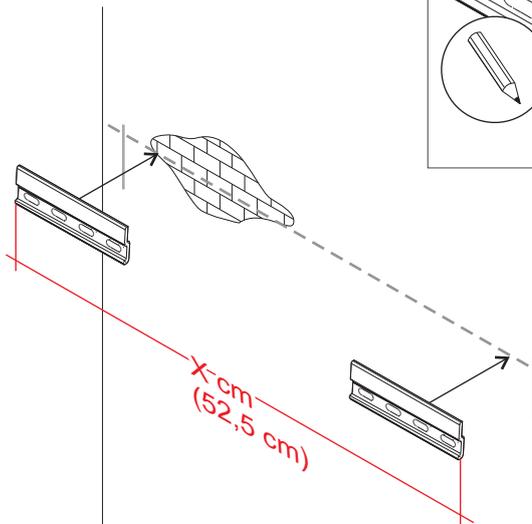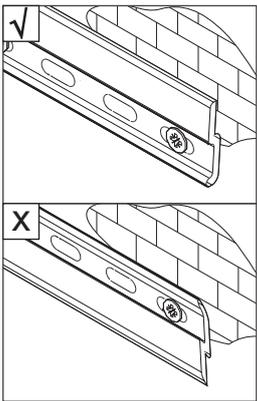


<b>X</b>	<b>52,5 cm</b>
----------	----------------

## 51224 OAK NORDIC II NIGHTSTAND - 1 DRAWER - HANGING ASSEMBLY INSTRUCTION FOR HANGING NIGHTSTAND INSTALLATION



### D. REMOVING THE DRAWER

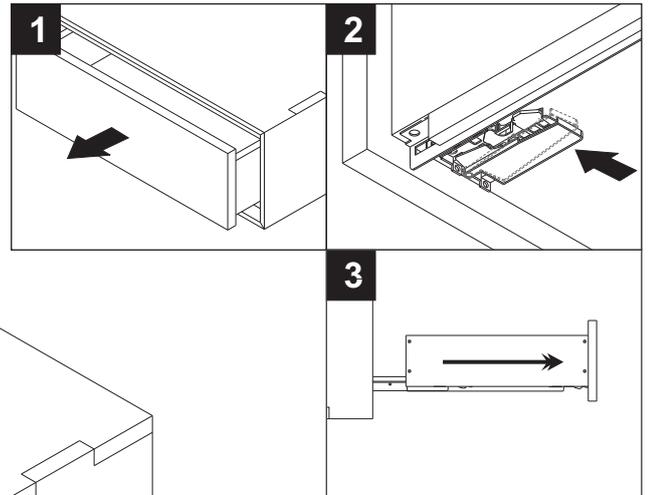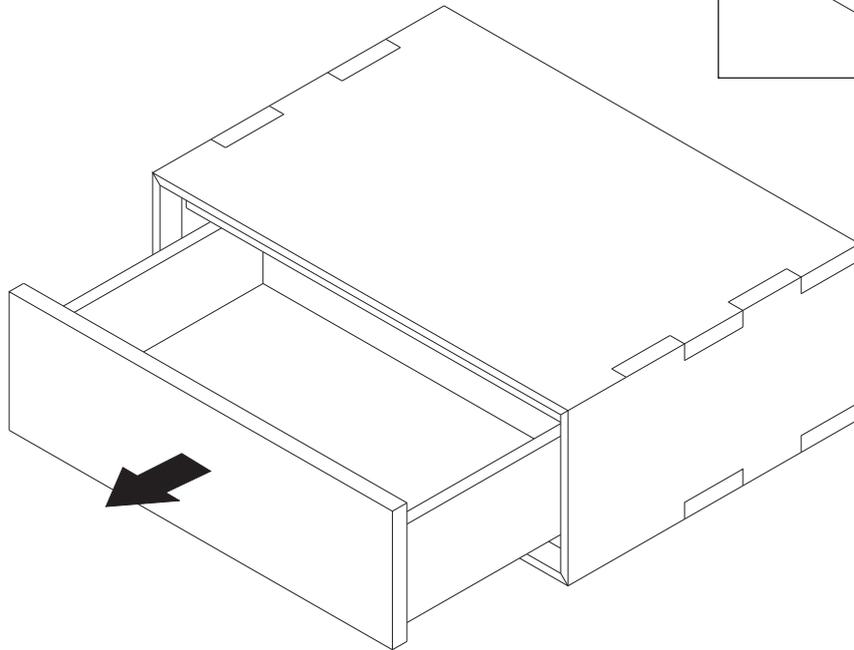

### E. INSTALLING ITEM TO THE MOUNTING PLATE


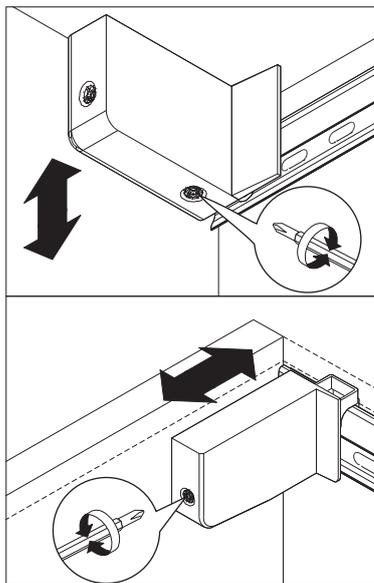


⚠ ADJUST IF NECESSARY

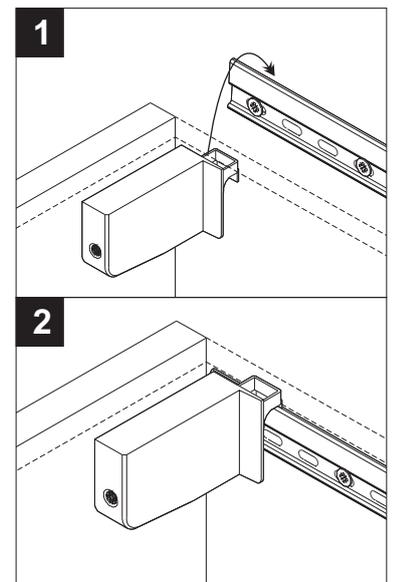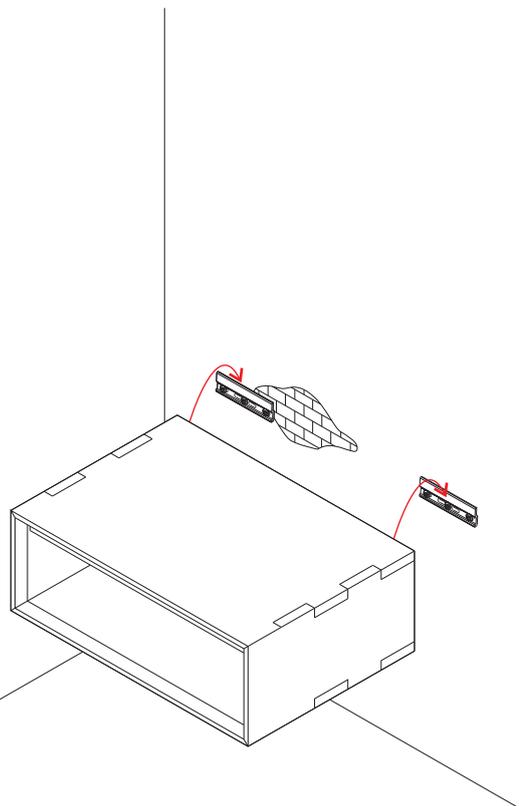

51224 OAK NORDIC II NIGHTSTAND - 1 DRAWER - HANGING  
ASSEMBLY INSTRUCTION FOR HANGING NIGHTSTAND INSTALLATION

**F. INSTALLING THE DRAWER**

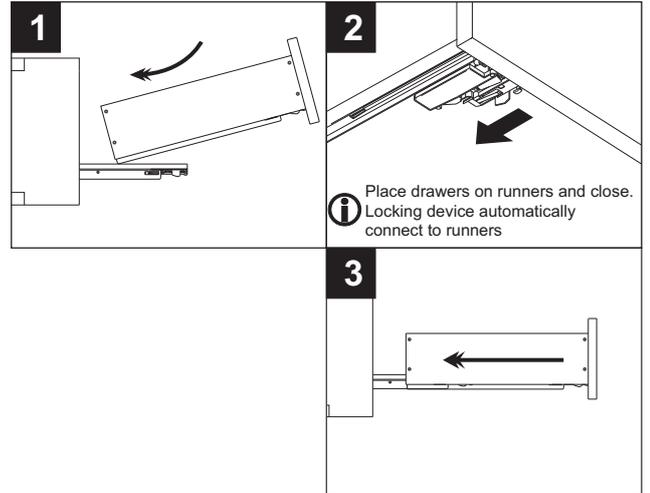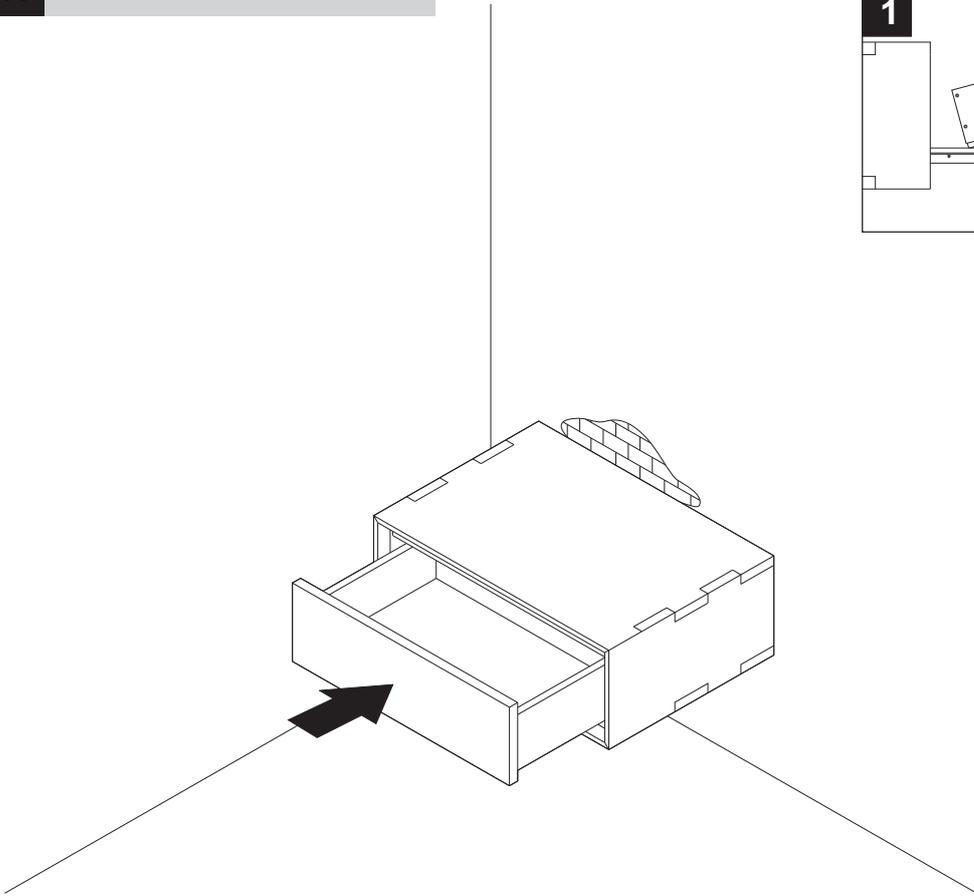

**G. FINISH**

