



Create The Best Water You Can

INSTALLATION INSTRUCTION




SPRITE PURE 7 STAGE HAND HELD SHOWER HEAD

Thank You for trusting us with your Water Filtration needs.
Please read and follow the steps below on setting up your Product.

If you need any help, please call us at 1800-769-300 or contact us through our website at www.mywaterfilter.com.au/contacts/ or email us at customerservice@mywaterfilter.com.au

Parts

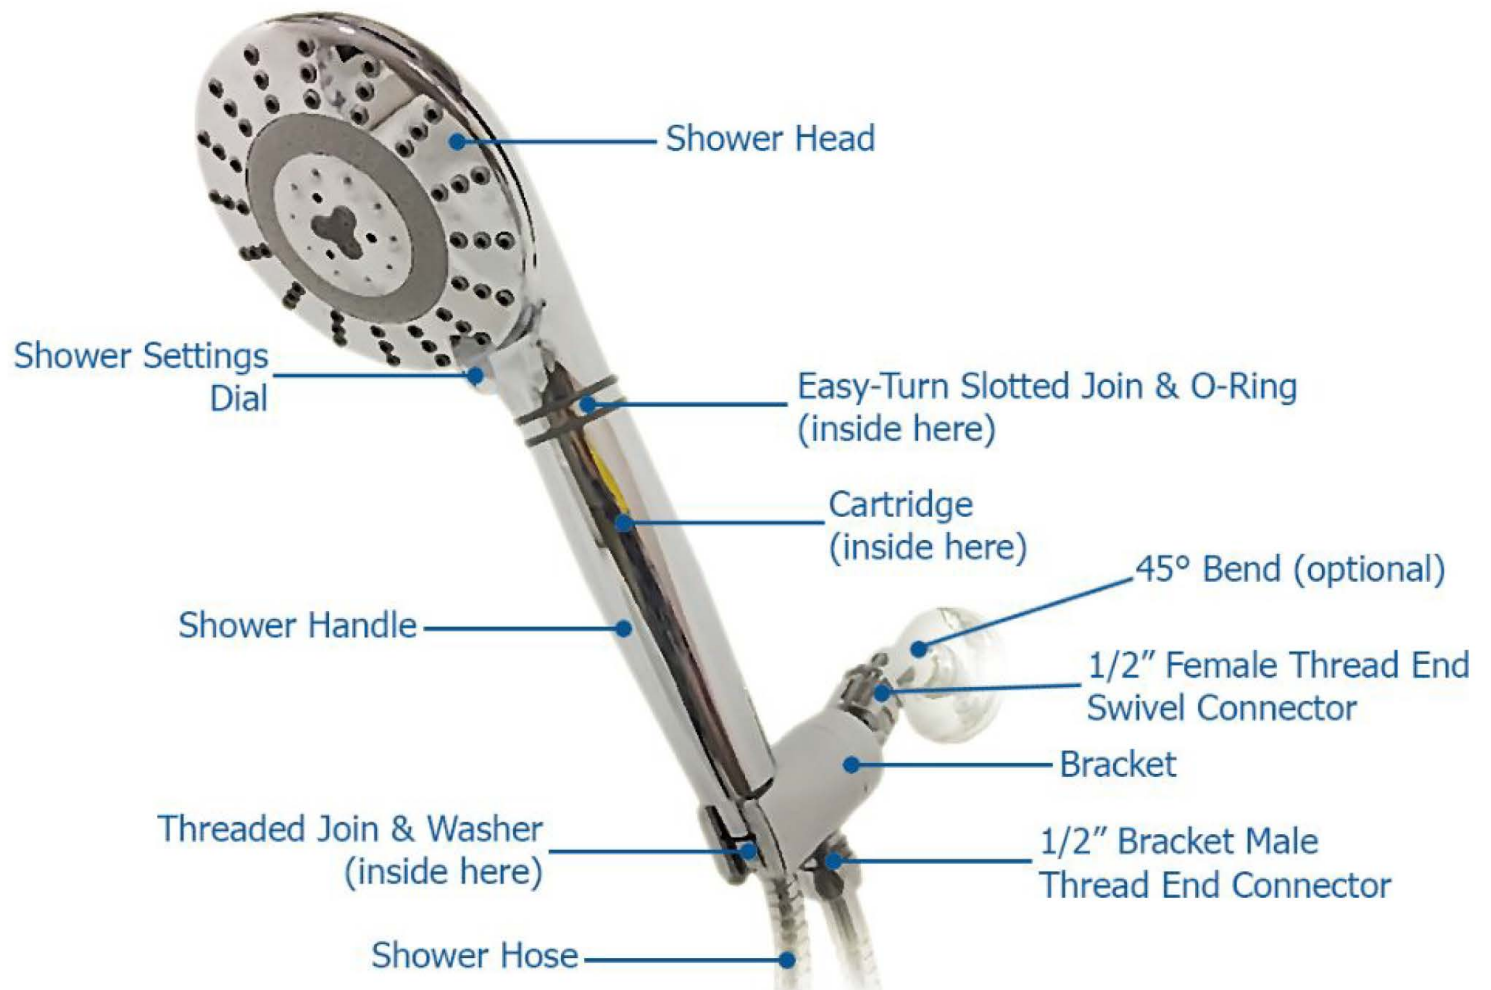

Before you start

Things you will need:

✓ Spanner ✓ Threaded Tape ✓ Towel

1

Take some time to clear any items out of the way to ensure you have a safe, clear area to install the shower filter. Ensure there are no trip hazards or anything that can create harm in the work area.

2

Unpack and check that you have received your product in good condition. If it has been damaged in transit, please do not attempt to install or assemble the unit. Alert us immediately or as soon as possible, so we can provide the necessary assistance.

3

Fold a towel in half & place down on the shower area floor, so if you drop something like an adjustable wrench or a spanner, it's not going to break the tile.

Easy Installation Guide



[CLICK HERE TO WATCH THE VIDEO](#)

INSTALLATION


- 1.** Remove your existing shower head, arm or hose from the shower supply pipe.



2. Make sure the shower supply pipe is clean and dry. If there are any old thread tape residues, take the thread tape off, then give it a wipe.



3. Wrap the thread tape in a clockwise direction around the shower supply pipe. Make sure to wrap it in the same direction, how you would screw your shower filter on to ensure you are not unwinding the thread tape as you screw on the shower filter. Avoid wrapping the center of the water pipe as that will block the hole. 6 full turns of thread tape should be sufficient.

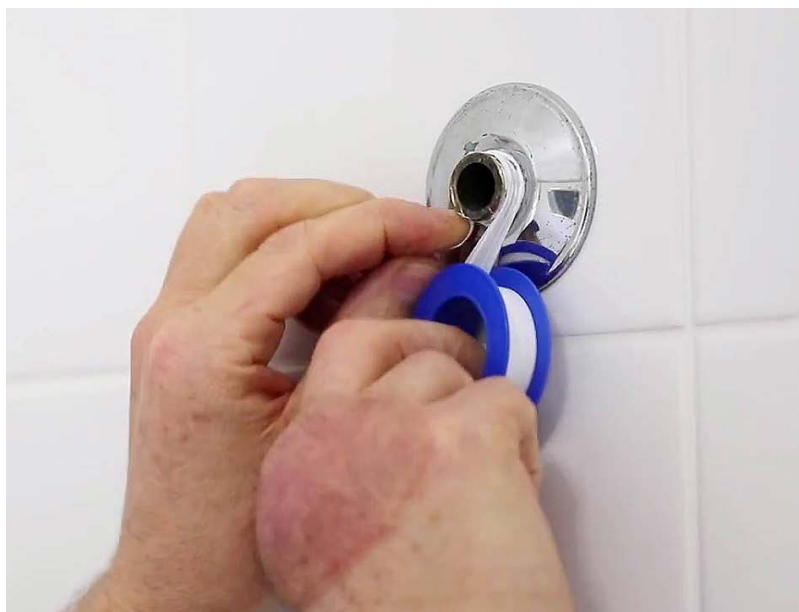

4. Screw the ½ inch female thread of the shower bracket holder onto the shower supply pipe on the wall and hand tighten. Please do not overtighten as the rubber washer inside might get squashed and this will result with a water flow restriction.



5. Use a tool or spanner to tighten firmly and secure in the right position, so the ½" male thread connection is pointing straight down.

6. Get the hose and remove the plastic caps from each end of the hose connectors.



7. Insert the 1 x rubber washer into each shower hose end connector. This will prevent water from leaking out of the connector.



8. Attach the hexagonal hose end connector onto the ½" male thread connector of the shower bracket and hand tighten. Use a tool or a spanner to tighten firmly. Please do not overtighten as the rubber washer inside might get squashed and this will result with a water flow restriction. If there's leakage, you can apply thread tape to the ½" male thread of the shower bracket.




9. Remove the protector sticker from the ½” male end thread of the shower filter handle. Connect the remaining shower hose end connector onto the ½” male threaded connector of the shower handle. Make sure it’s tight to avoid leaking. However, avoid over tightening, as this might damage the threads of the shower handle.



10. Place the hand held shower filter handle into the bracket. Tilt the handle to the preferred angle gently.



NOTE: Depending on the height of your shower supply pipe, if you require the shower head to be pointed down lower, you may need to attach a 45° bend as shown in the image.

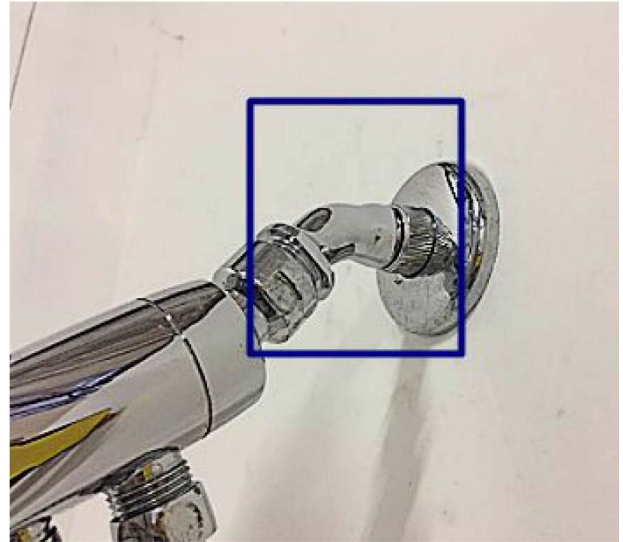

11. Once installed, hold an empty bucket under the shower head as you slowly turn the cold water on, allow the black colored carbon water to flow into the bucket until the black water turns clear again. Please note all carbon filters can emit black water from the carbon fines inside the filter when first used. Let it flow for a few seconds until the water has turned clear, adjust the temperature up to a normal shower temperature.

12. Turn off the shower until required.

Installation Time: 15 Min

How to Change Cartridges:



[CLICK HERE TO WATCH THE VIDEO](#)

1. Remove the hand held shower filter out of the shower bracket. Hold the shower head while twisting the handle just a few centimetres to the left to unlock. There is a unlock sign on the shower head which shows the locked & unlocked positions.



2. Gently pull the handle from the head to expose the cartridge inside.



3. Pull the cartridge out of the handle. Discard the old cartridge in the rubbish bin.



4. Get the new cartridge and insert it into the shower handle. The cartridge is reversible and can go in any way. Insert the shower handle back into the showerhead, make sure the slots on the shower handle are in line with the pegs in the shower head. Push gently and twist to the right to lock. For optimum performance, you can reverse the cartridge every 3 months.



5. Replace the hand held shower filter handle back into the bracket. Gently tilt the handle to the preferred angle.



6. Once the cartridge has been replaced, hold an empty bucket under the shower head as you slowly turn the cold water on, allow the black colored carbon water to flow into the bucket until the black water turns clear again. Please note all carbon filters can emit black water from the carbon fines inside the filter when first used. Let it flow for a few seconds until the water has turned clear, adjust the temperature up to a normal shower temperature.

7. Turn off the shower until required.

Cartridge Replacement: 5 Min



My Water Filter

Create The Best Water You Can

Having Troubles with your system.

Call us at 1800-769-300

My Water Filter Pty Ltd