

kirei

EchoTile Barcode Pattern Installation Guides

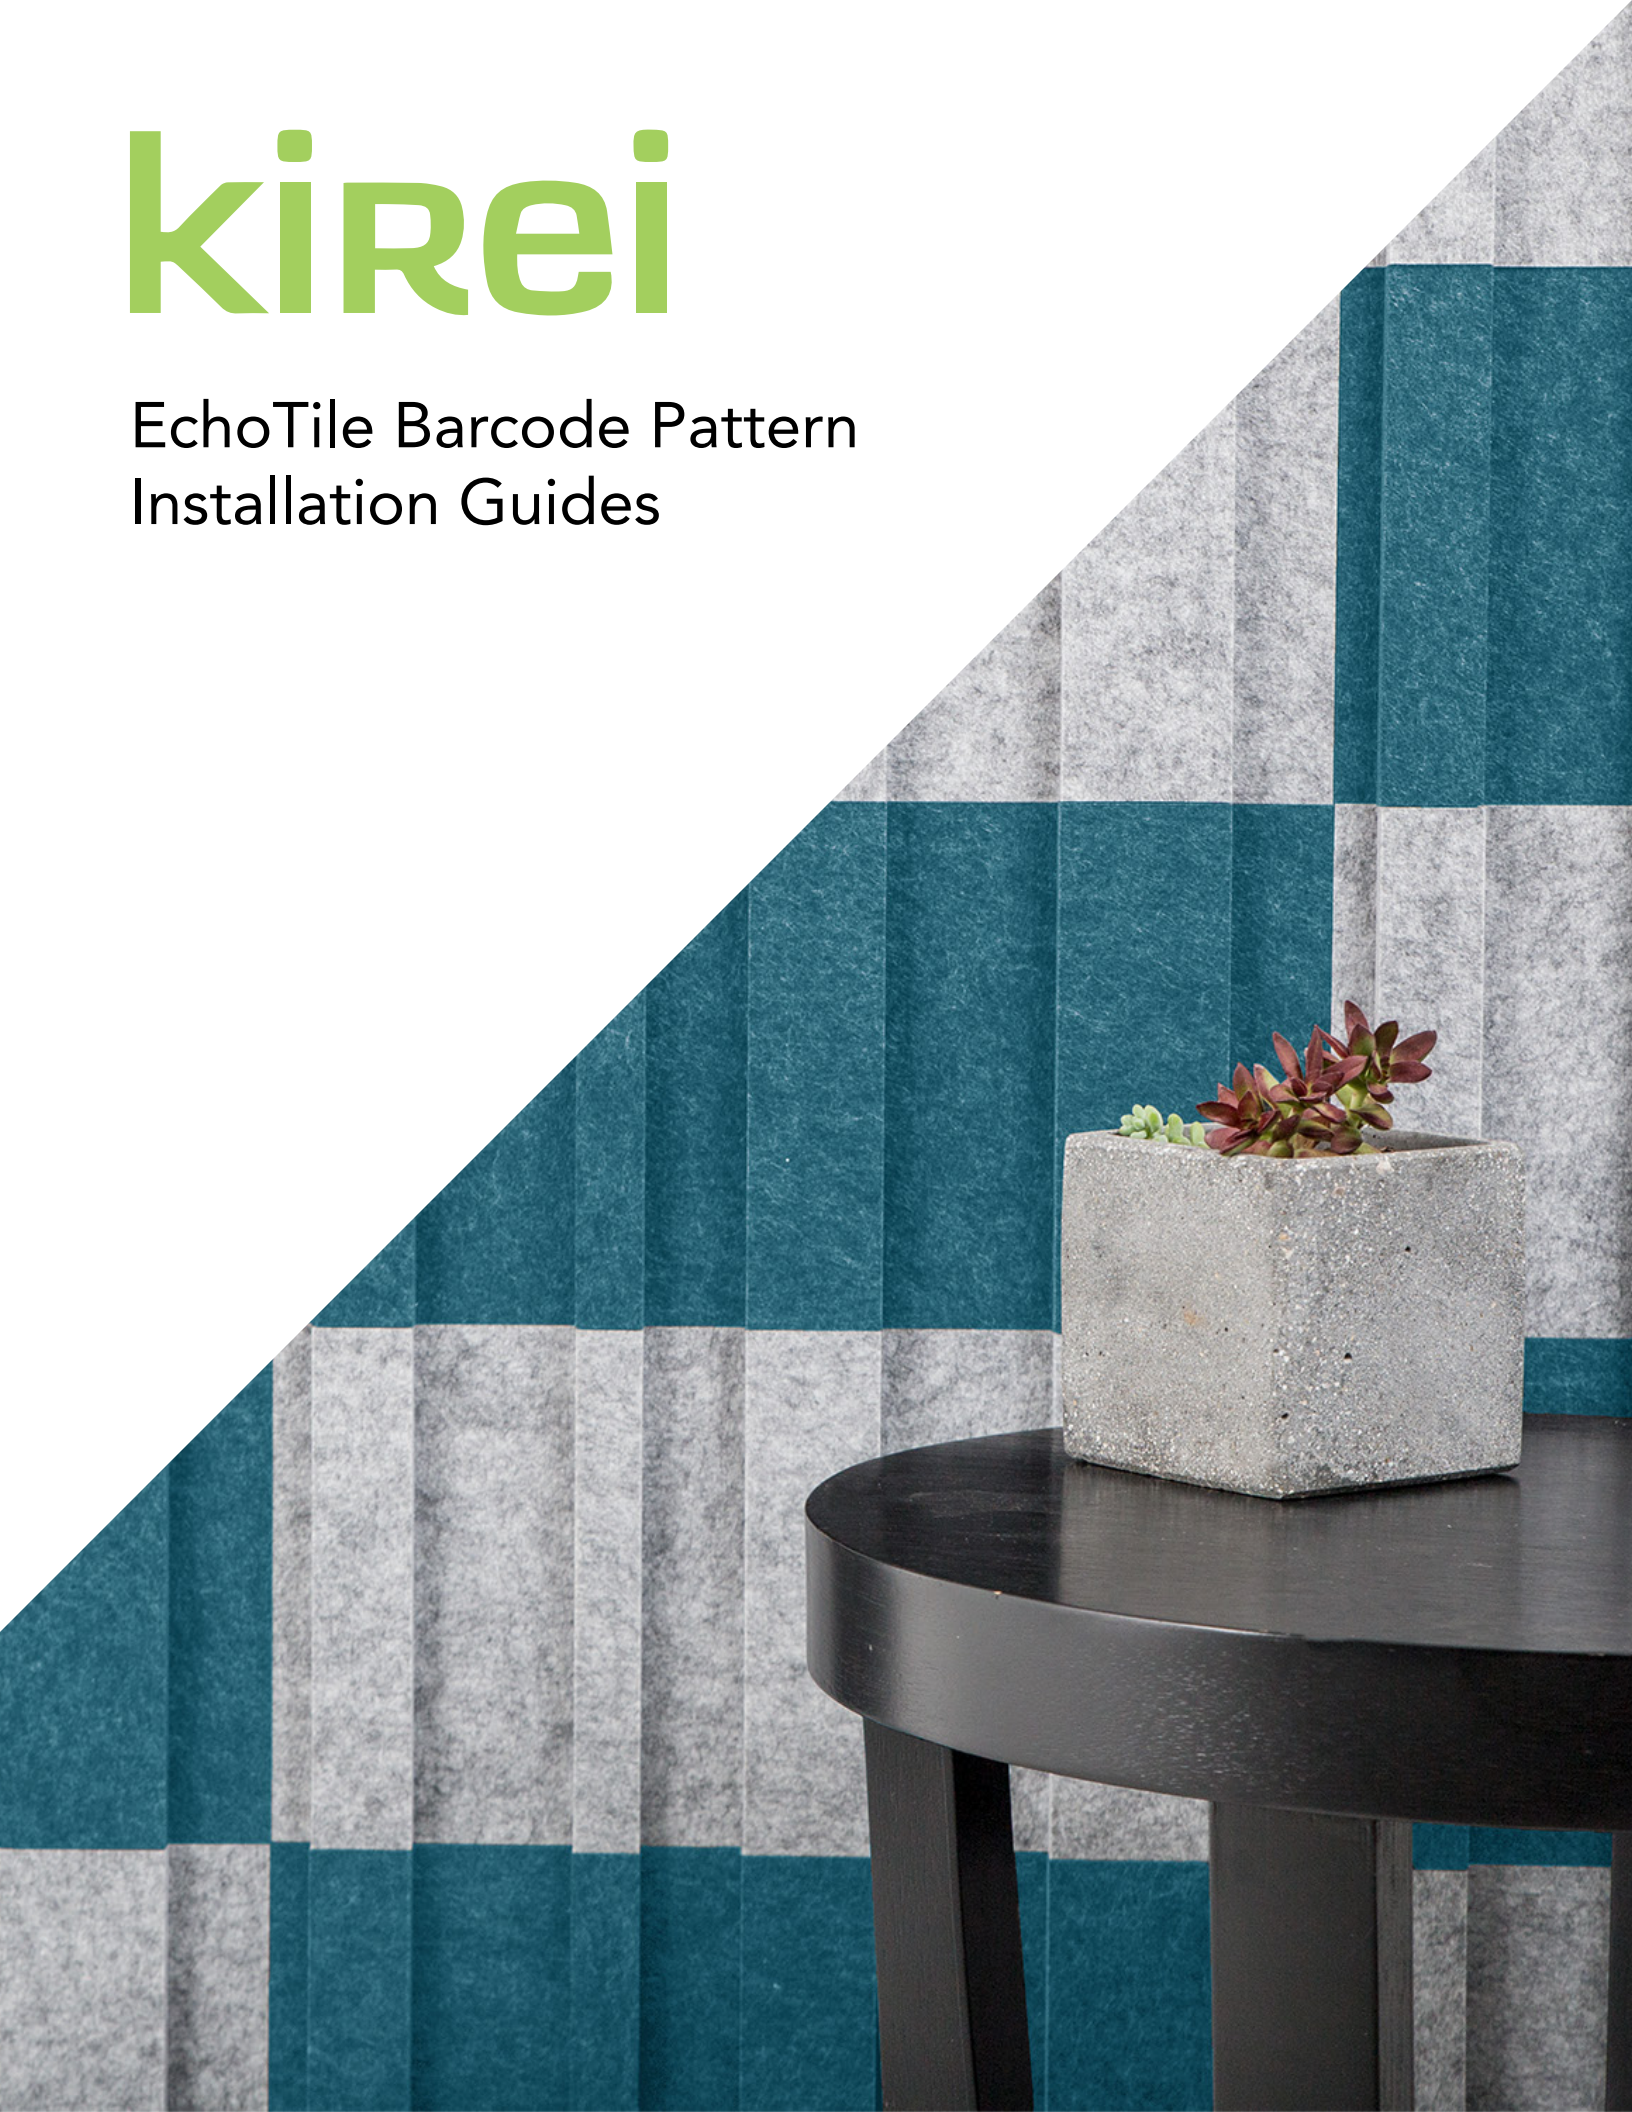


Table of Contents

1. [EchoTile Barcode Tile Installation](#)
2. [EchoTile Barcode Band](#)
3. [EchoTile Barcode Ex](#)
4. [EchoTile Barcode Checker](#)
5. [EchoTile Barcode Stripe](#)
6. [EchoTile Barcode Column](#)



EchoTile Barcode Installation Guide

What's included in a box:

- 12 Barcode Tiles
- 1 bag of 70 adhesive tabs

Tools needed (not included):

- Level
- Measuring Tape
- Pencil

Notes: Adhesive tabs may pull finish or paint off of the wall when removed. It is not recommended to use adhesive tabs on wood, brick, or other textured surfaces. Construction adhesive is recommended for installation on textured surfaces, ceilings, and high traffic areas. Adhesive tabs are not reusable. If a tile was placed incorrectly, re-apply the tile to the surface using a new set of adhesive tabs.

Tiles are cut on a grain and can reflect light differently, looking slightly lighter or darker depending on placement. When applying the tiles, ensure the color of the tiles complements your light source. Rotate the tile if color varies from the adjacent tile.


[Click here to see a list of all the Barcode Tile Patterns](#)

Installation

Barcode Tiles require (5) 1"x1" adhesive tabs per tile for proper mounting and installation. Easy peel tabs have the same amount of adhesive on each side and will adhere to painted surfaces, dry wall, or smooth cement. Order extra adhesive tabs at www.store.kireiusa.com.


How to apply easy peel adhesive tabs:

1

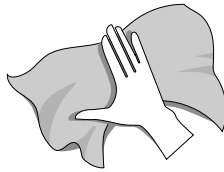


Clean the wall surface of application by wiping with a damp cloth or wet rag. Do not apply tiles to the surface until it is completely dry.

2

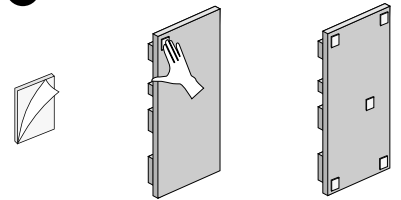


Peel off one side of the adhesive tab. Place tab on tile and press firmly for 20 seconds. Repeat this step for all designated tab placements, as shown on the tile above.

3

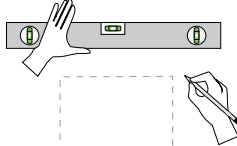


Use a level to align the first tile, and mark the wall.

4




Peel off the other side of the adhesive tabs.

5



Press the tile firmly to the wall surface for 20 seconds. It is very important that the first tile is placed correctly.

6

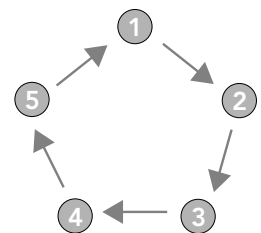

Repeat steps 1-5 for all tiles. Ensure that each tile properly aligns with previous tiles.



EchoTile Barcode Band Installation Guide

What's included in a box:

- **Opt 1)** 12 Navy
12 Pacific
12 Speckled Gray
- **Opt 2)** 12 Wine
12 Pacific
12 Speckled Gray
- **Opt 3)** 12 Navy
12 Pacific
12 Mushroom
- 3 bags of 70 adhesive tabs


Tools needed (not included):

- Level
- Measuring Tape
- Pencil


Notes: Adhesive tabs may pull finish or paint off of the wall when removed. It is not recommended to use adhesive tabs on wood, brick, or other textured surfaces. Construction adhesive is recommended for installation on textured surfaces, ceilings, and high traffic areas. Adhesive tabs are not reusable. If a tile was placed incorrectly, re-apply the tile to the surface using a new set of adhesive tabs.

Tiles are cut on a grain and can reflect light differently, looking slightly lighter or darker depending on placement. When applying the tiles, ensure the color of the tiles complements your light source. Rotate the tile if color varies from the adjacent tile.


[Click here to view the Barcode Tile Installation Guide](#)

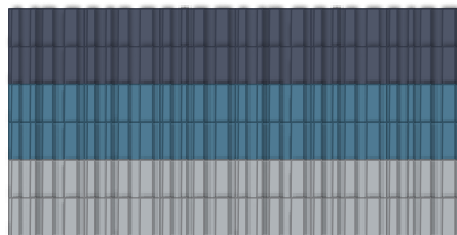

Option 1: Barcode Cool Serenity
Navy, Pacific, and Speckled Gray

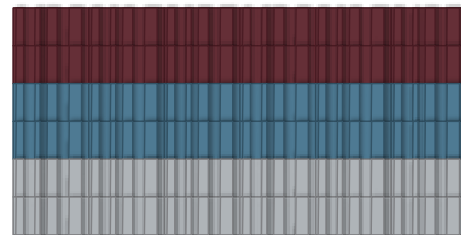

Option 2: Barcode Iron & Wine
Wine, Pacific, and Speckled Gray

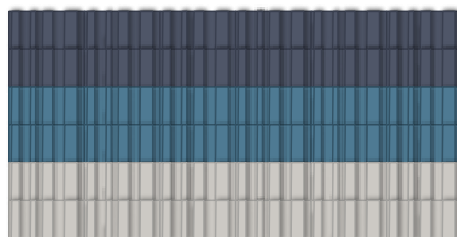

Option 3: Barcode Coastline
Navy, Pacific, and Mushroom

Installation

Barcode Tiles require (5) 1"x1" adhesive tabs per tile for proper mounting and installation. Easy peel tabs have the same amount of adhesive on each side and will adhere to painted surfaces, dry wall, or smooth cement. Patterns are made to be repeatable. If more tiles are desired visit us at www.store.kireiusa.com to purchase another pattern bundle or extra adhesive tabs.

How to apply adhesive tabs and install tiles:

1. Clean the wall surface of application by wiping with a damp cloth or wet rag. Do not apply tiles to the surface until it is completely dry.
2. Peel off one side of the adhesive tab. Place tab on tile and press firmly for 20 seconds. Repeat this step for all designated tab placements.
3. Measure out and mark all pattern edges on the wall for desired placement. Use a level to align the first tile.
4. Begin installing with the bottom left corner of the pattern and work your way up and right.
6. Peel off the other side of the adhesive tabs.
7. Press the tile firmly to the wall surface for 20 seconds. It is very important that the first tile is placed correctly.
8. Repeat steps 1-5 for all tiles. Ensure that each tile properly aligns with previous tiles.



EchoTile Barcode Ex Installation Guide

What's included in a box:

- **Opt 1)** 12 Navy
12 Pacific
12 Speckled Gray
- **Opt 2)** 12 Wine
12 Pacific
12 Speckled Gray
- **Opt 3)** 12 Navy
12 Pacific
12 Mushroom
- 3 bags of 70 adhesive tabs


Tools needed (not included):

- Level
- Measuring Tape
- Pencil


Notes: Adhesive tabs may pull finish or paint off of the wall when removed. It is not recommended to use adhesive tabs on wood, brick, or other textured surfaces. Construction adhesive is recommended for installation on textured surfaces, ceilings, and high traffic areas. Adhesive tabs are not reusable. If a tile was placed incorrectly, re-apply the tile to the surface using a new set of adhesive tabs.

Tiles are cut on a grain and can reflect light differently, looking slightly lighter or darker depending on placement. When applying the tiles, ensure the color of the tiles complements your light source. Rotate the tile if color varies from the adjacent tile.


[Click here to view the Barcode Tile Installation Guide](#)

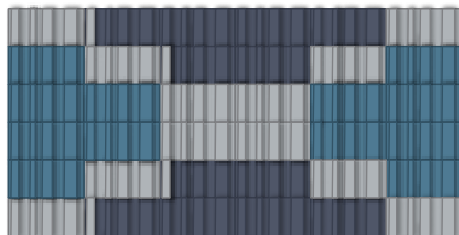

Option 1: Barcode Cool Serenity
Navy, Pacific, and Speckled Gray

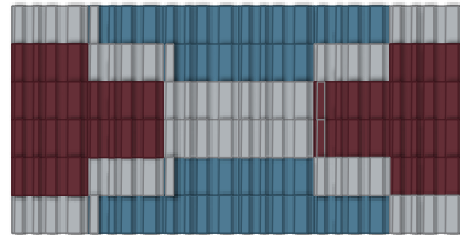

Option 2: Barcode Iron & Wine
Wine, Pacific, and Speckled Gray

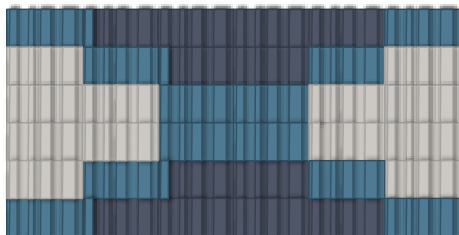

Option 3: Barcode Coastline
Navy, Pacific, and Mushroom

Installation

Barcode Tiles require (5) 1"x1" adhesive tabs per tile for proper mounting and installation. Easy peel tabs have the same amount of adhesive on each side and will adhere to painted surfaces, dry wall, or smooth cement. Patterns are made to be repeatable. If more tiles are desired visit us at www.store.kireiusa.com to purchase another pattern bundle or extra adhesive tabs.

How to apply adhesive tabs and install tiles:

1. Clean the wall surface of application by wiping with a damp cloth or wet rag. Do not apply tiles to the surface until it is completely dry.
2. Peel off one side of the adhesive tab. Place tab on tile and press firmly for 20 seconds. Repeat this step for all designated tab placements.
3. Measure out and mark all pattern edges on the wall for desired placement. Use a level to align the first tile.
4. Begin installing with the bottom left corner of the pattern and work your way up and right.
6. Peel off the other side of the adhesive tabs.
7. Press the tile firmly to the wall surface for 20 seconds. It is very important that the first tile is placed correctly.
8. Repeat steps 1-5 for all tiles. Ensure that each tile properly aligns with previous tiles.



EchoTile Barcode Checker Installation Guide

What's included in a box:

- **Opt 1)** 12 Navy
12 Pacific
- **Opt 2)** 12 Wine
12 Speckled Gray
- **Opt 3)** 12 Pacific
12 Mushroom
- 2 bags of 70 adhesive tabs


Tools needed (not included):

- Level
- Measuring Tape
- Pencil


Notes: Adhesive tabs may pull finish or paint off of the wall when removed. It is not recommended to use adhesive tabs on wood, brick, or other textured surfaces. Construction adhesive is recommended for installation on textured surfaces, ceilings, and high traffic areas. Adhesive tabs are not reusable. If a tile was placed incorrectly, re-apply the tile to the surface using a new set of adhesive tabs.

Tiles are cut on a grain and can reflect light differently, looking slightly lighter or darker depending on placement. When applying the tiles, ensure the color of the tiles complements your light source. Rotate the tile if color varies from the adjacent tile.


[Click here to view the Barcode Tile Installation Guide](#)

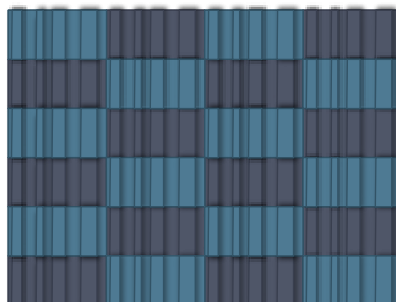

Option 1: Barcode Cool Serenity
Navy and Pacific

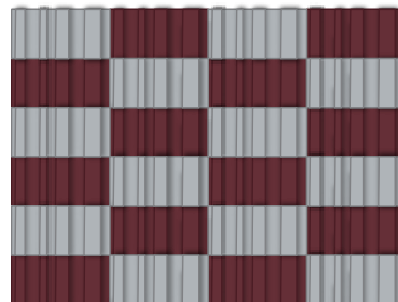

Option 2: Barcode Iron & Wine
Wine and Speckled Gray

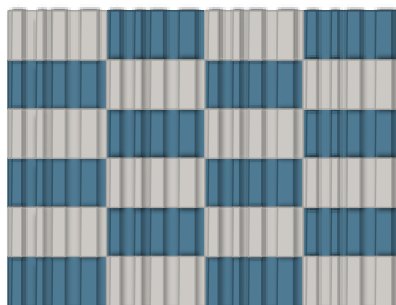

Option 3: Barcode Cool Serenity
Pacific and Mushroom

Installation

Barcode Tiles require (5) 1"x1" adhesive tabs per tile for proper mounting and installation. Easy peel tabs have the same amount of adhesive on each side and will adhere to painted surfaces, dry wall, or smooth cement. Patterns are made to be repeatable. If more tiles are desired visit us at www.store.kireiusa.com to purchase another pattern bundle or extra adhesive tabs.

How to apply adhesive tabs and install tiles:

1. Clean the wall surface of application by wiping with a damp cloth or wet rag. Do not apply tiles to the surface until it is completely dry.
2. Peel off one side of the adhesive tab. Place tab on tile and press firmly for 20 seconds. Repeat this step for all designated tab placements.
3. Measure out and mark all pattern edges on the wall for desired placement. Use a level to align the first tile.
4. Begin installing with the bottom left corner of the pattern and work your way up and right.
6. Peel off the other side of the adhesive tabs.
7. Press the tile firmly to the wall surface for 20 seconds. It is very important that the first tile is placed correctly.
8. Repeat steps 1-5 for all tiles. Ensure that each tile properly aligns with previous tiles.



EchoTile Barcode Stripe Installation Guide

What's included in a box:

- **Opt 1)** 12 Pacific
12 Speckled Gray
- **Opt 2)** 12 Wine
12 Pacific
- **Opt 3)** 12 Pacific
12 Mushroom
- 2 bags of 70 adhesive tabs


Tools needed (not included):

- Level
- Measuring Tape
- Pencil


Notes: Adhesive tabs may pull finish or paint off of the wall when removed. It is not recommended to use adhesive tabs on wood, brick, or other textured surfaces. Construction adhesive is recommended for installation on textured surfaces, ceilings, and high traffic areas. Adhesive tabs are not reusable. If a tile was placed incorrectly, re-apply the tile to the surface using a new set of adhesive tabs.

Tiles are cut on a grain and can reflect light differently, looking slightly lighter or darker depending on placement. When applying the tiles, ensure the color of the tiles complements your light source. Rotate the tile if color varies from the adjacent tile.


[Click here to view the Barcode Tile Installation Guide](#)

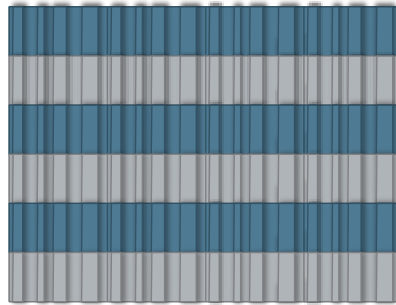

Option 1: Barcode Cool Serenity
Pacific and Speckled Gray

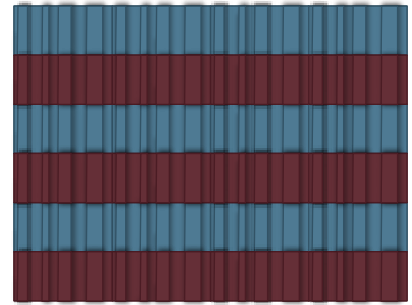

Option 2: Barcode Iron & Wine
Pacific and Wine

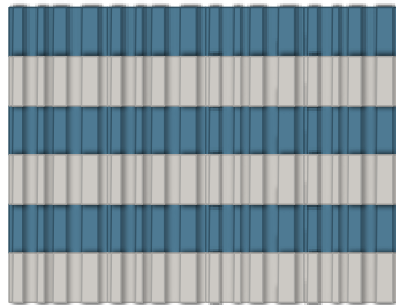

Option 3: Barcode Cool Serenity
Pacific and Mushroom

Installation

Barcode Tiles require (5) 1"x1" adhesive tabs per tile for proper mounting and installation. Easy peel tabs have the same amount of adhesive on each side and will adhere to painted surfaces, dry wall, or smooth cement. Patterns are made to be repeatable. If more tiles are desired visit us at www.store.kireiusa.com to purchase another pattern bundle or extra adhesive tabs.

How to apply adhesive tabs and install tiles:

1. Clean the wall surface of application by wiping with a damp cloth or wet rag. Do not apply tiles to the surface until it is completely dry.
2. Peel off one side of the adhesive tab. Place tab on tile and press firmly for 20 seconds. Repeat this step for all designated tab placements.
3. Measure out and mark all pattern edges on the wall for desired placement. Use a level to align the first tile.
4. Begin installing with the bottom left corner of the pattern and work your way up and right.
6. Peel off the other side of the adhesive tabs.
7. Press the tile firmly to the wall surface for 20 seconds. It is very important that the first tile is placed correctly.
8. Repeat steps 1-5 for all tiles. Ensure that each tile properly aligns with previous tiles.

EchoTile Barcode Column Installation Guide

What's included in a box:

- **Opt 1)** 12 Pacific
12 Navy
- **Opt 2)** 12 Speckled Gray
12 Wine
- **Opt 3)** 12 Mushroom
12 Navy
- 2 bags of 70 adhesive tabs


Tools needed (not included):

- Level
- Measuring Tape
- Pencil


Notes: Adhesive tabs may pull finish or paint off of the wall when removed. It is not recommended to use adhesive tabs on wood, brick, or other textured surfaces. Construction adhesive is recommended for installation on textured surfaces, ceilings, and high traffic areas. Adhesive tabs are not reusable. If a tile was placed incorrectly, re-apply the tile to the surface using a new set of adhesive tabs.

Tiles are cut on a grain and can reflect light differently, looking slightly lighter or darker depending on placement. When applying the tiles, ensure the color of the tiles complements your light source. Rotate the tile if color varies from the adjacent tile.


[Click here to view the Barcode Tile Installation Guide](#)

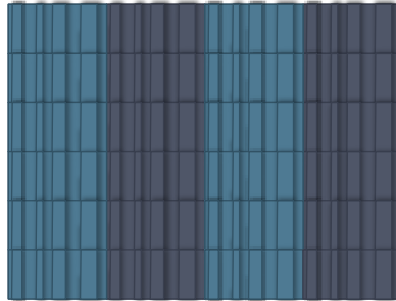

Option 1: Barcode Cool Serenity
Pacific and Navy

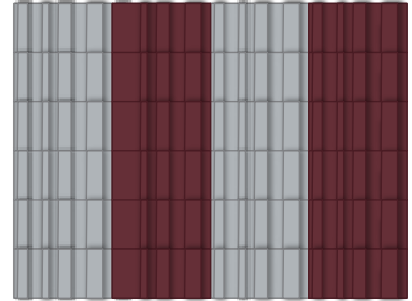

Option 2: Barcode Iron & Wine
Speckled Gray and Wine

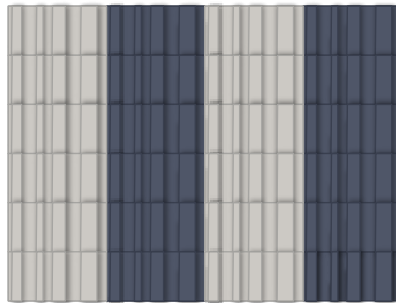

Option 3: Barcode Cool Serenity
Navy and Mushroom

Installation

Barcode Tiles require (5) 1"x1" adhesive tabs per tile for proper mounting and installation. Easy peel tabs have the same amount of adhesive on each side and will adhere to painted surfaces, dry wall, or smooth cement. Patterns are made to be repeatable. If more tiles are desired visit us at www.store.kireiusa.com to purchase another pattern bundle or extra adhesive tabs.

How to apply adhesive tabs and install tiles:

1. Clean the wall surface of application by wiping with a damp cloth or wet rag. Do not apply tiles to the surface until it is completely dry.
2. Peel off one side of the adhesive tab. Place tab on tile and press firmly for 20 seconds. Repeat this step for all designated tab placements.
3. Measure out and mark all pattern edges on the wall for desired placement. Use a level to align the first tile.
4. Begin installing with the bottom left corner of the pattern and work your way up and right.
6. Peel off the other side of the adhesive tabs.
7. Press the tile firmly to the wall surface for 20 seconds. It is very important that the first tile is placed correctly.
8. Repeat steps 1-5 for all tiles. Ensure that each tile properly aligns with previous tiles.