


MUD Defender Tdci/Puma Genuine Switch Mount Fitting Instructions



We recommend removing the steering wheel from the vehicle to provide easier access when installing the switch mount.

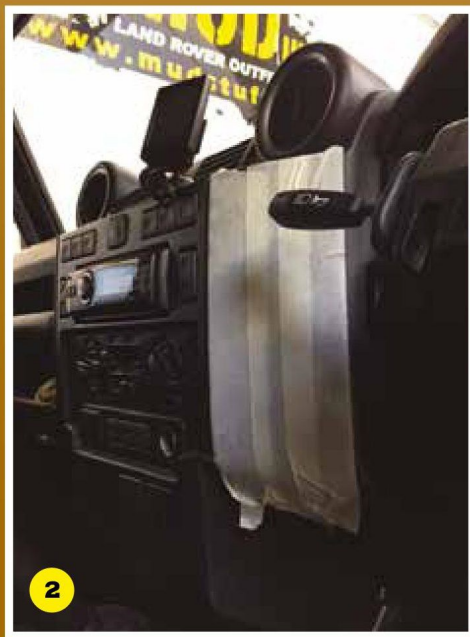

Use masking tape to cover/protect the area that will be cut out of the dashboard.



Align the top edge of the cut-out template a minimum distance of 27mm below the top horizontal edge of the dashboard.



Drill a hole within each corner of the cut-out line large enough to provide access for your saw blade.



Carefully cut out the section of dashboard. This section of dashboard uses a honeycomb construction. You will need to cut deep enough to fully remove the 15mm depth of the honeycomb webs.



Secure the switch panel in place using the 4 x fixing screws provided. Use a 3mm drill for the fixing holes.