


组装示意图

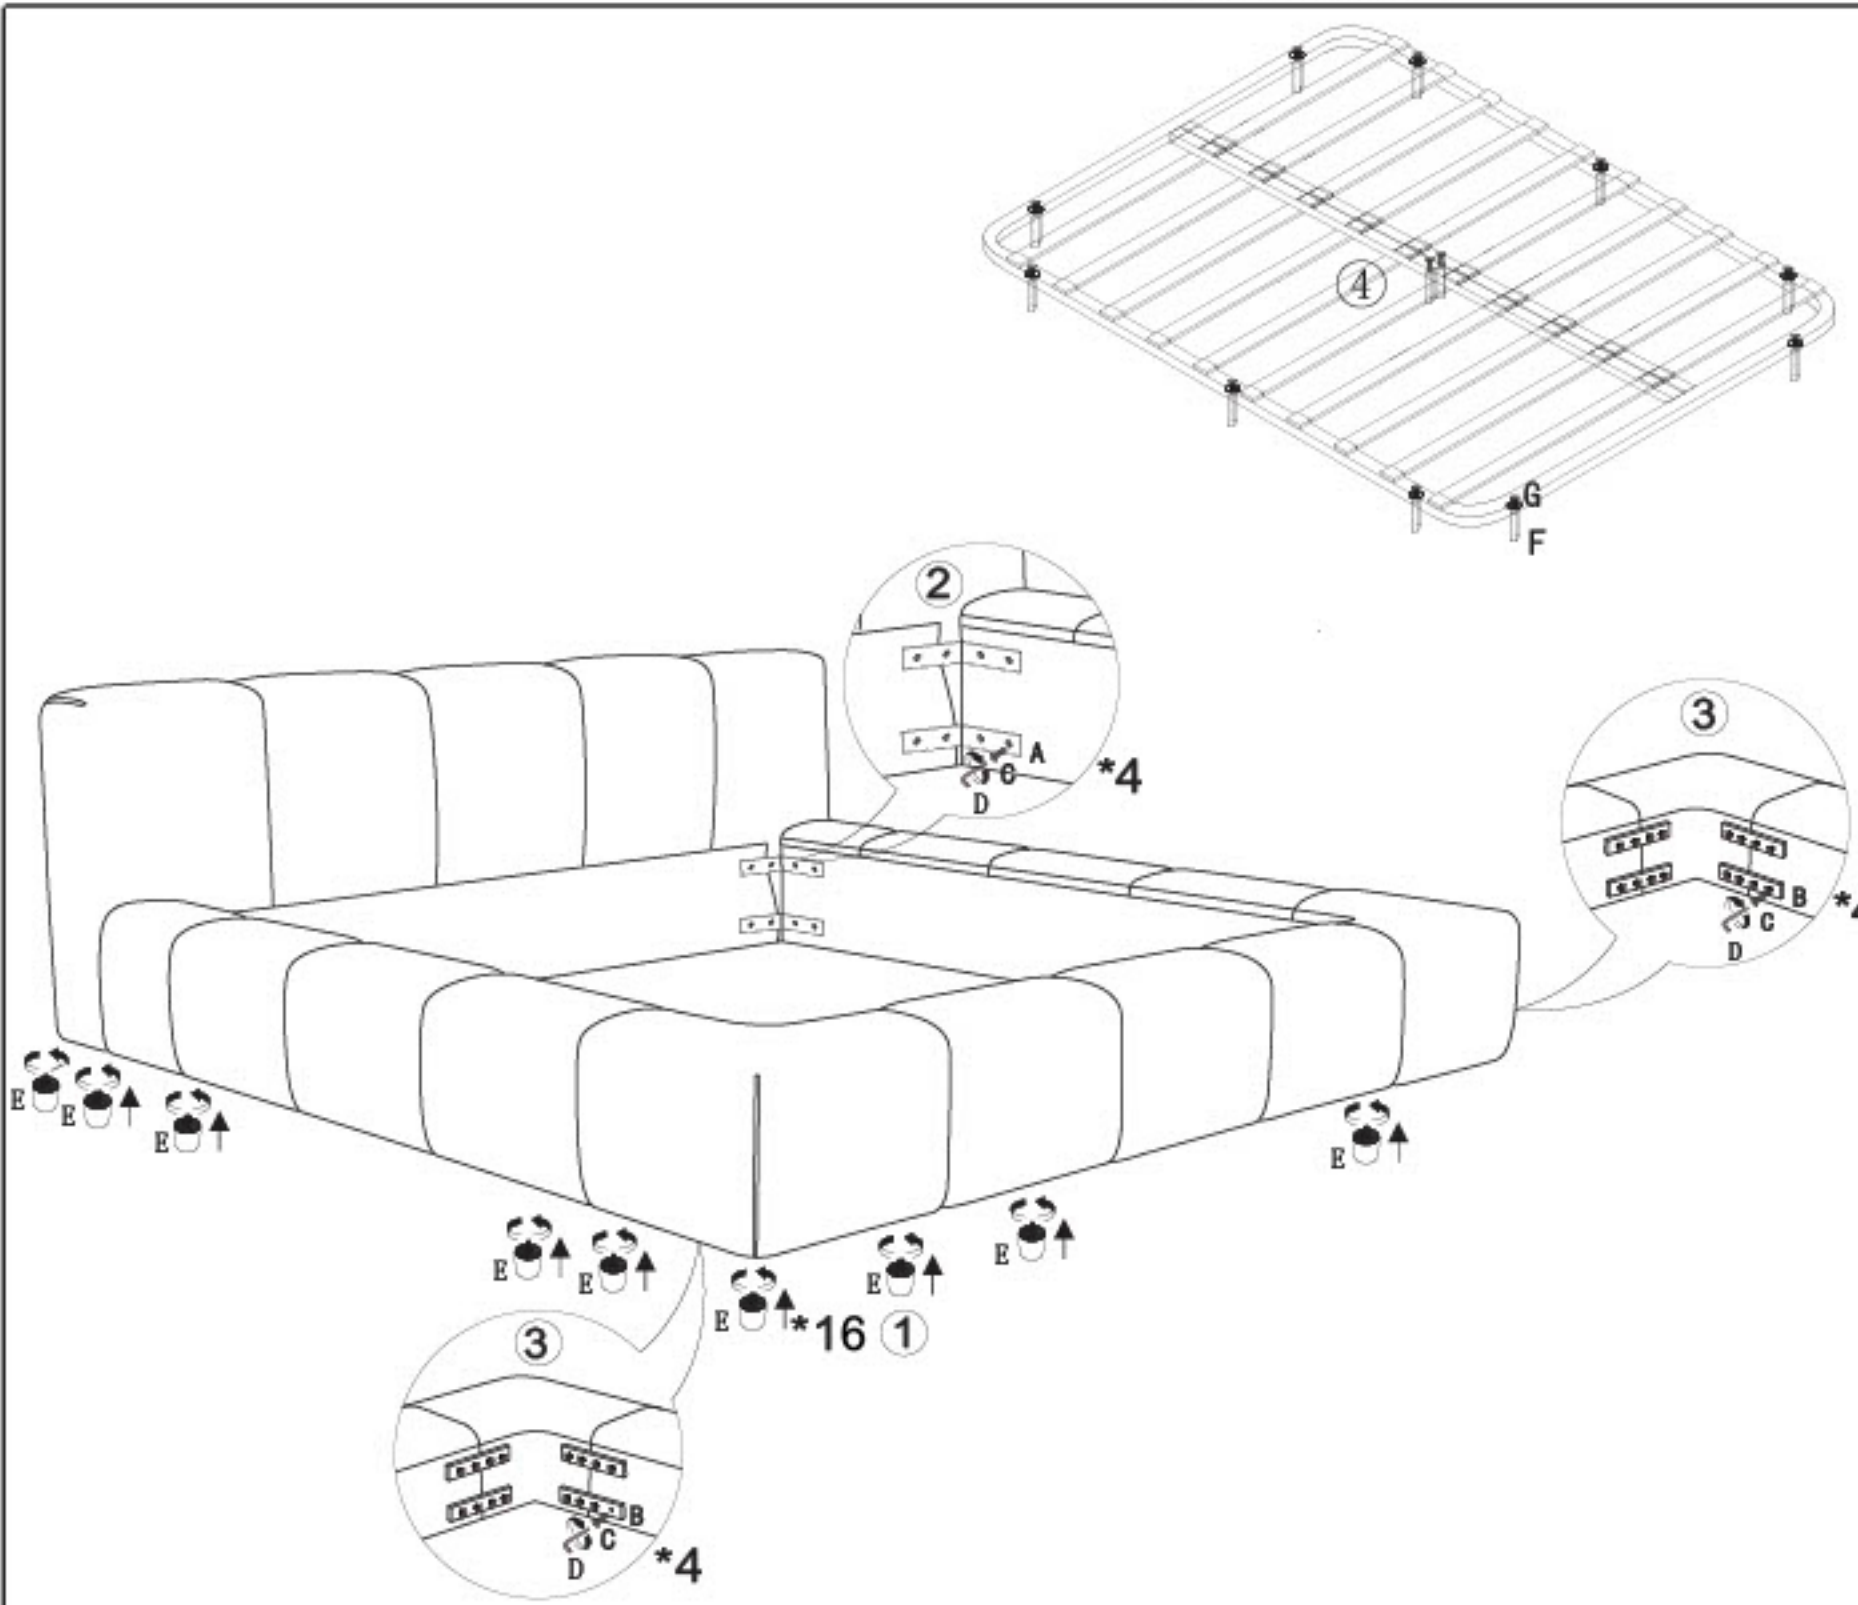

配件代号	数量	配件
A	4 只	A角铁
B	8 只	扁铁
C	48 只	螺杆8*25mm
D	1 只	内六角扳手5#
E	16 只	塑料脚3.3cm
F	12 只	17cm排脚
G	12 只	排脚自带螺杆垫片

普通排骨架用11只排脚
 折叠排骨架用12只排脚

Instructions	
①	Install bed feet E at the head, edge, and tail of the bed
②	Install an A-angle iron with a C-screw to secure the headboard and bedside
③	Install B flat iron with a C screw to secure the edge and tail of the bed
④	Install foot F on the frame using G-screw washers and finally install the frame

床155

货号	KF. B1051
----	-----------