















Accessory code	PCS	Hardware Part
A	4	
B	4	
C	32	
F	12	
G	1	
H	3	
I	6	
L	6	
M	4	
X	1	

Please ensure all parts and hardware are including before getting started.

	KF.B2000
Size	77"*80"


1

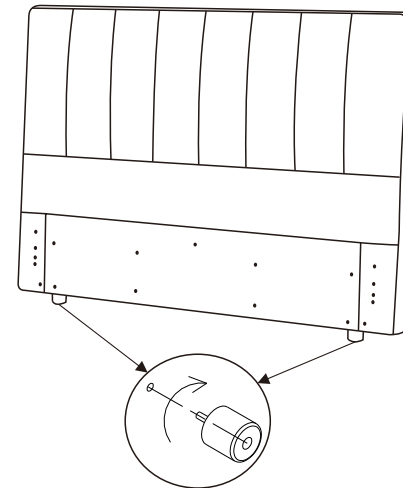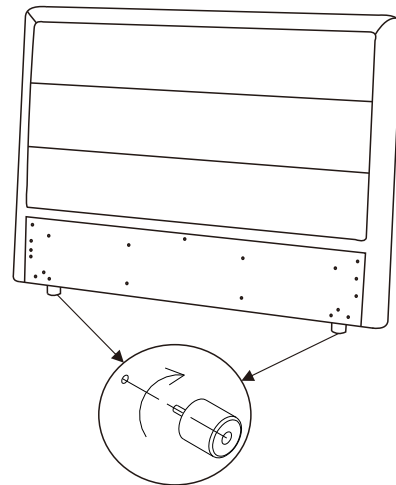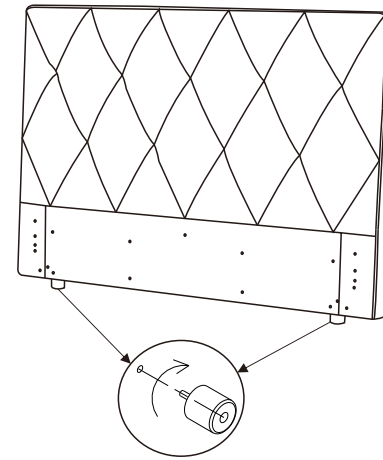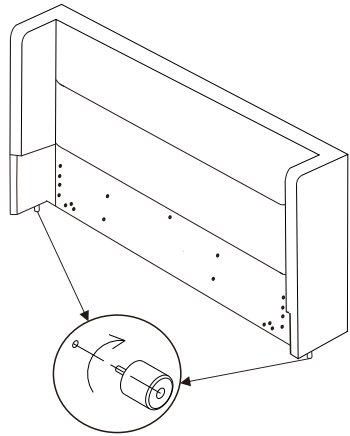

Attach legs to headboard.


	KF.B2000
Size	77"*80"

2

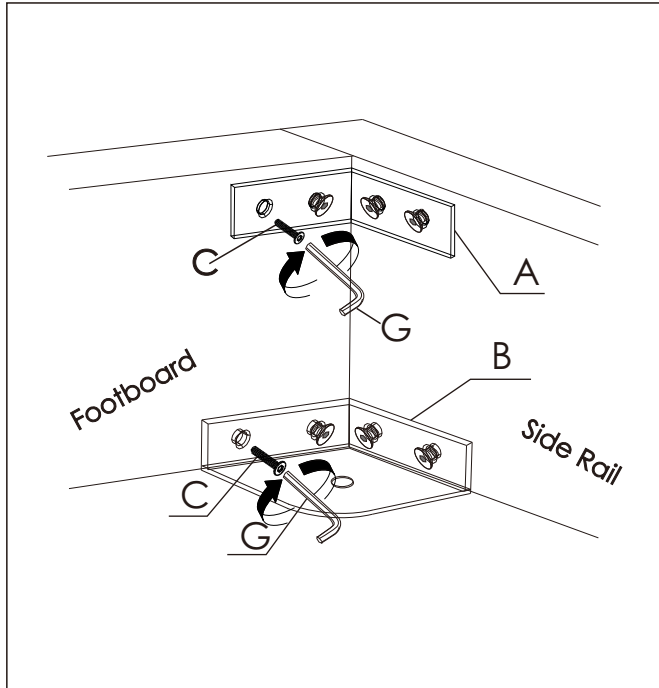


Attach side rails to footboard with part A, B using C bolts.

3

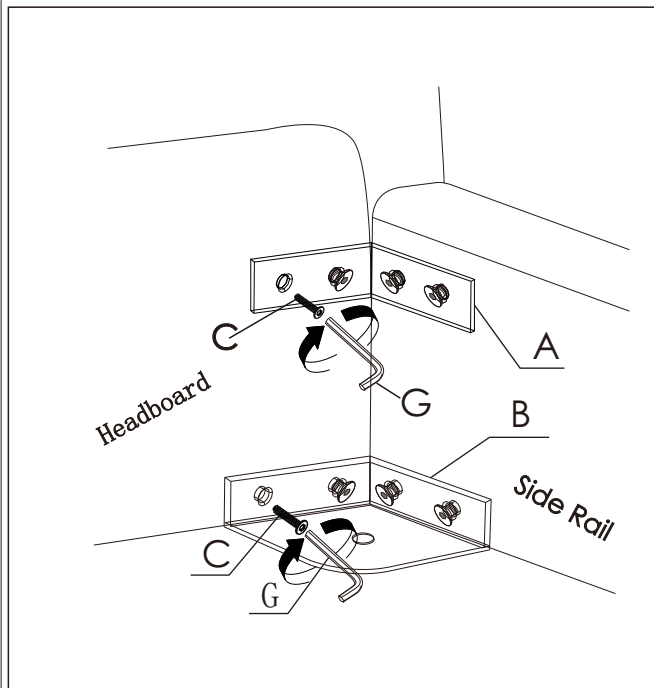


Attach side rails to headboard with part A, B using C bolts.

4

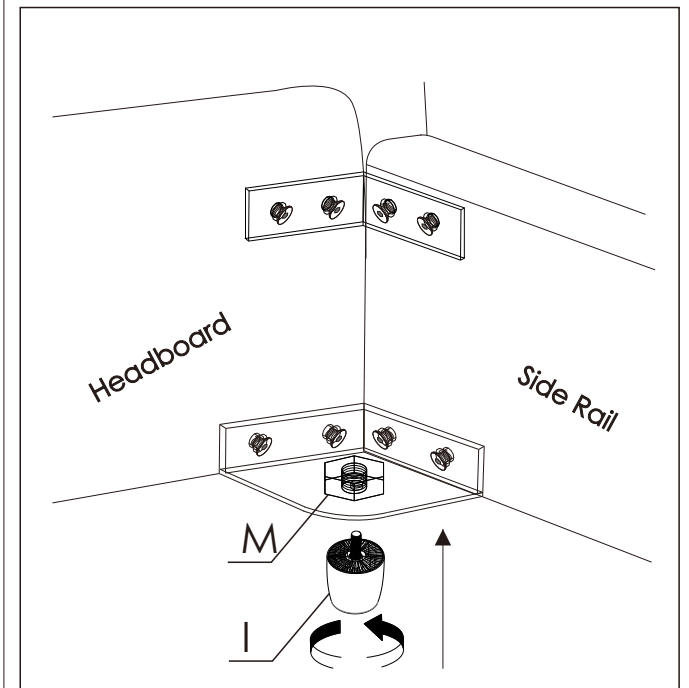


Attach legs to headboard and footboard.


	KF.B2000
Size	77"×80"

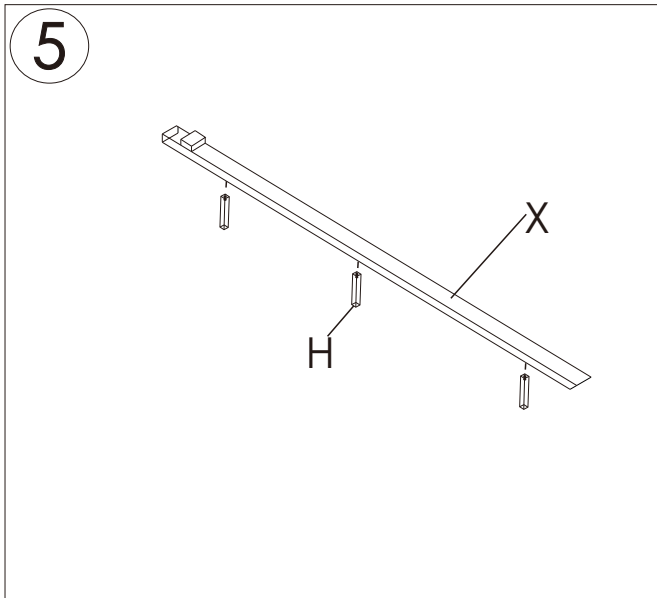

Attach Part H to X.




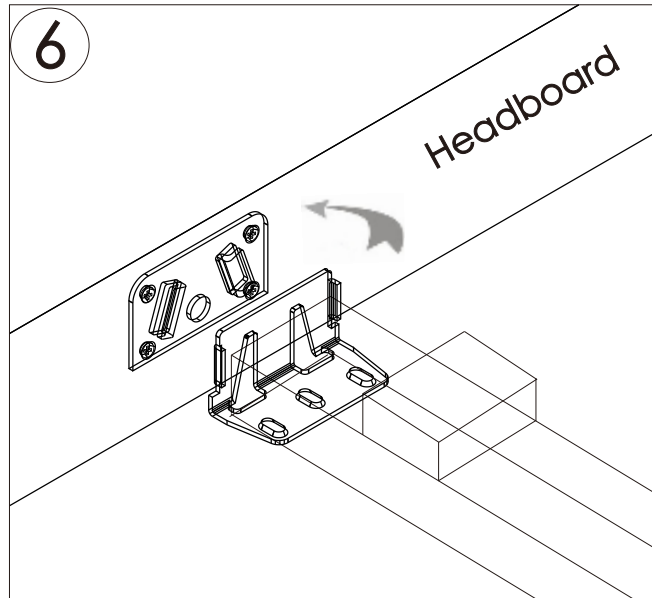


Attach X to headboard & footboard.

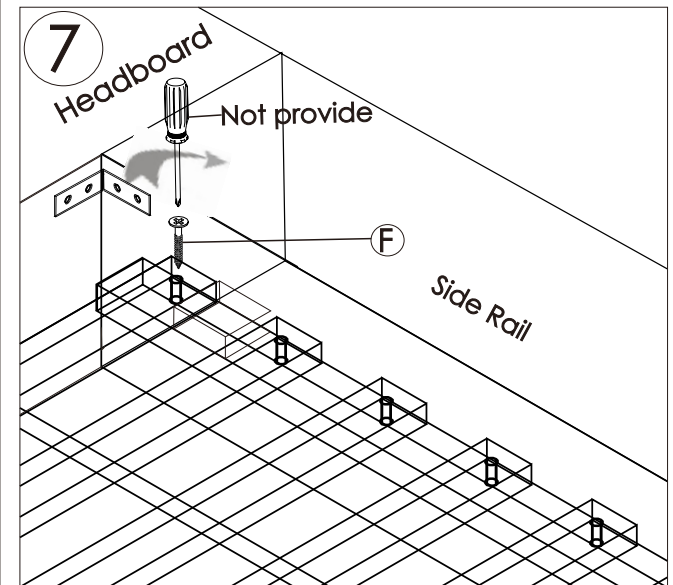

Install slats on bed with Part F.

	KF.B2000
Size	77"×80"

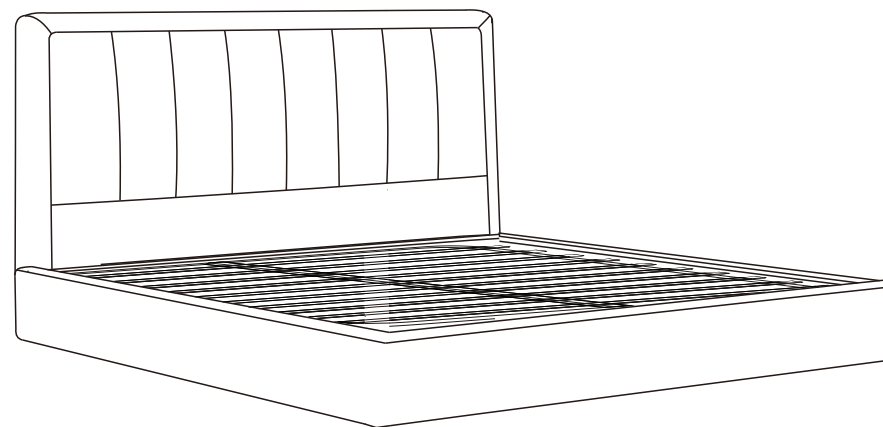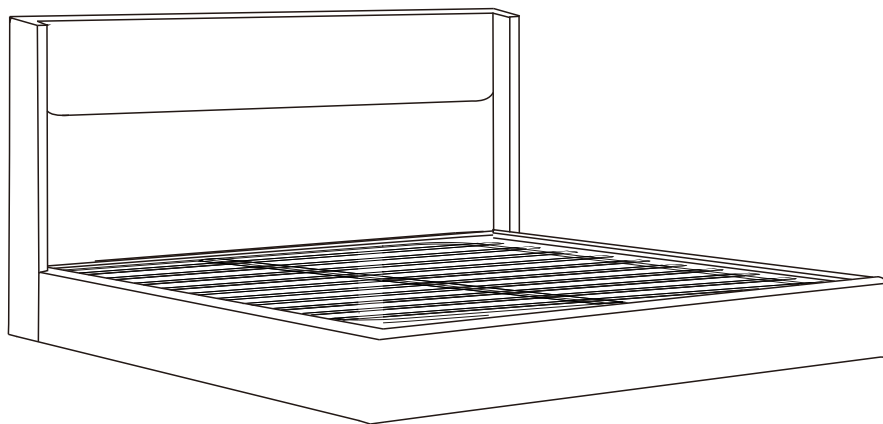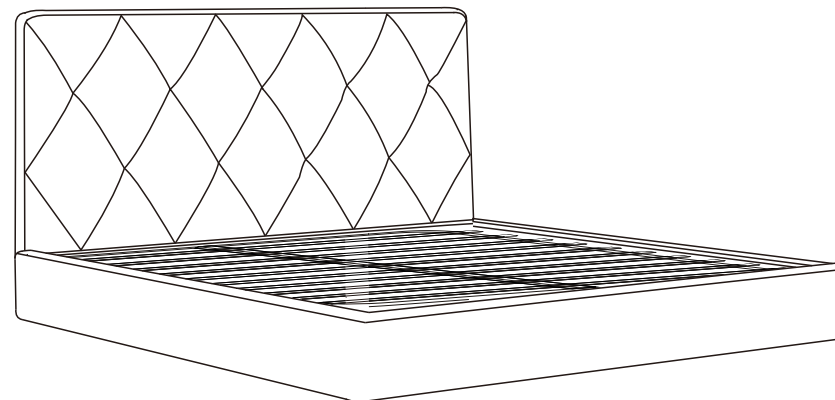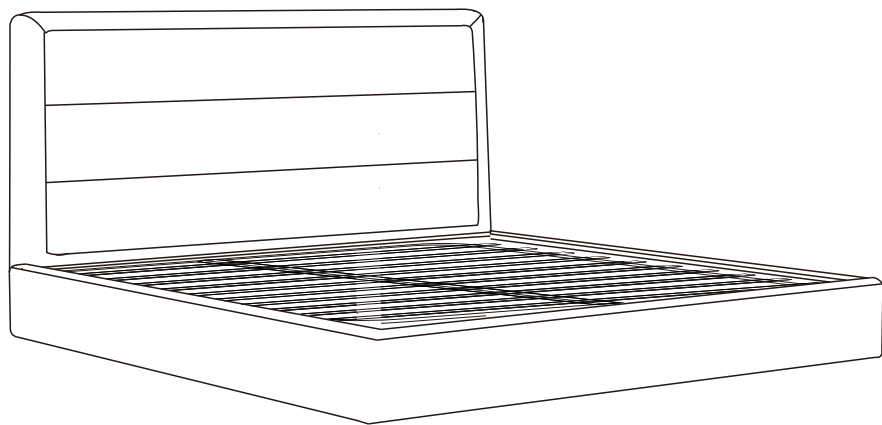

Now you can enjoy your new bed.

	KF.B2000
Size	77"*80"