




TOPSHEET MOUNTED TAIL CONNECTOR

1. Cleaning the Topsheet:
 - a) Working at room temperature, wipe the tail end of the ski or board top sheet with isopropyl alcohol to remove any contaminants.
2. Tail Connector Placement:
 - a) Put your skin on your ski or board to line up where the tail strap holes fall

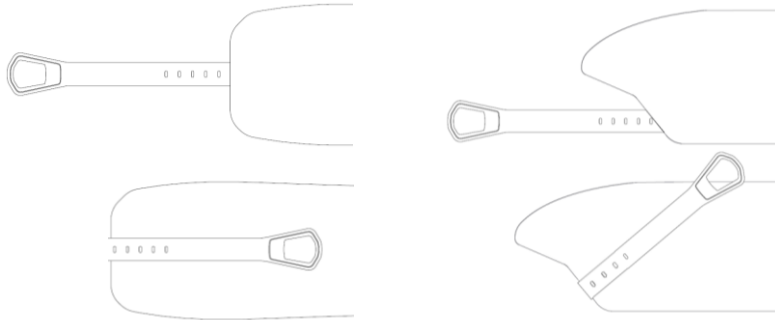

3. Tail Connector Installation:
 - a) **PLEASE NOTE: Once the tail connector is placed on the ski or board topsheet, the tape will immediately bond.**
 - b) Before removing the red tape release liner, align the tail connector with the rounded edge pointed toward the tip of the ski or board
 - c) Align the tail connector with your skin strap holes (see photo below) and apply tension to the strap



- d) Mark where the straight edge of the tail connector sits on your topsheet and remove the tail strap
- e) Remove the tape release liner from the back of the tail connector
- f) Place the tail connector on the ski or board top sheet where you previously marked
- g) Apply pressure for 30 seconds on the tail connector with the tape against the topsheet



After application, the bond strength will increase as the adhesive wets out on the surface. At room temperature approximately 50% of ultimate bond strength will be achieved after 20 minutes, 90% after 24 hours and 100% after 72 hours.

Do not leave your skins tensioned on your tail connector when not in use. G3 does not recommend prolonged usage in temperatures greater than 15°C.