

## L663 Britpart 90 Boot Basket (DA3979) Installation Guide


Remove both of the forwardmost plastic 'parcel shelf' supports by removing the single TX27 Torx fastener that holds them in place. Remove the 2 x shelf supports and set-aside safely with their 2 x fixings.



Hinge the fold out 'coat-hooks' downwards to approx' 45-degrees and then pull on the hook upwards to unclip the coat-hooks from their housing.



With the coat-hook removed this will reveal the TX27 Torx fastener located within the coat hook location. Remove this fixing.

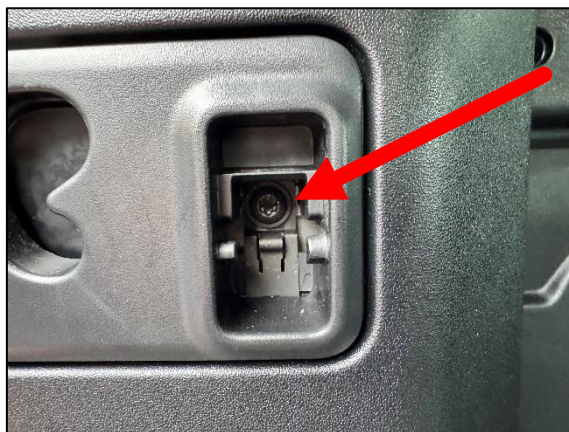

The use of long nosed piers or a magnet will make removing the fixings easier from this location. Set aside the 2 x fixings with the hooks and shelf supports and their fixings. These can be re-installed should you wish to remove the boot basket in the future.



## Mounting the Boot Basket

Identify the RH and LH support brackets.

The LH bracket is shown fixed in place below.



The 2 x longer M6 x 60mm cap-head bolts are used for the rearmost fixing points on the support bracket.


The 2 x M6 x 30mm cap-head bolts are used for the forward fixing points on the support bracket.

Fix both RH & LH support brackets in place but do not fully tighten the fixings down yet.

Once both support brackets are in place, sit the basket onto the support brackets and check the basket is level. Support bracket holes are elongated to allow for adjustment. Once you're happy the basket is level, tighten the 4 x support bracket fixings down.



The higher/raised side of the basket should face the front of the car and sit immediately behind the rear seats.

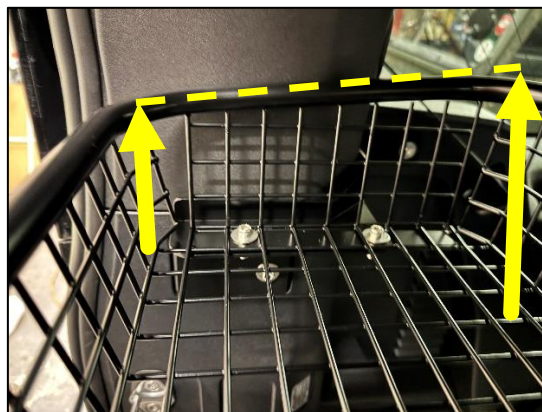

Secure the basket to the support brackets using the 4 x M6 x 15mm cap head fixings.

