





## Assembly Instructions

- 1) Select the drawing with the correct Shelf length and drill holes accordingly.
- 2) Screw the supplied sheet metal screws into studs where possible, otherwise use the metal wall anchors. Weight limits below pertain to stud or woodbacker installation.
- 3) Place the Frame on the screws and tighten until Frame is level.
- 4) Place Shelf over Frame, the lip at the back will lock in place.

1/8 Drill for Sheet Metal Screws

3/8 Drill for Wall Anchors

Model	Shipping Wgt Lbs	Rating Wgt Lbs
FS18B	9	60
FS24B	12	60
FS30B	14	60
FS36B	16	60
FS42B	21	120
FS48B	23	120
FS60B	27	120
FS72B	31	120

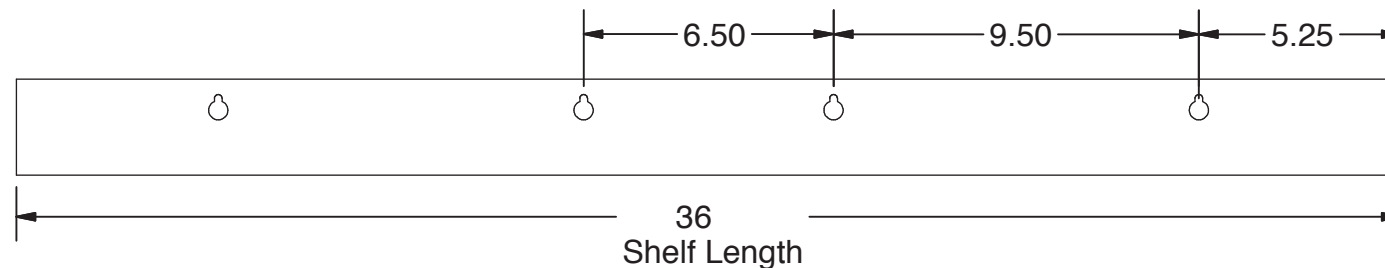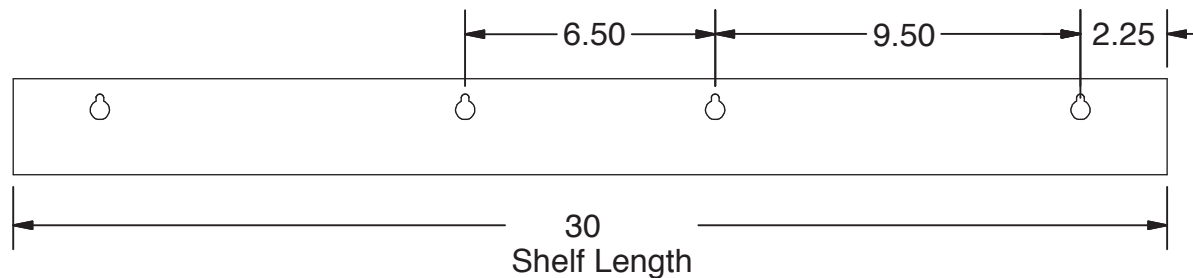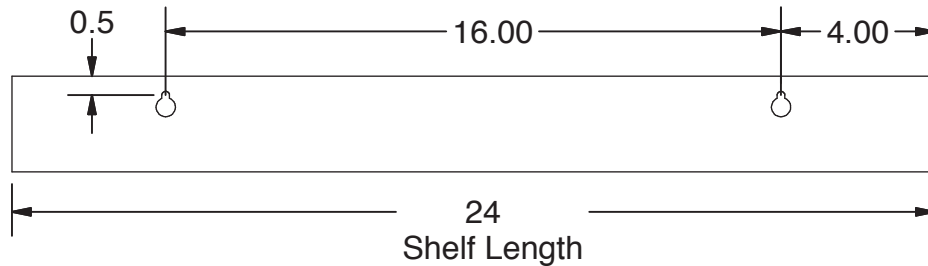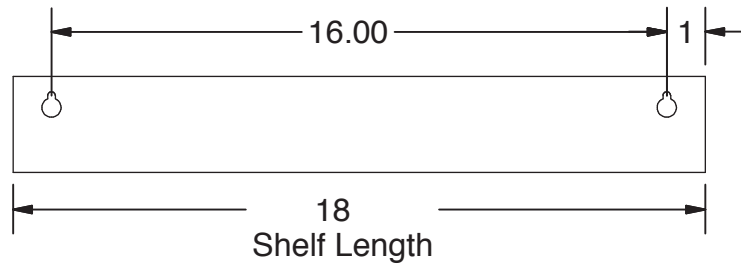

Q033

See back for shelves over 36"

