

901 Design Alvar Aalto 1936

artek

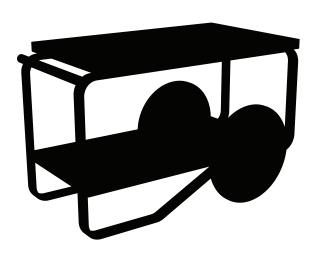

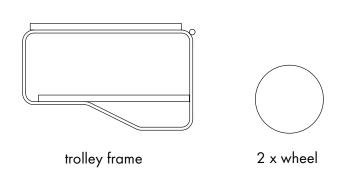

Attach the wheels (2) by inserting the shafts into holes on the frame. If the wheel feels tight, push and turn simultaneously.

