





Nakatanenga Bicycle Rack Extension Bracket Fitting Guide


- This product is suitable for European spec 50mm tow-balls only.
- Before attempting to fit this product, you must ensure the tow-ball on your vehicle is undamaged, clean and free of any grease or paint.
- The 4x M8x45mm bolts, 4x M8 nuts & washers supplied loose in a bag with the bracket are not used for this application & can therefore be discarded. This is because this product is supplied pre-assembled with the 250mm extension piece installed so no further fasteners are required.




- The spring-loaded locking bolt (A) needs to be pulled back before the locking handle/lever will lift. Pull knob A out to release the locking bolt and then twist the knob 90-degrees until the knob stays out.

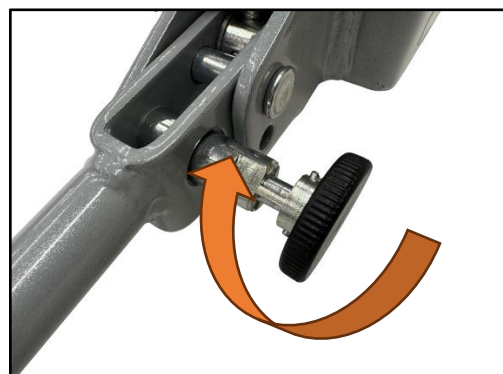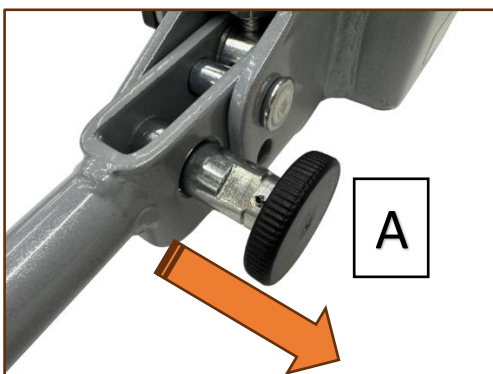


- The Extension Bracket assembly is now ready to be placed onto the tow-ball from above. On a vehicle with the spare wheel mounted on the rear door, this is easier with the rear door in the open position. Hold the extension bracket horizontally with one hand, drop it onto the tow-ball and use your free hand to push down on the lever/handle to secure the bracket to your tow-ball. You will find the extension bracket centres itself on the tow-ball as you increase downward pressure on the handle/lever.
- With the handle/lever fully down, twist the plastic knob on the end of locking bolt another 90-degrees until you hear the locking bolt snap back into the locked position. The locking handle-lever should now be secured in place and cannot be lifted upwards. You should not be able to move the bracket around at all when installed.

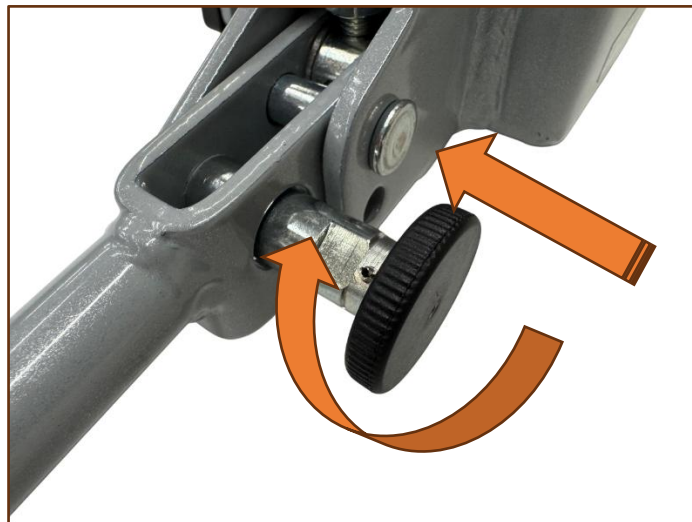


It is possible to tighten the grip on the tow-ball by removing the bracket from the tow-ball and adjusting bolt B concealed under the push-on plastic cap.

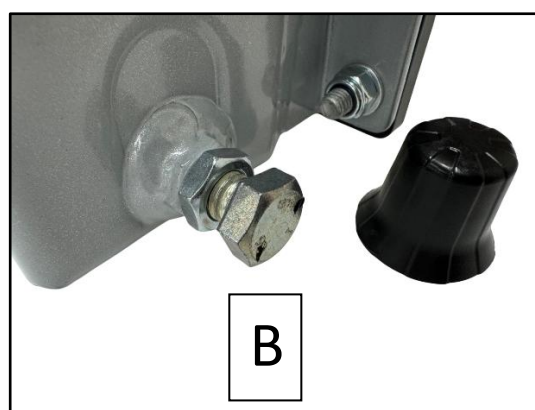

- Undo the lock nut and tighten bolt B a small amount at a time. Remember to re-tighten the lock nut.

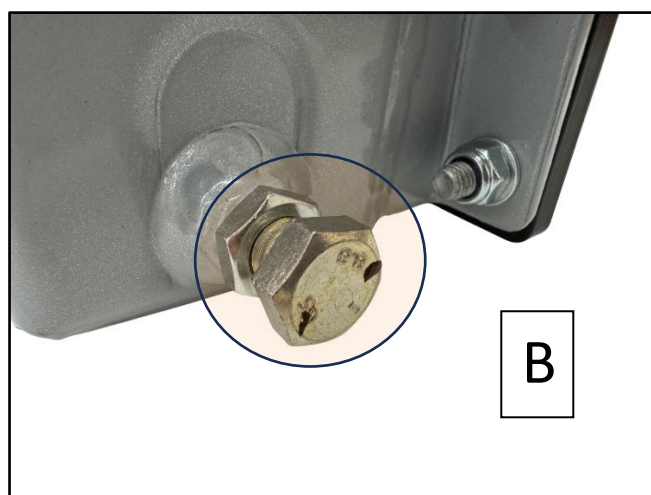

The supplied padlock can be used in the empty holes alongside the locking bolt in order to prevent unauthorised removal of the bracket.

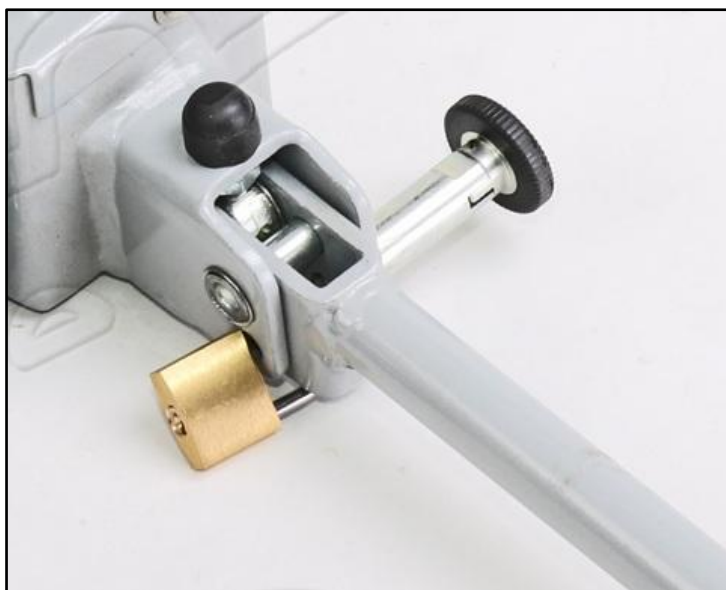

With the extension bracket installed and secured to your car you can now attach your cycle carrier to the tow-ball on the extension bracket.

This product has a maximum load rating of 120kgs.

Remember to always combine the weight of cycle/s and the weight of your cycle carrier together to calculate the total load on the bracket.