


Nokori Mirror Installation Instructions

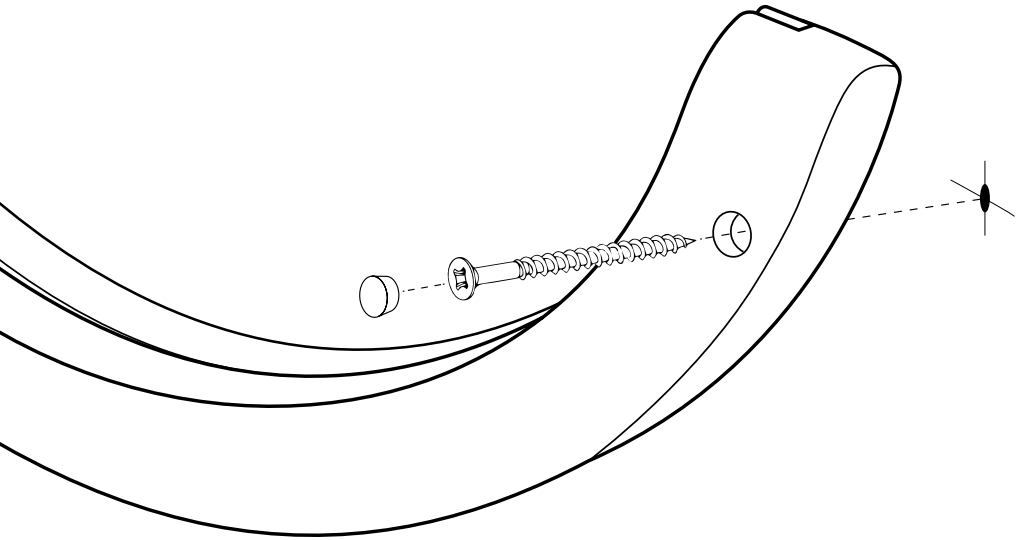

1. Identify if there are any hidden pipes or electrical cables in the wall to avoid causing damage or risk of electrical shock during installation. Determine the fixing method appropriate to the wall structure (e.g. plaster board plugs). We would always recommend finding joists if possible.
2. Using a Pozidriv screwdriver, carefully screw the screws provided (or other suitable screws depending on wall type and fixing method) into the holes of the Nokori Mirror wooden base so they partially protrude out of the back by approximately 2-3mm.
3. Align the wooden base on the wall using a spirit level and press firmly into the wall surface so that the screws leave small marks showing where to fix to.
4. Using the screws provided and if necessary, a fixing method appropriate to the wall structure, (e.g. plaster board plugs) fix the wooden base to the wall.
5. Gently tap in the wooden plugs provided to conceal the screws and carefully slot the mirror into the rebated channel to complete the installation.