






ASSEMBLY INSTRUCTION

KF. B2035


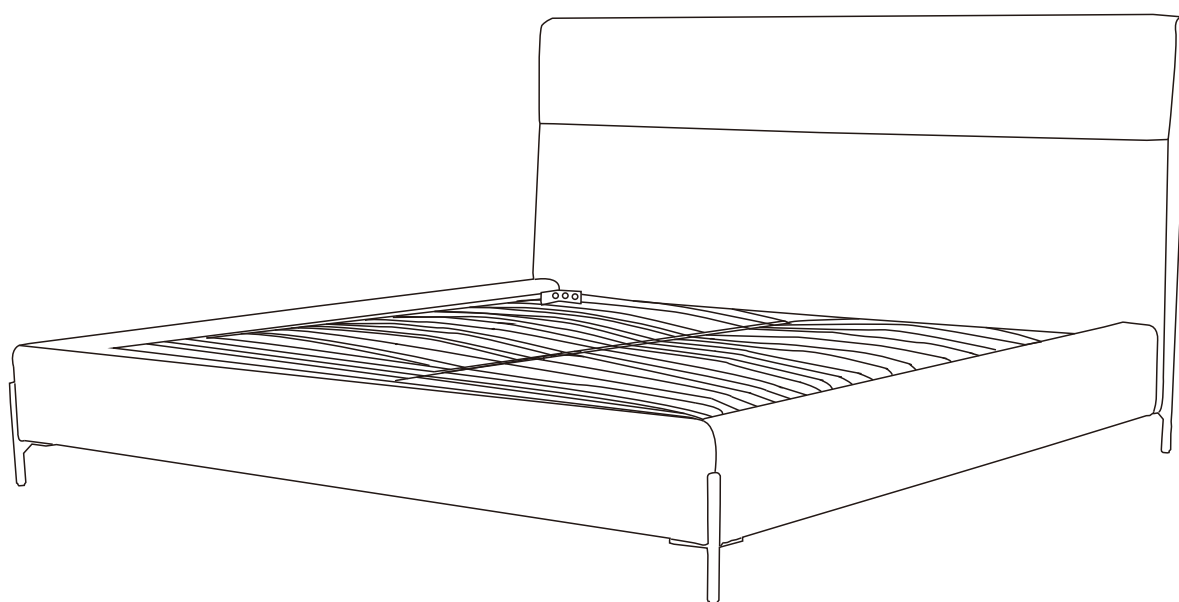




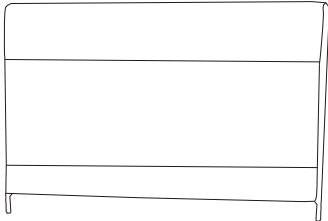

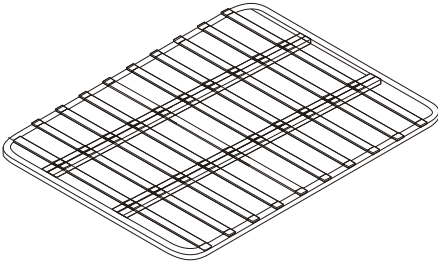
Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below:

Part List:


Description	Quantity	
A Upholstered Headboard	1	
B Footboard	1	
C Side rail	2	
D Slates	1	

Hardware List:


Description	Quantity	
E	8	
F	12	
G	48	 M8X25
H	1	
I	12	
J	2	
K	4	

Assembly Instruction:


1. Attach metal angle E & F to headboard, rails and footboard.

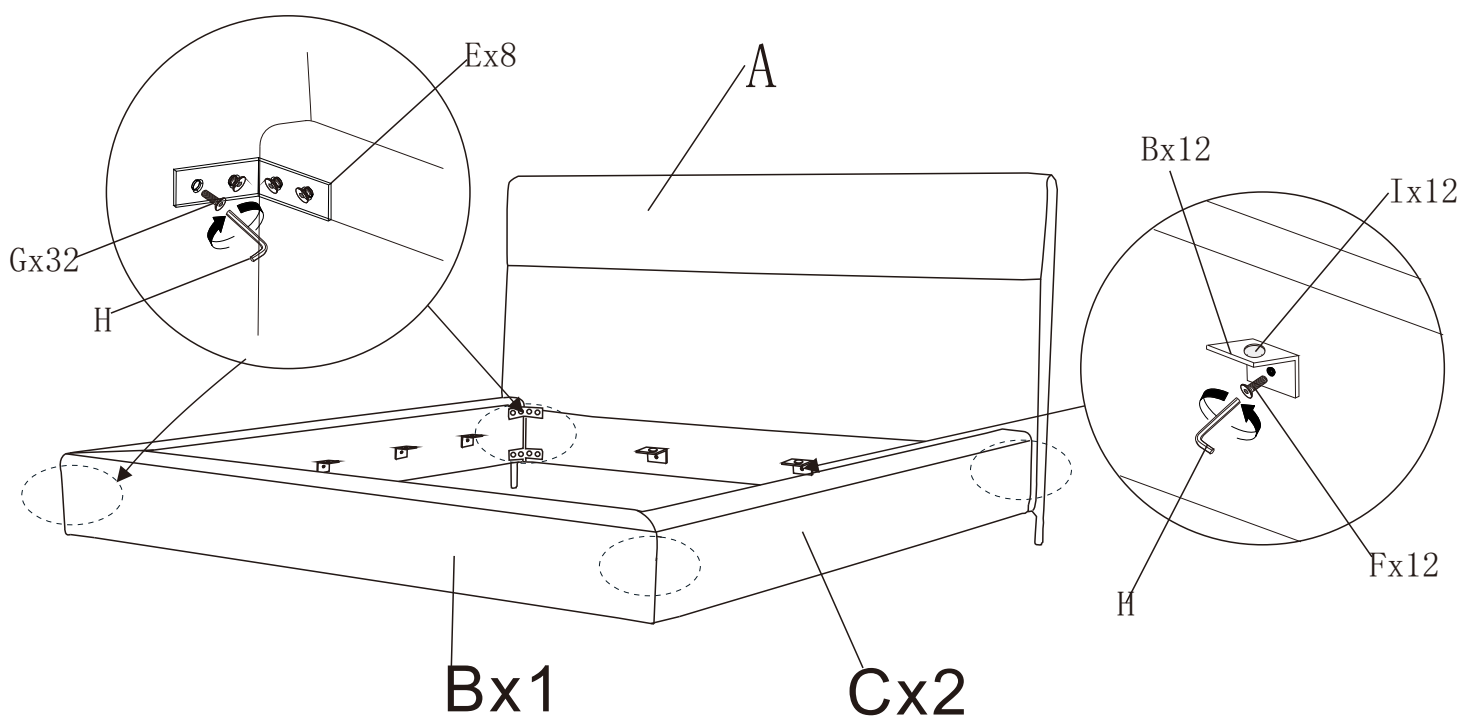

2.Install metal leg.

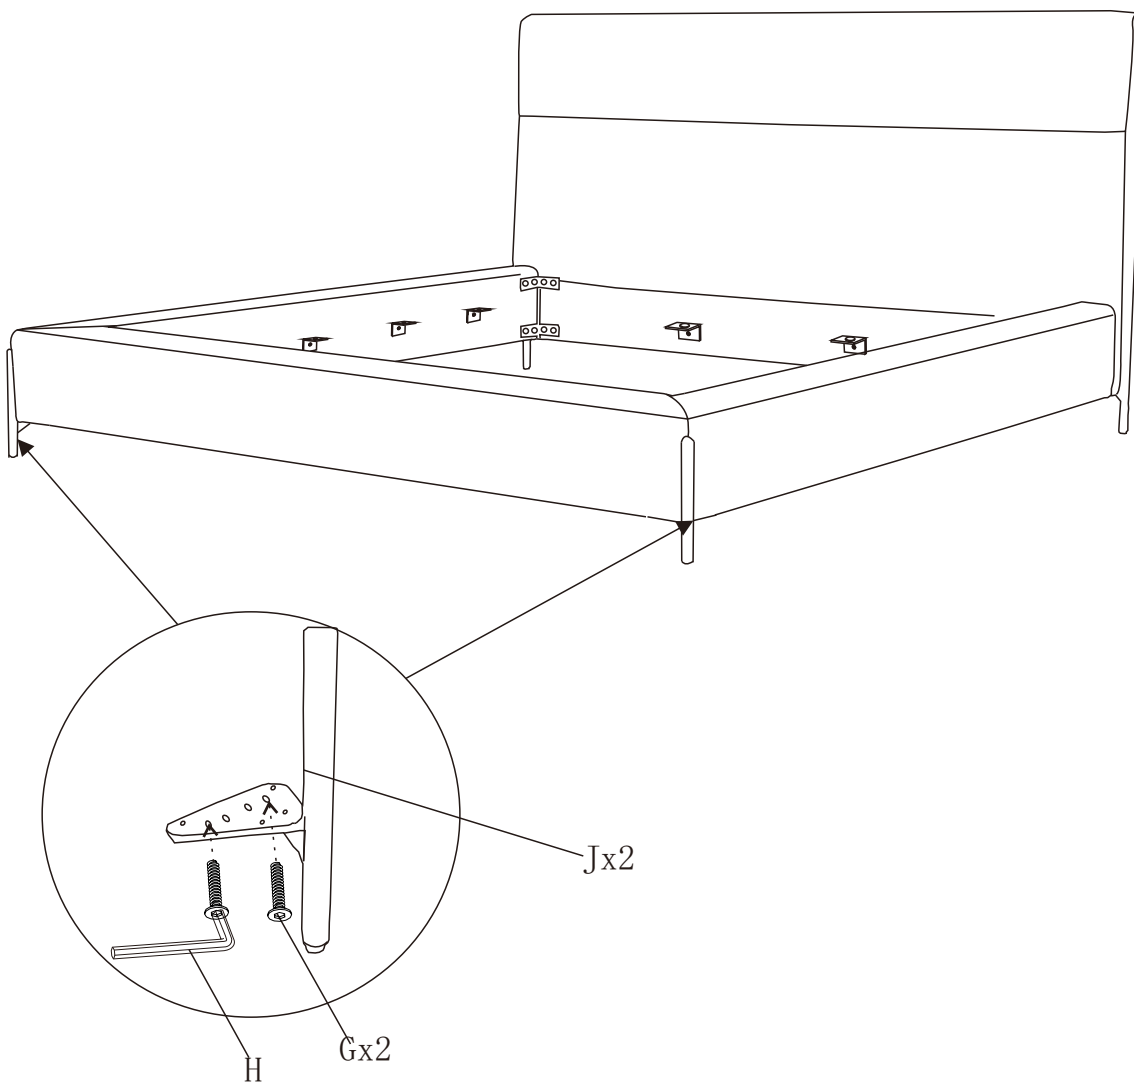

3.Install slats.

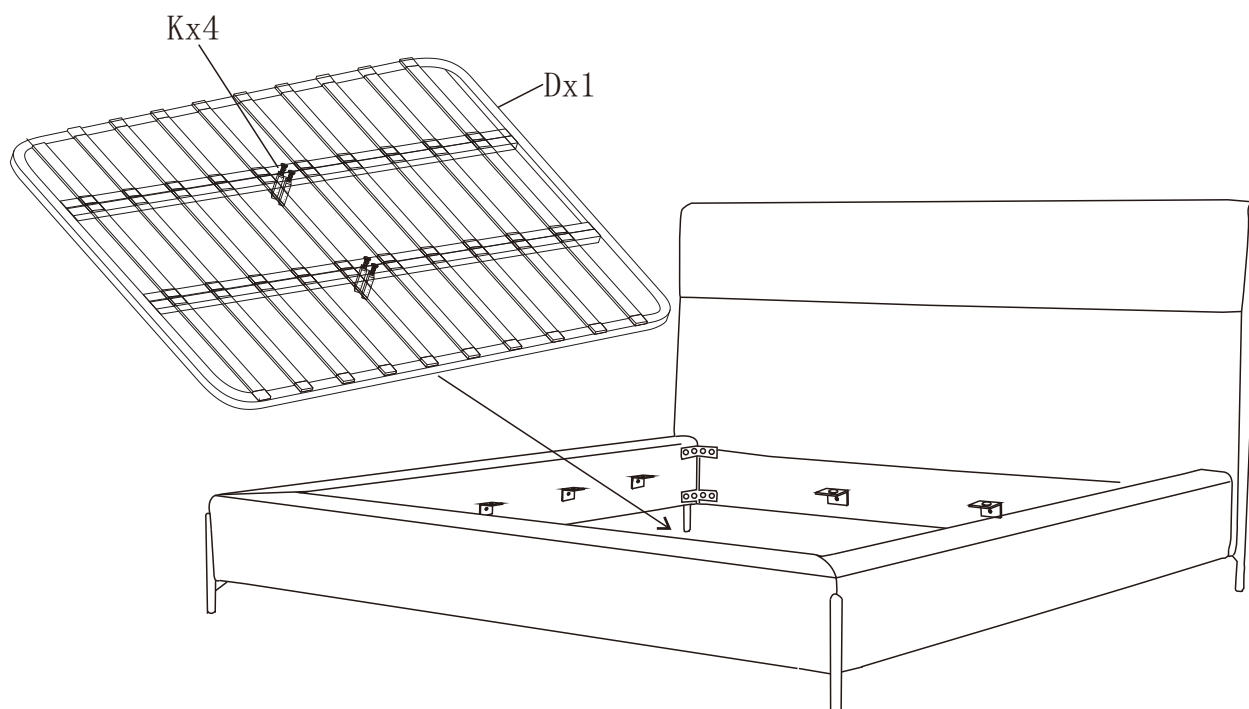

4.Finished.

