



KF.B2036MX Morris

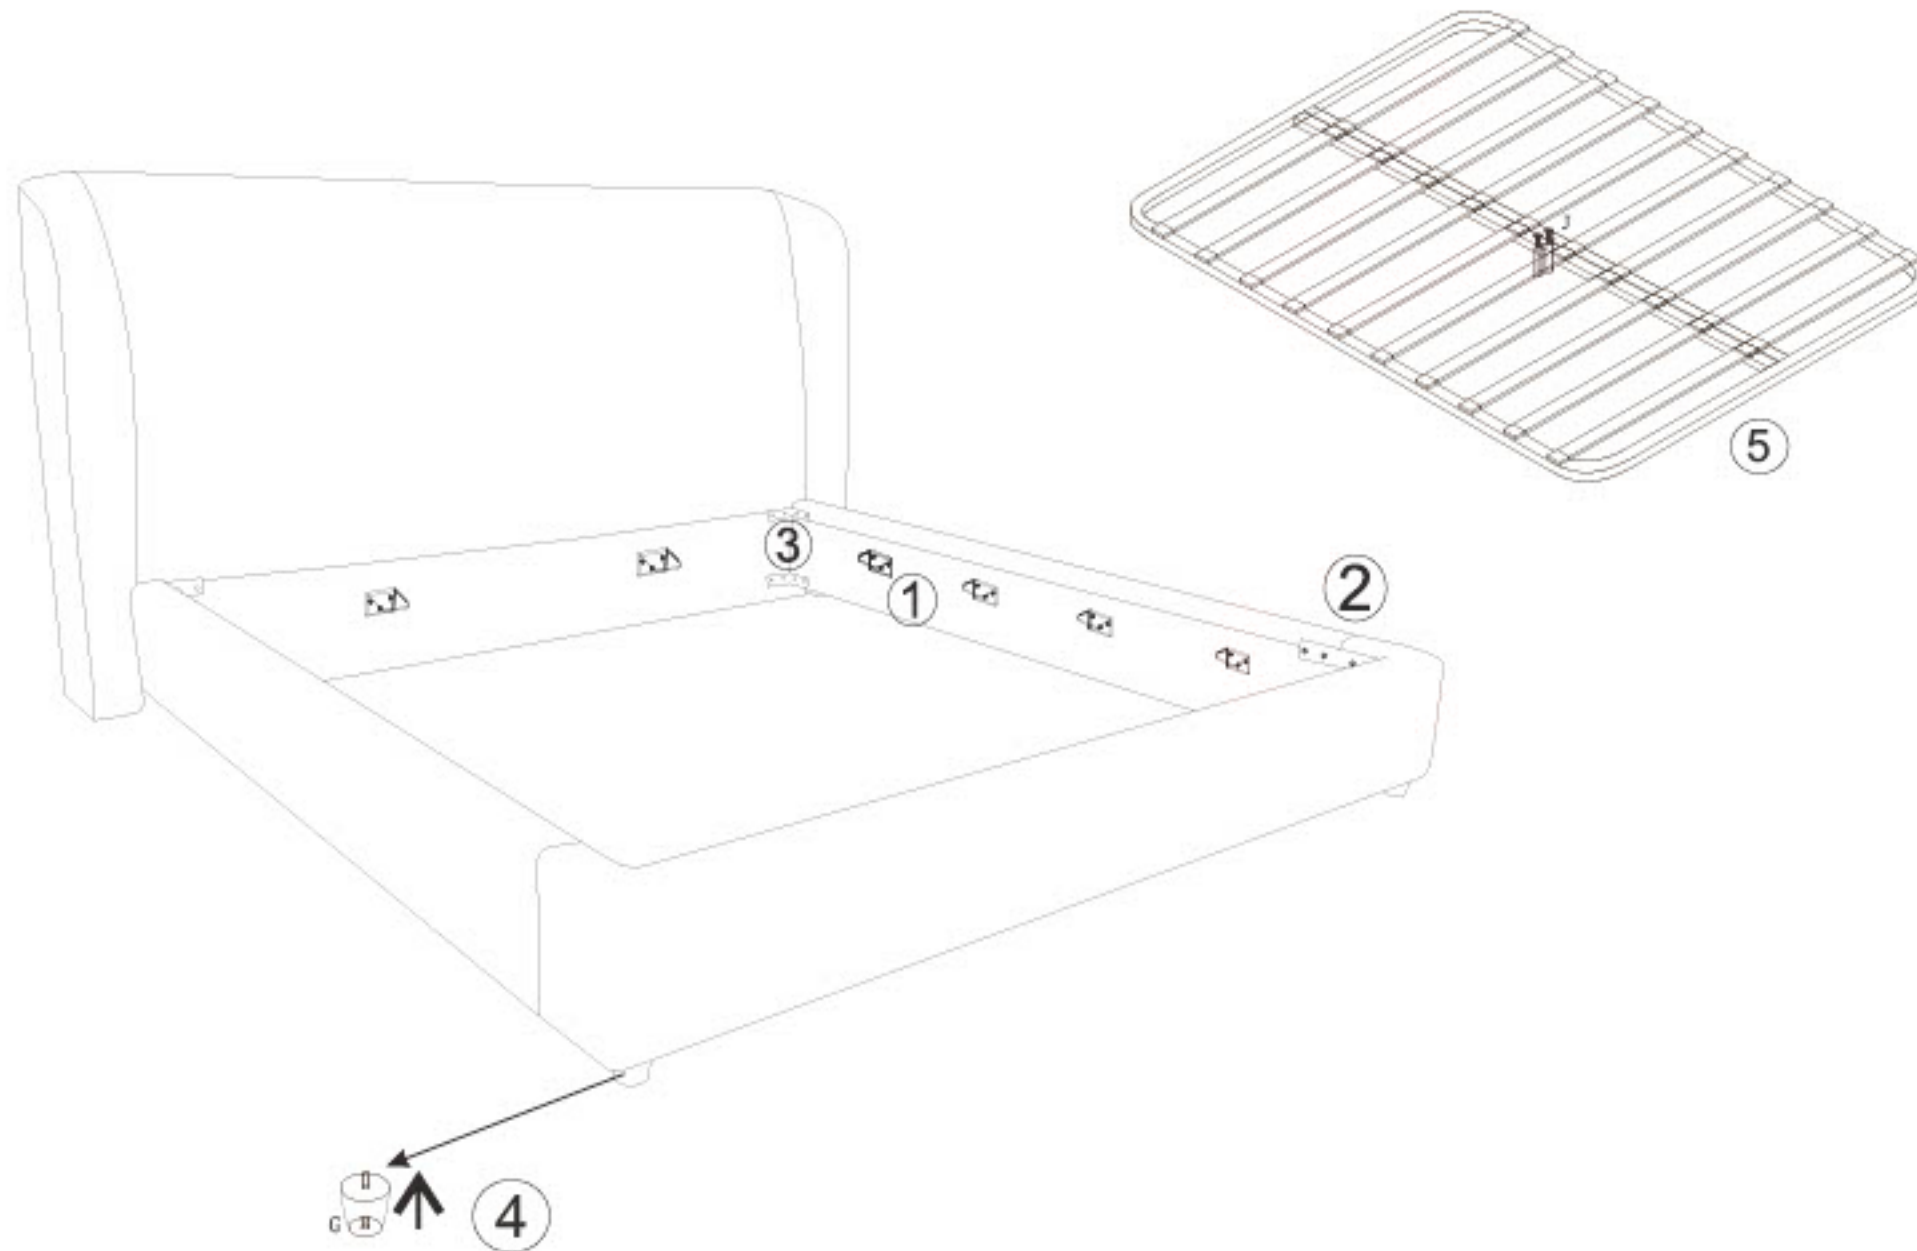


Accessory Code	pcs	Hardware Parts
A	4	
B	2	
C	2	
D	12	
E	20	
F	12	
G	2	
H	36	
I	16	
J	2	
K	1	

Please ensure all parts and hardware are including before getting started.

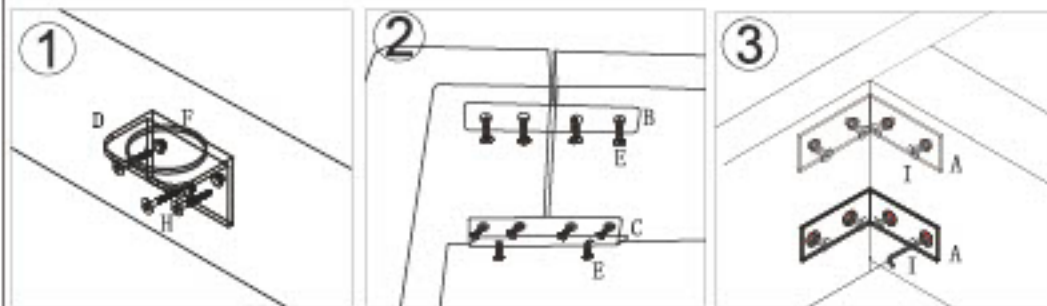


ITEM	KF. B2036MX
SIZE	77"*81"

1

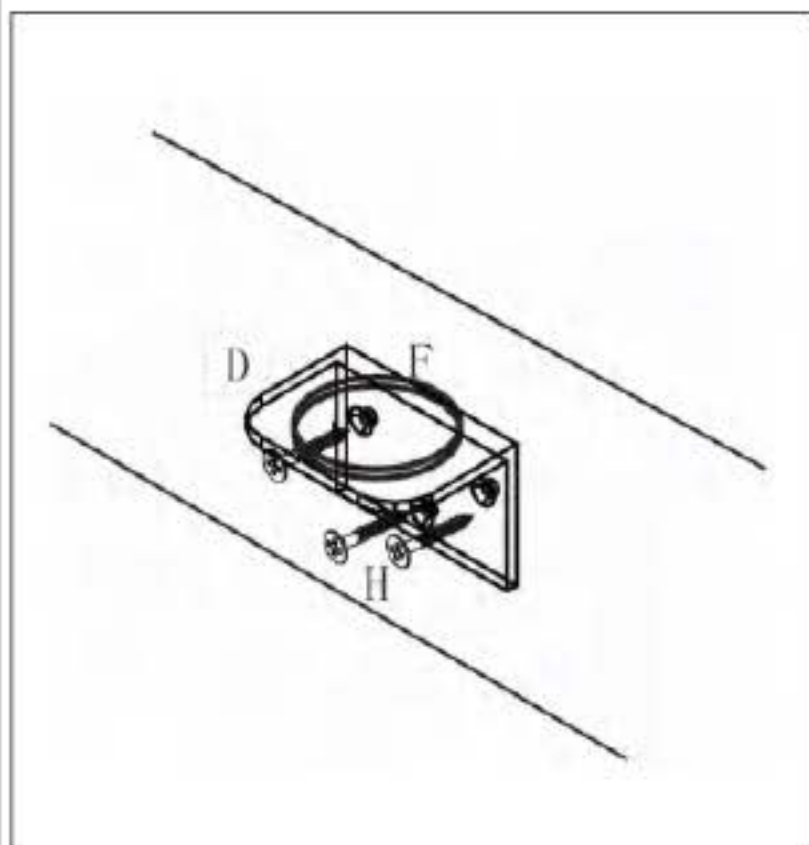


Attach metal angle D to headboard, rails and footboard, using H bolts and put on Cotton F.

2

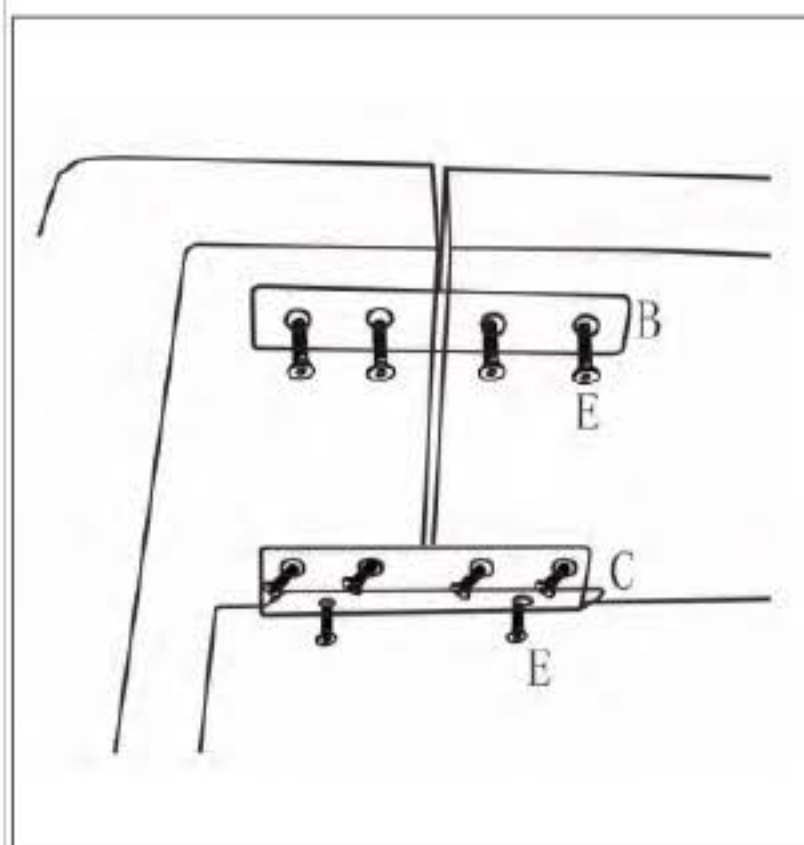

Use metal angle B and C to fix footboard and rails with part E bolts.

3

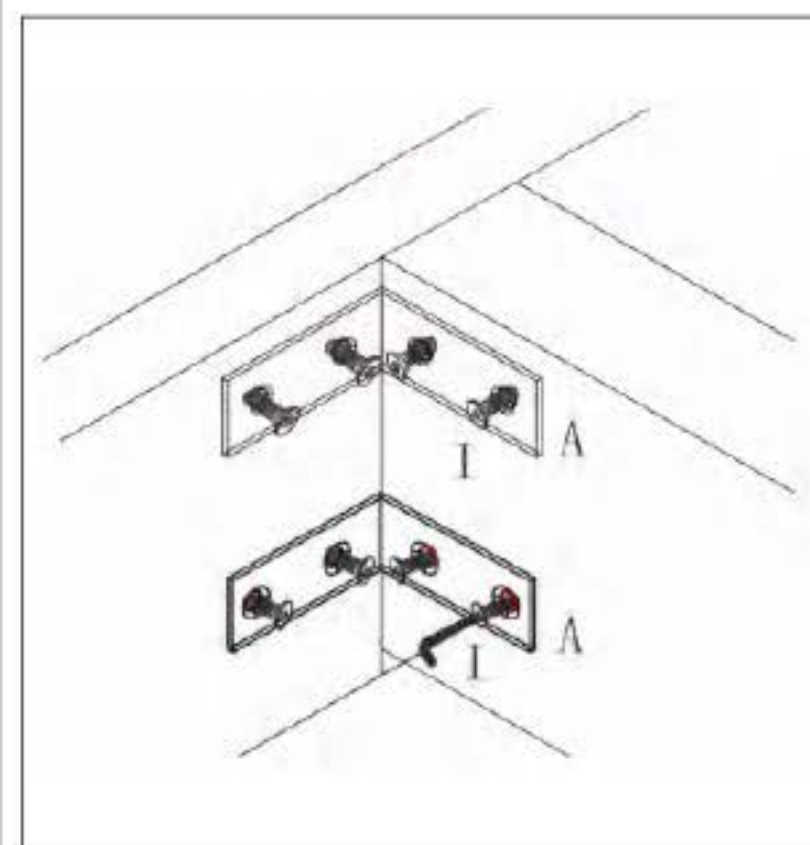


Use metal angle A to fix headboard and rails with I bolts.

Size

77"×81"

4

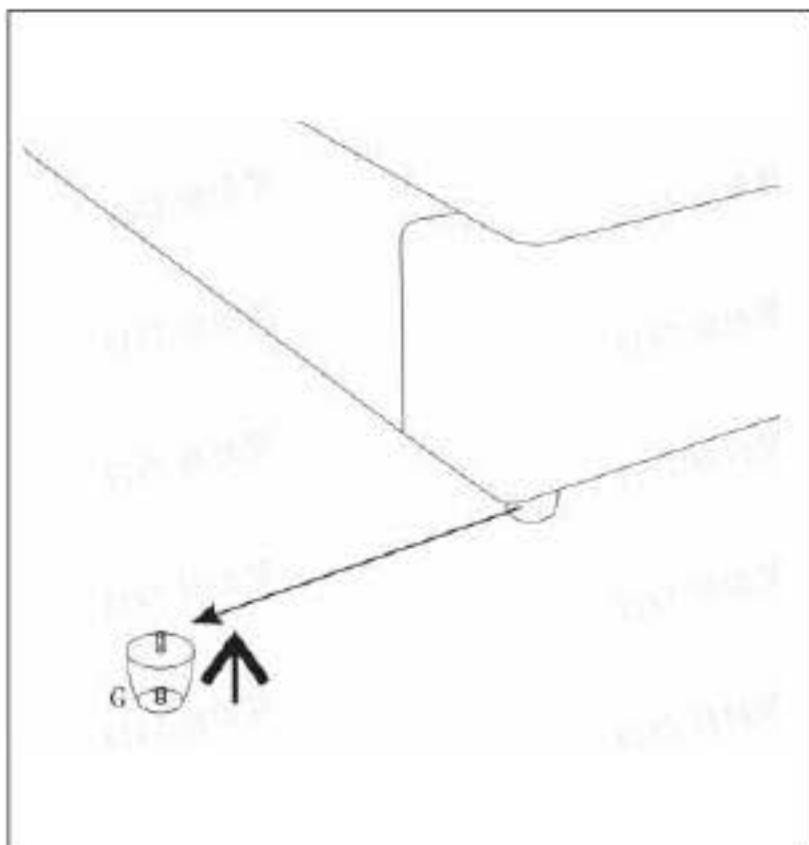

Attach legs G to footboard.


5



Install support foot J to slats.



Size

77"*81"

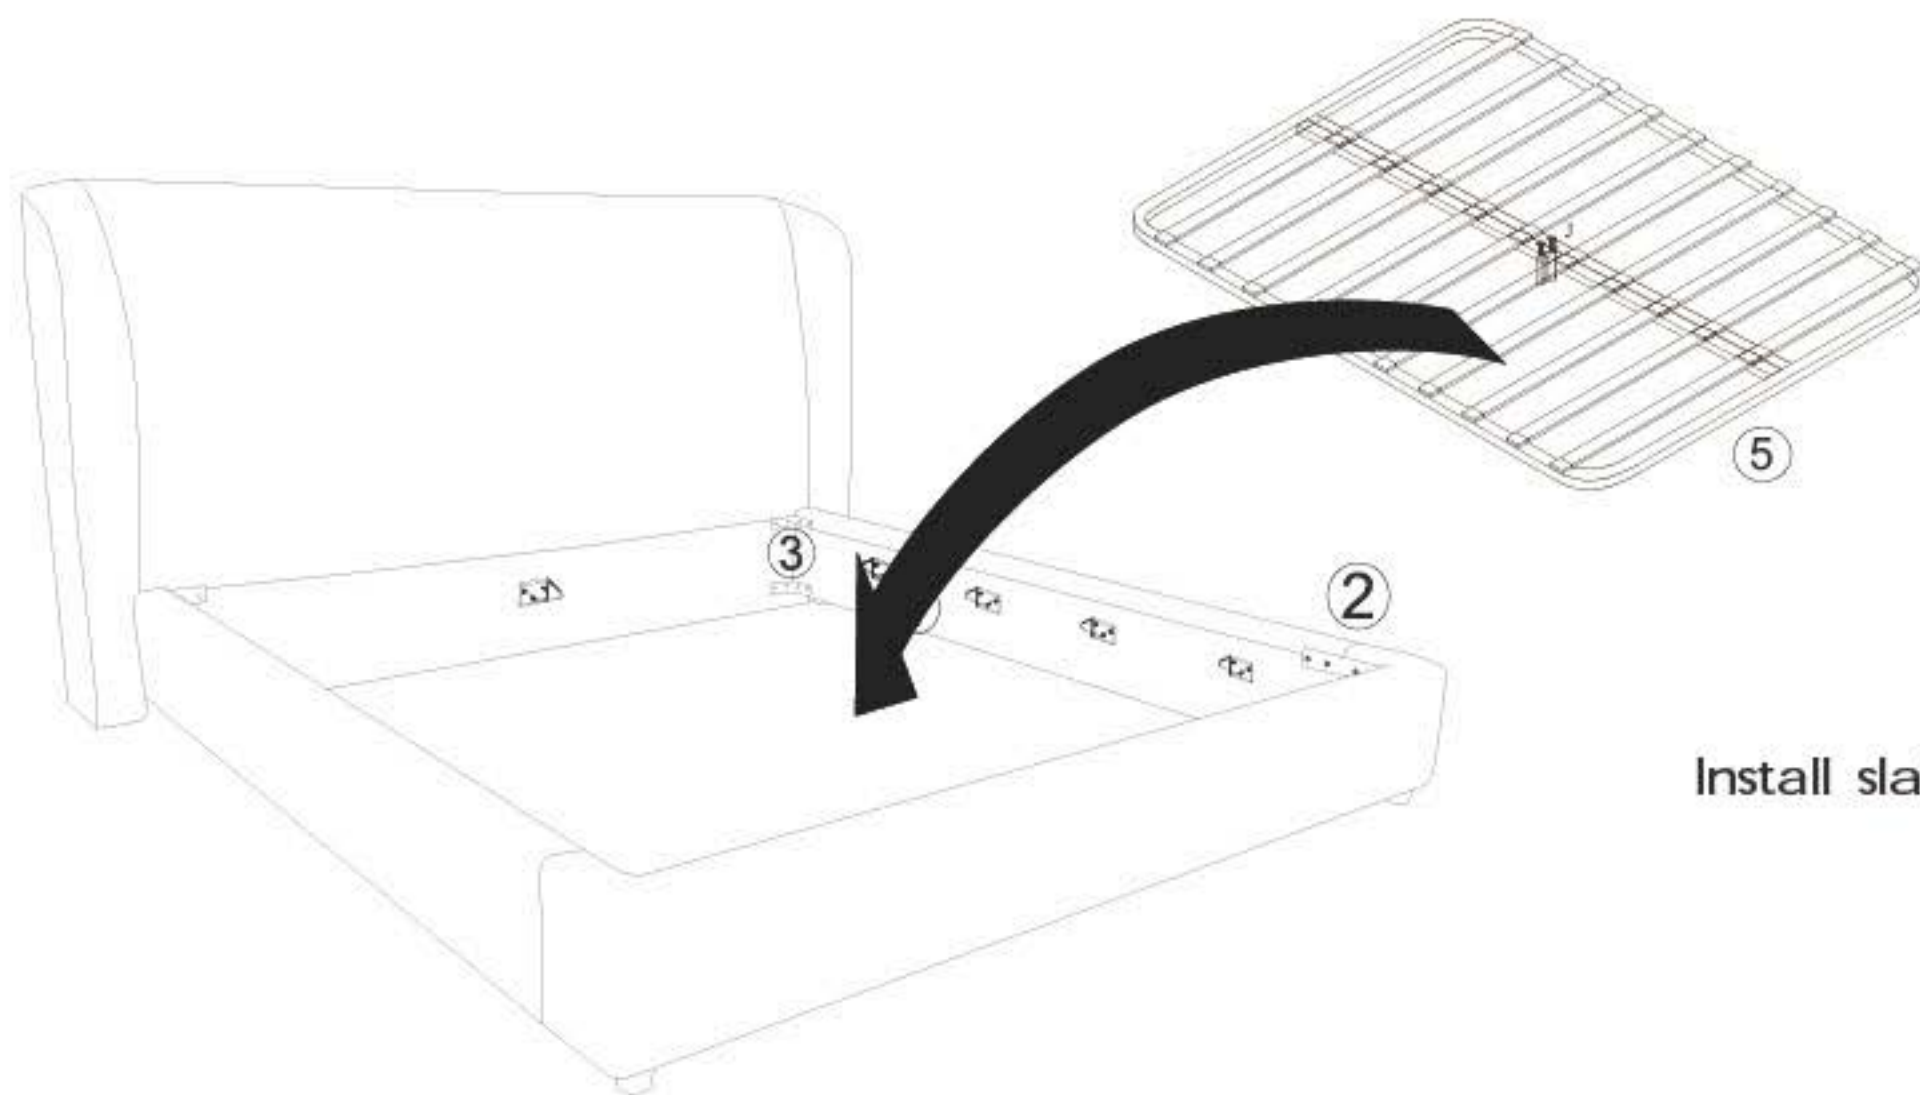


Install slats on bed.

ITEM	KF.B2036MX
SIZE	77"*81"

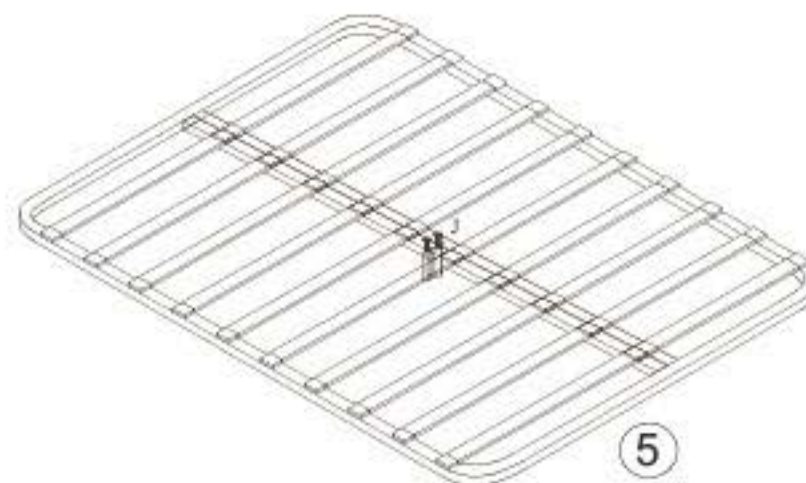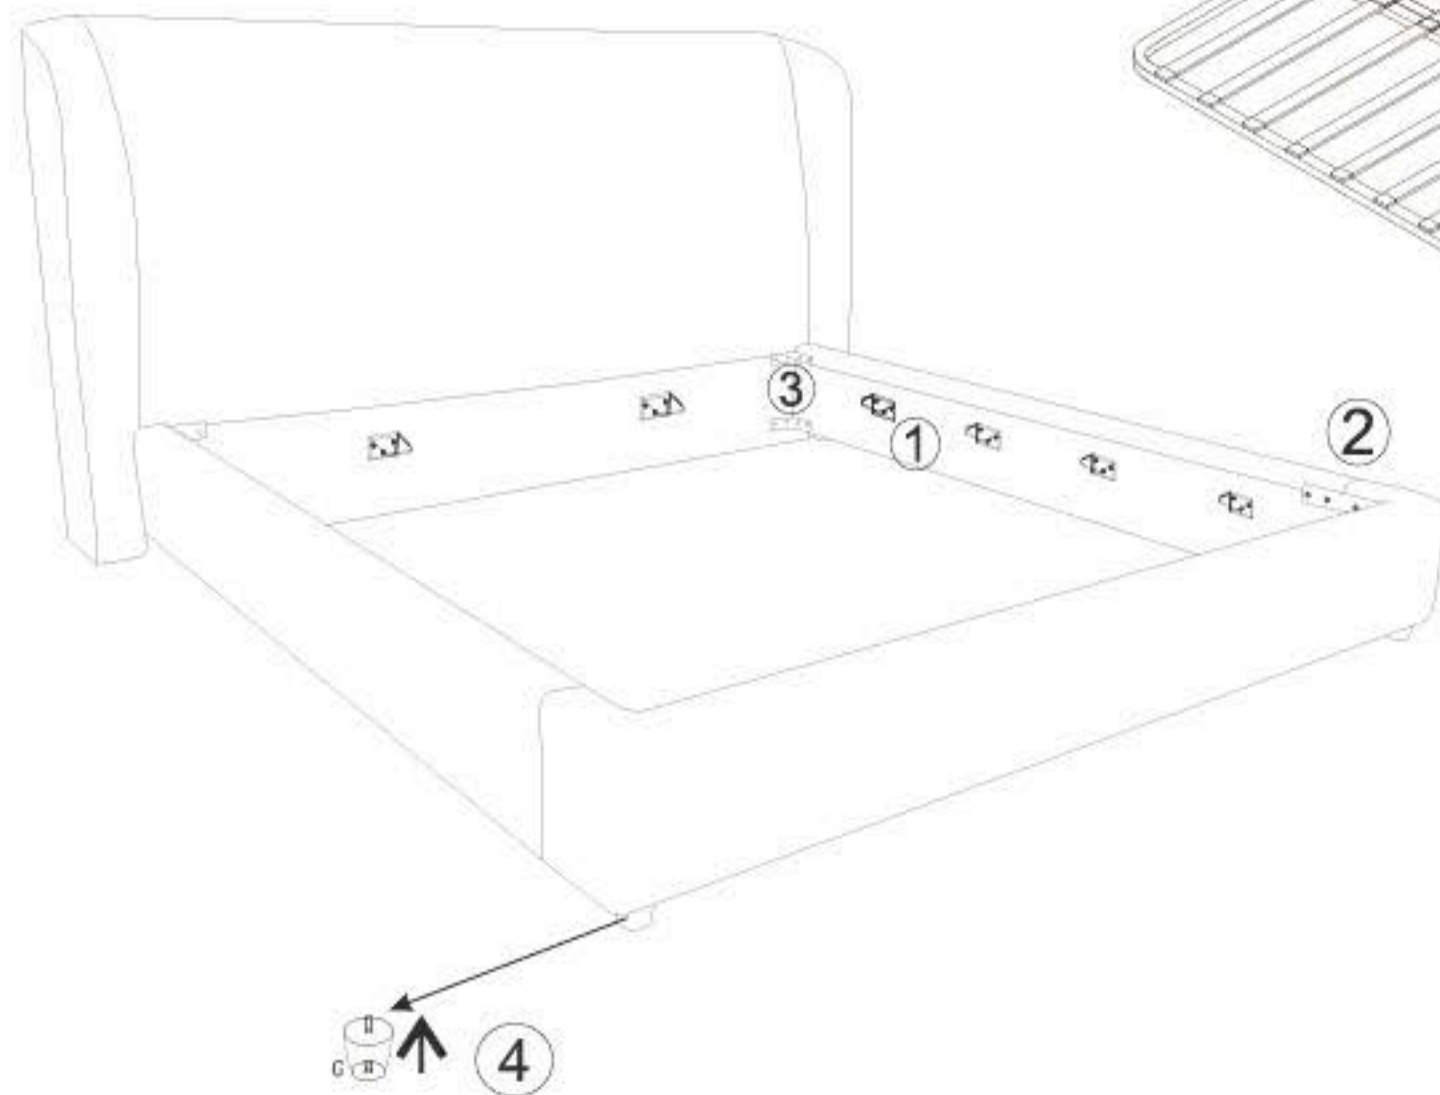


Accessory Code	pcs	Hardware Parts
A	4	
B	2	
C	2	
D	10	
E	20	
F	10	
G	2	
H	30	
I	16	
J	2	
K	1	

Please ensure all parts and hardware are including before getting started.

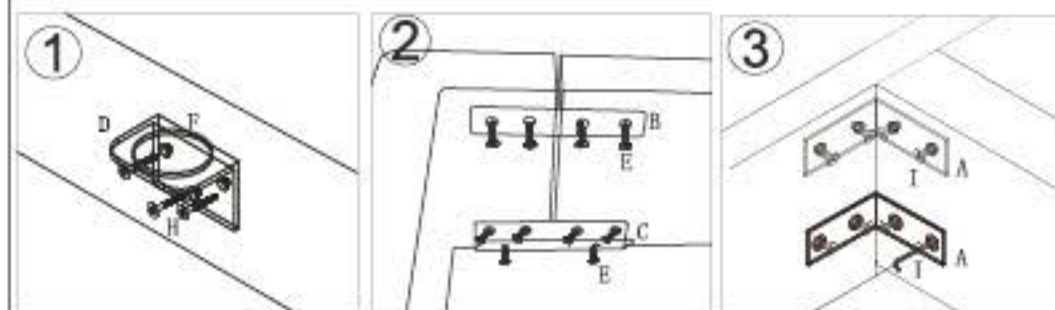


ITEM	KF. B2036MX
SIZE	61"*81"

1

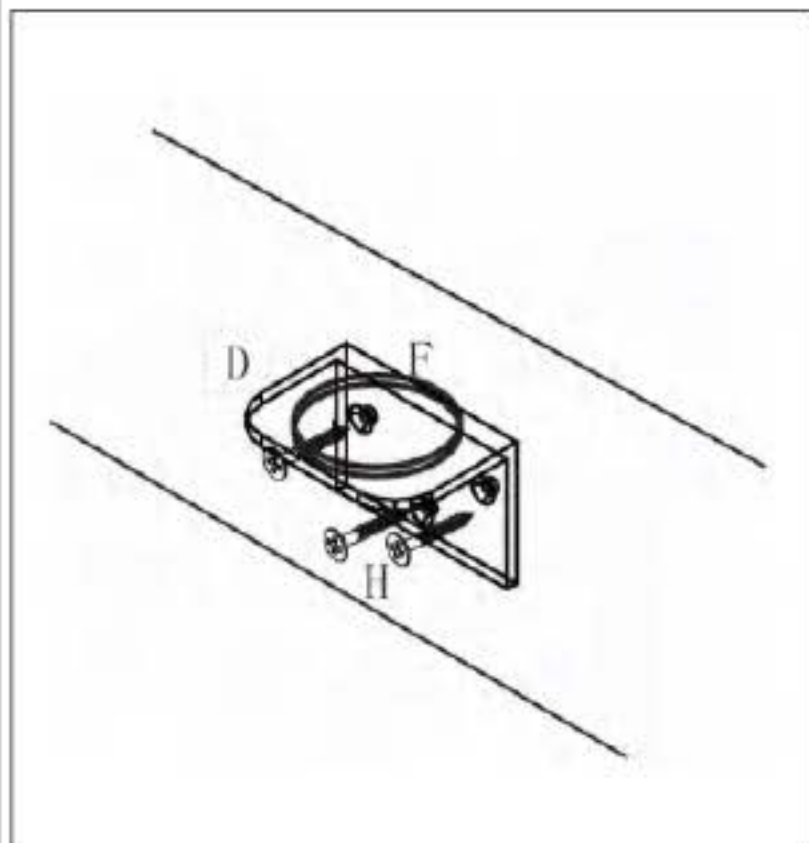


Attach metal angle D to headboard, rails and footboard, using H bolts and put on Cotton F.

2

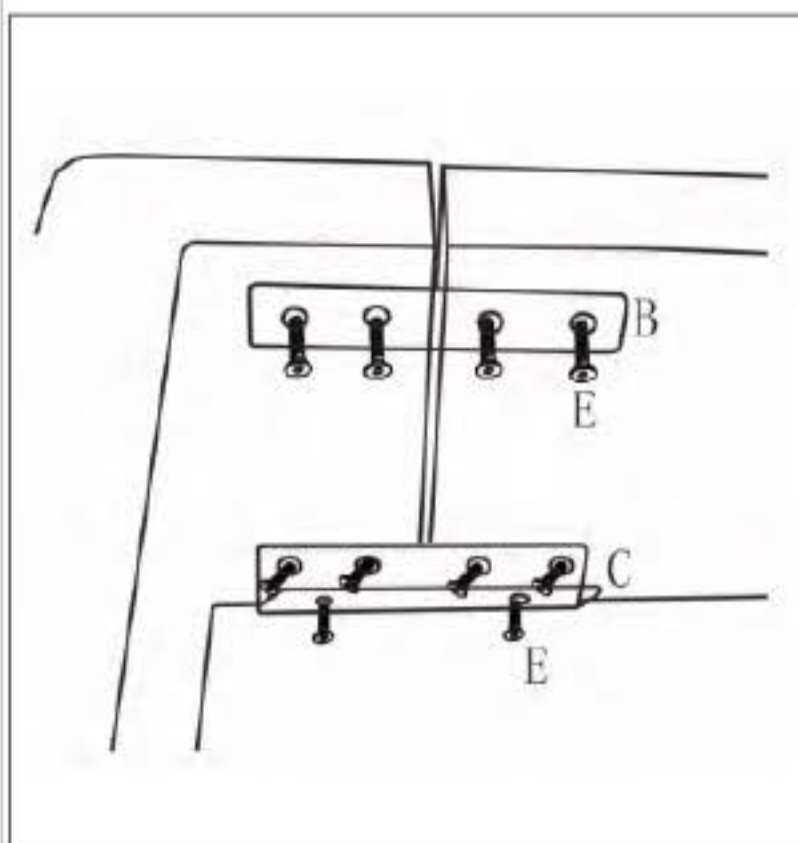

Use metal angle B and C to fix footboard and rails with part E bolts.

3

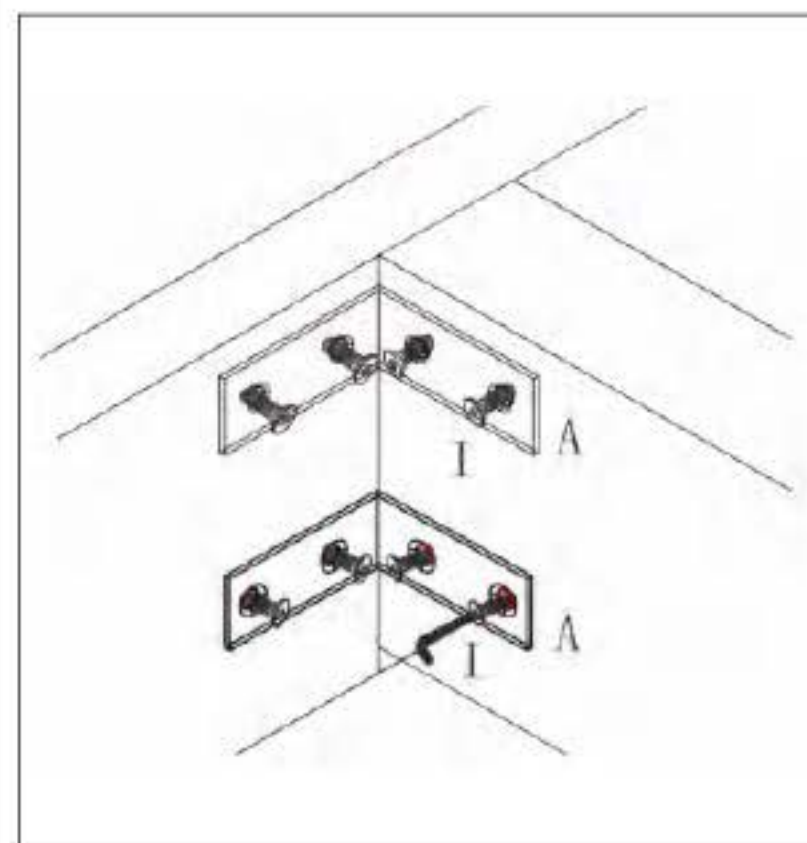


Use metal angle A to fix headboard and rails with I bolts.

Size

61"×81"

4

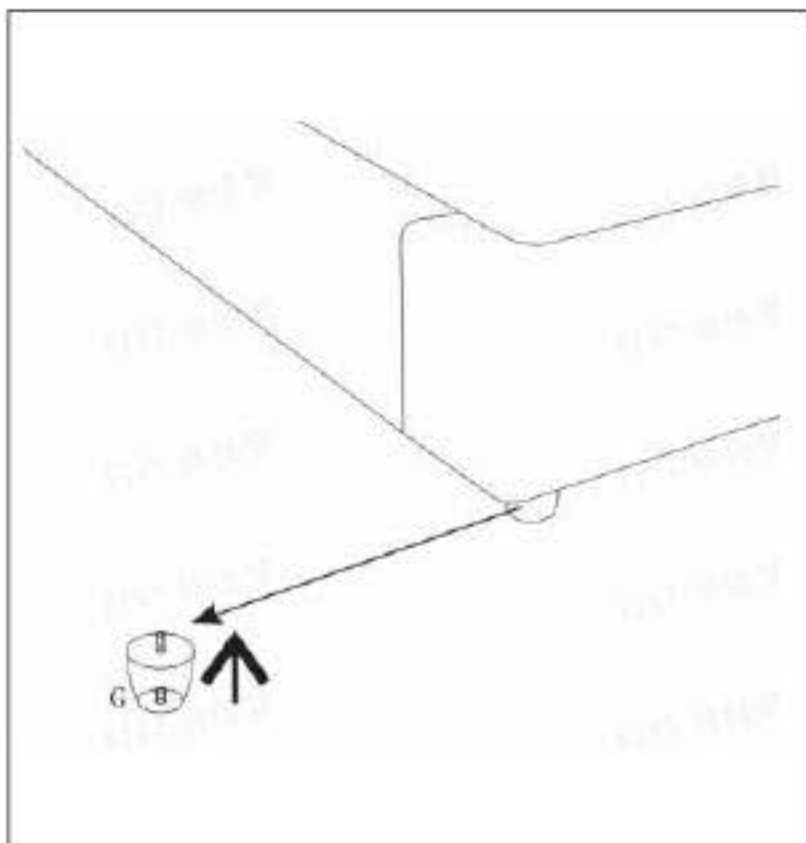

Attach legs G to footboard.


5



Install support foot J to slats.

Size

61"*81"

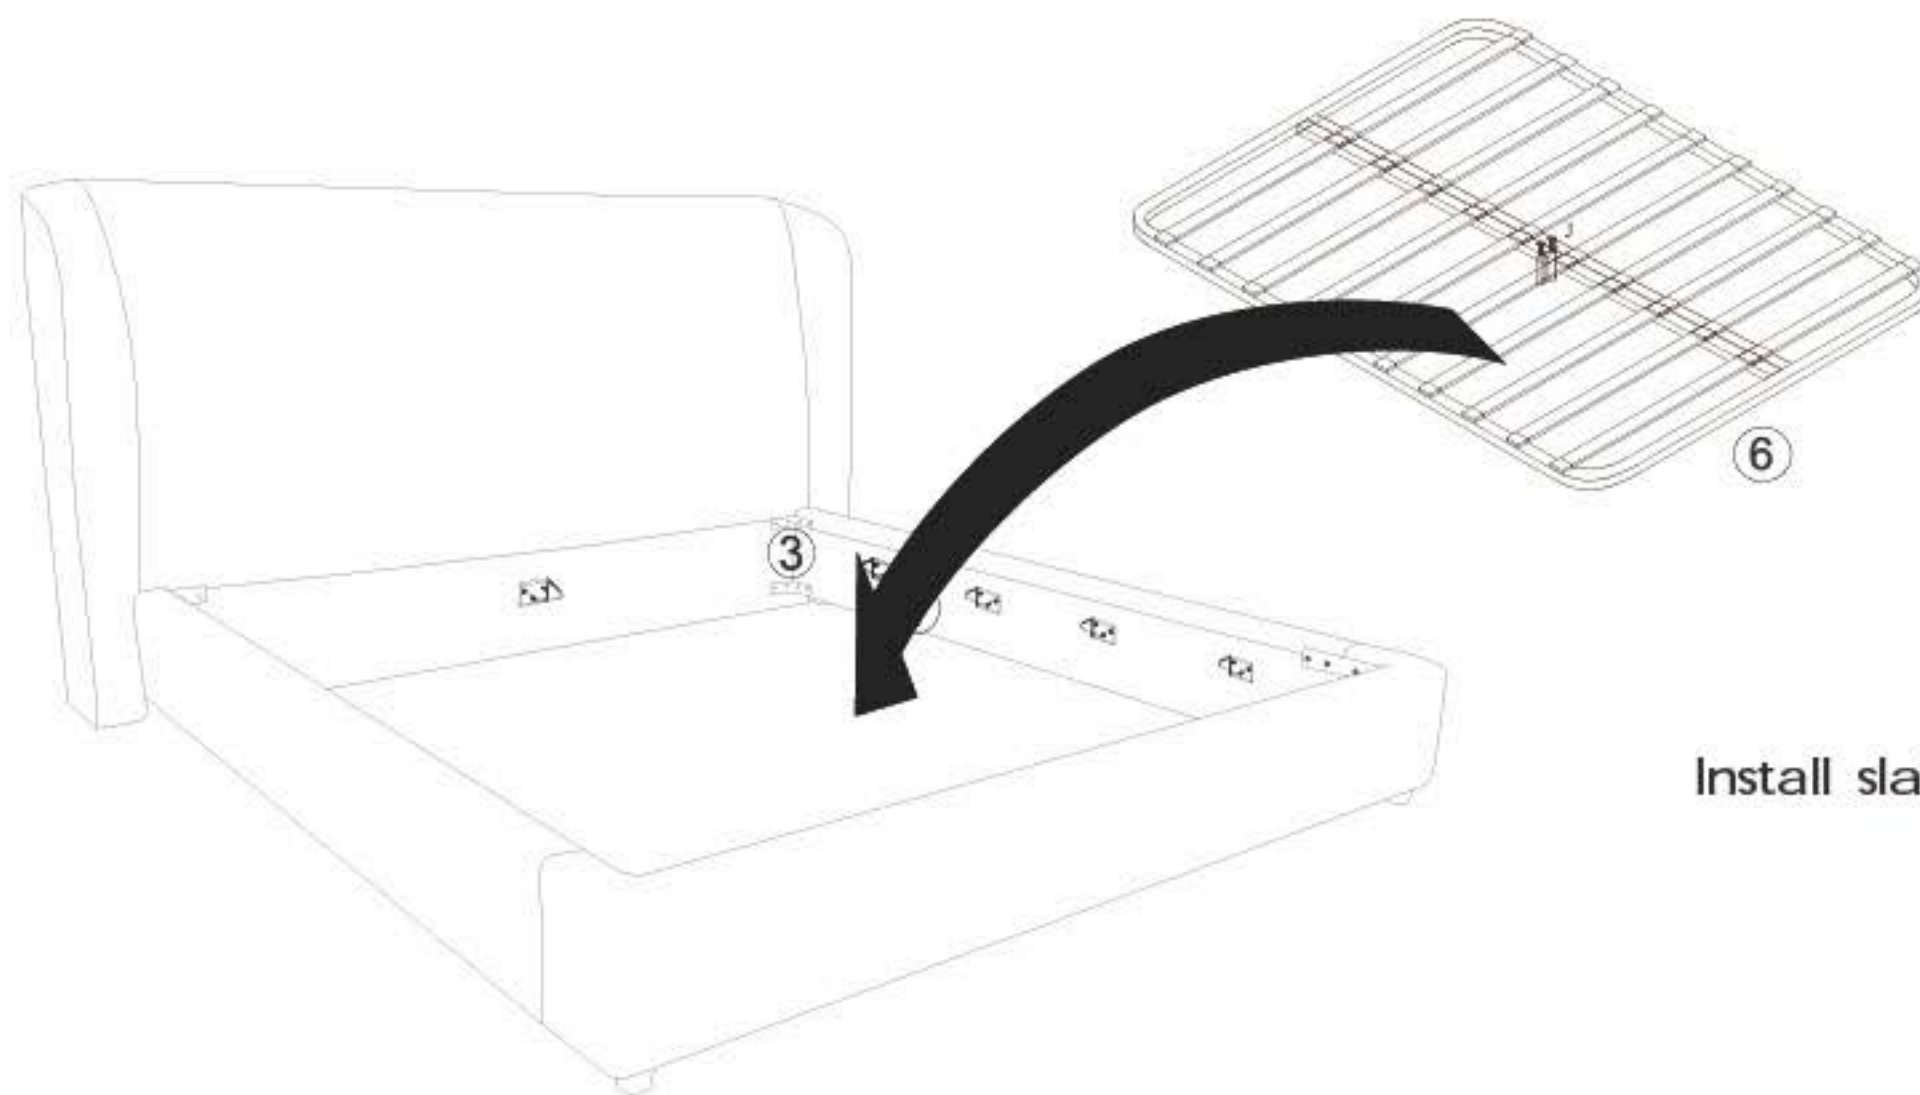

Install slats on bed.

ITEM	KF.B2036MX
SIZE	61"*81"