


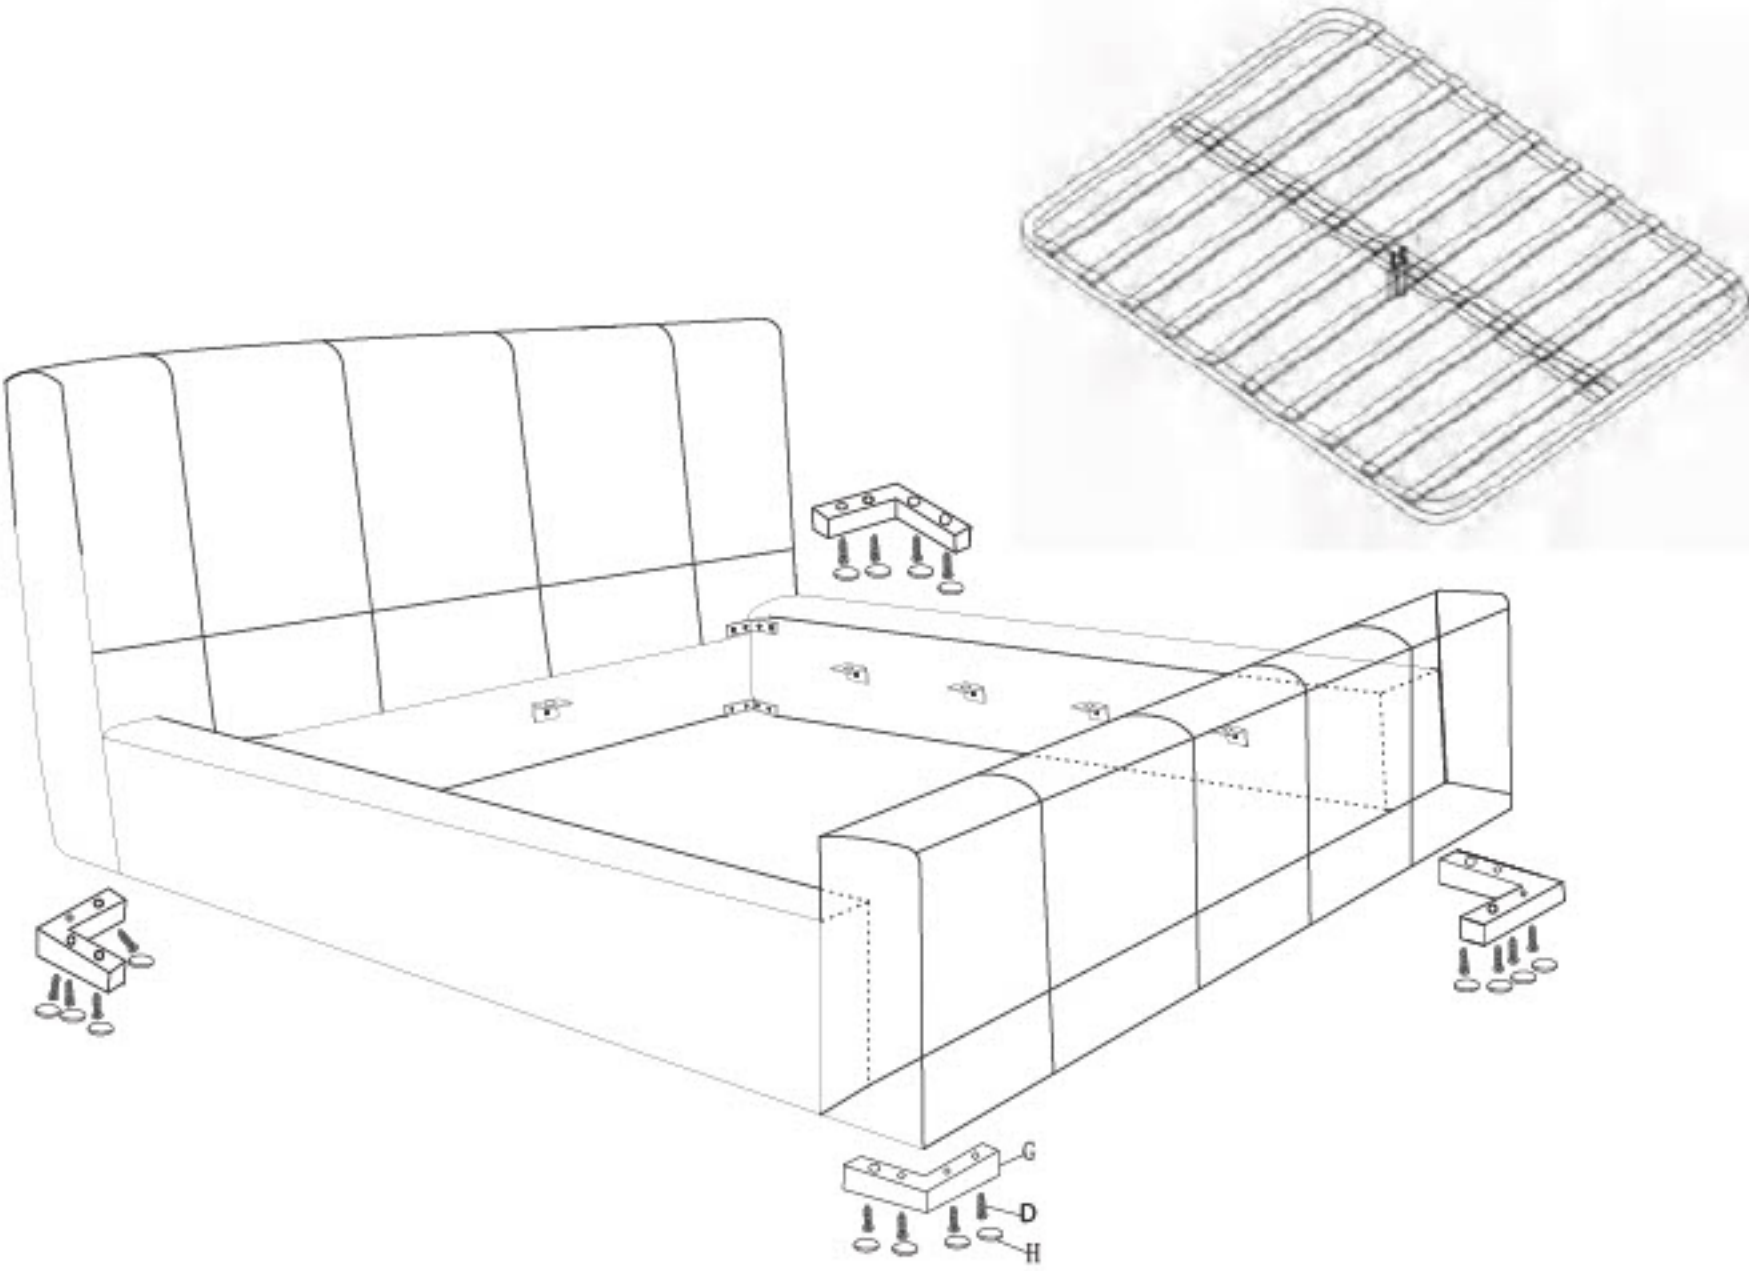








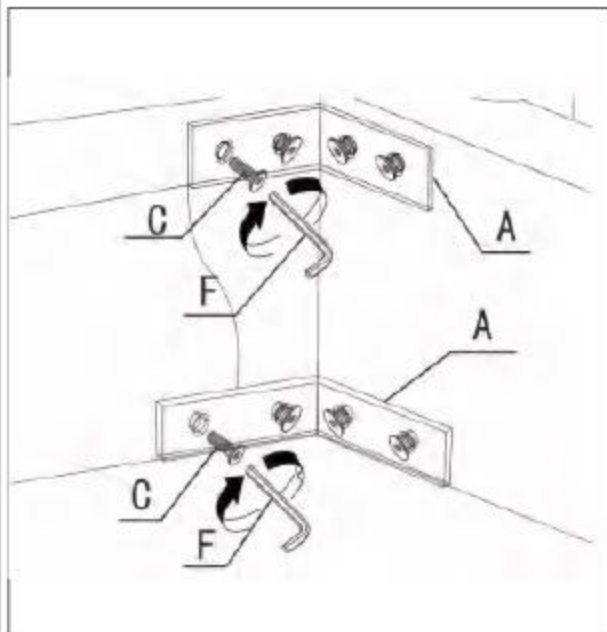
KF.B2037 Ledger



Accessory code	PCS	Hardware Parts
A	8	
B	12	
C	44	 8*25mm
D	16	
E	12	
F	1	
G	4	
H	10	
I	2	 25cm


Please ensure all parts and hardware are including before getting started.

1




Attach metal angle A to headboard, rails and footboard, using C bolts.

2

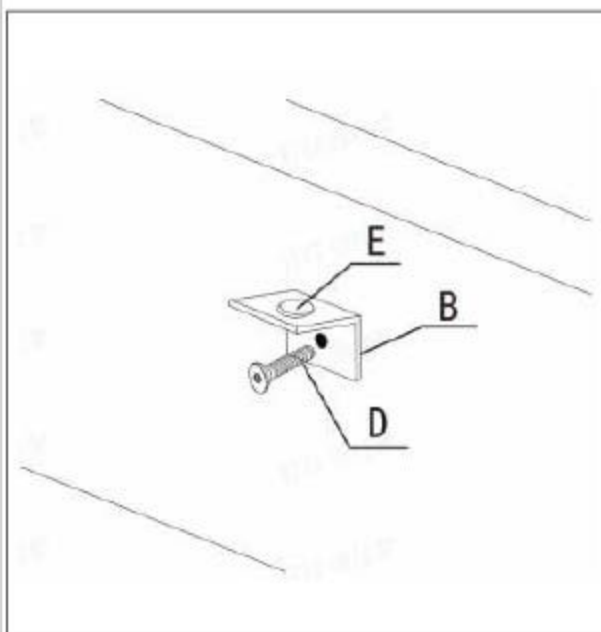

Attach metal angle B to side rails with part D bolts and put on chip E.

3

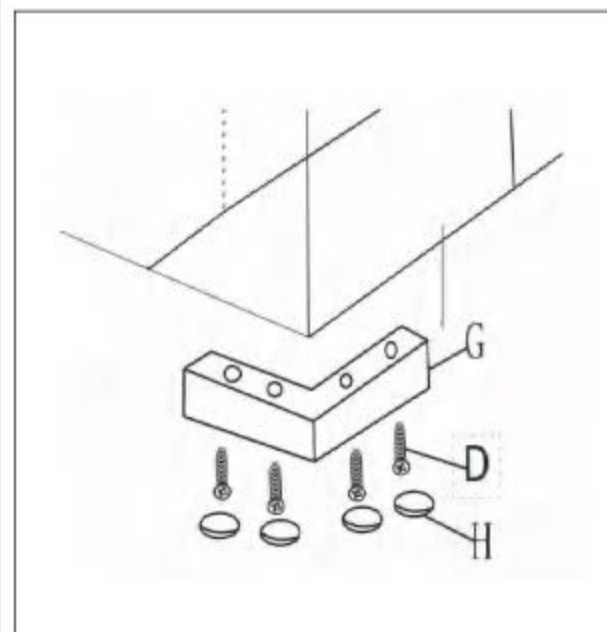

Install legs G to headboard and footboard with D bolts, put part H under the wood leg.

Size

77"×81"


4



Install support foot I to slats.


Size



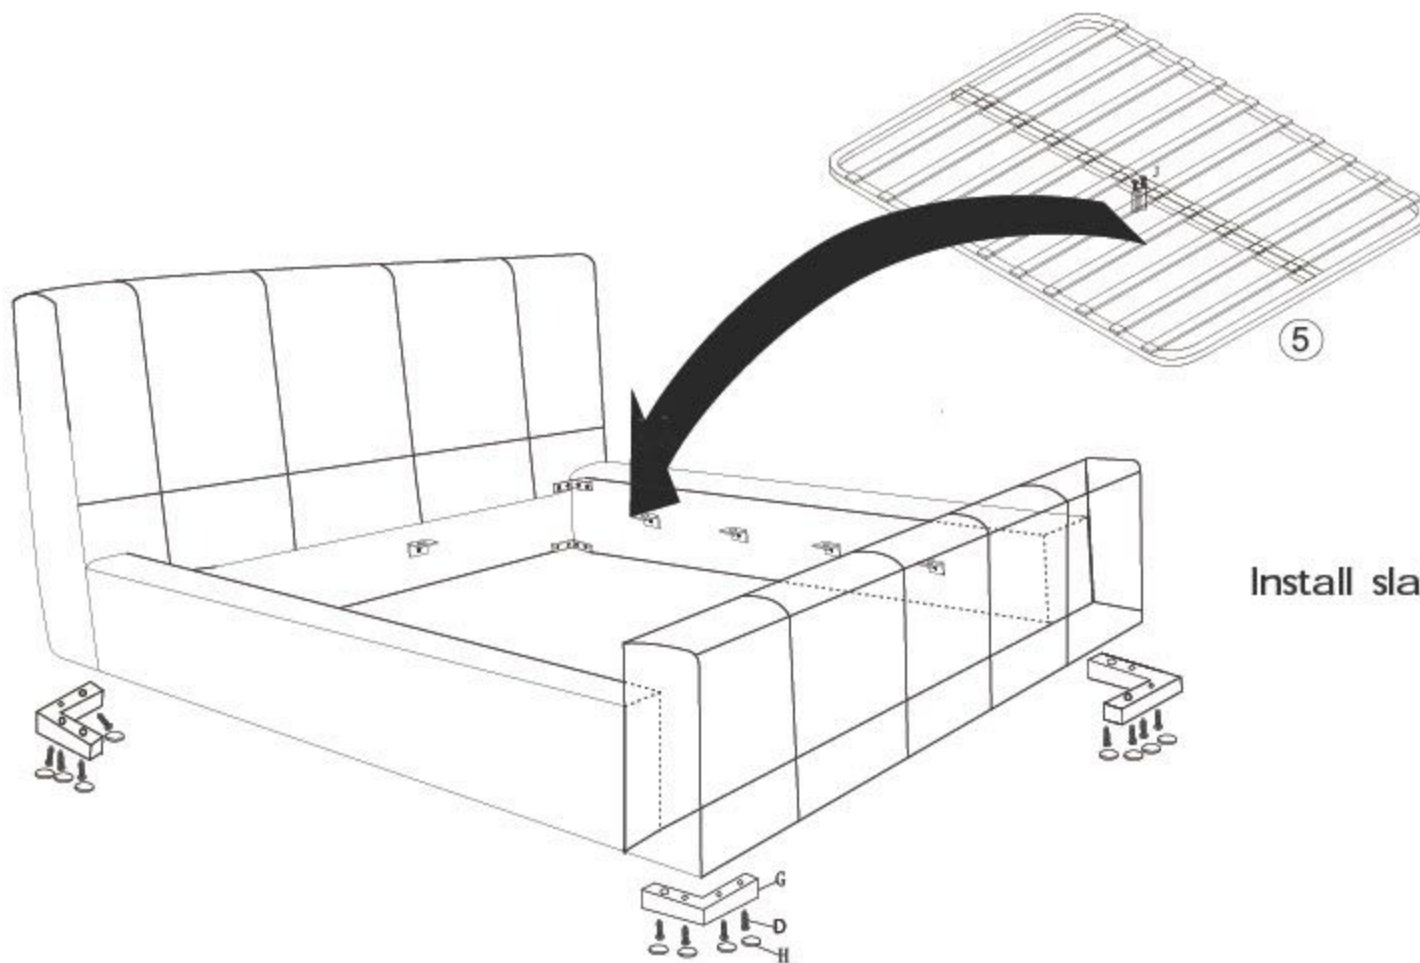



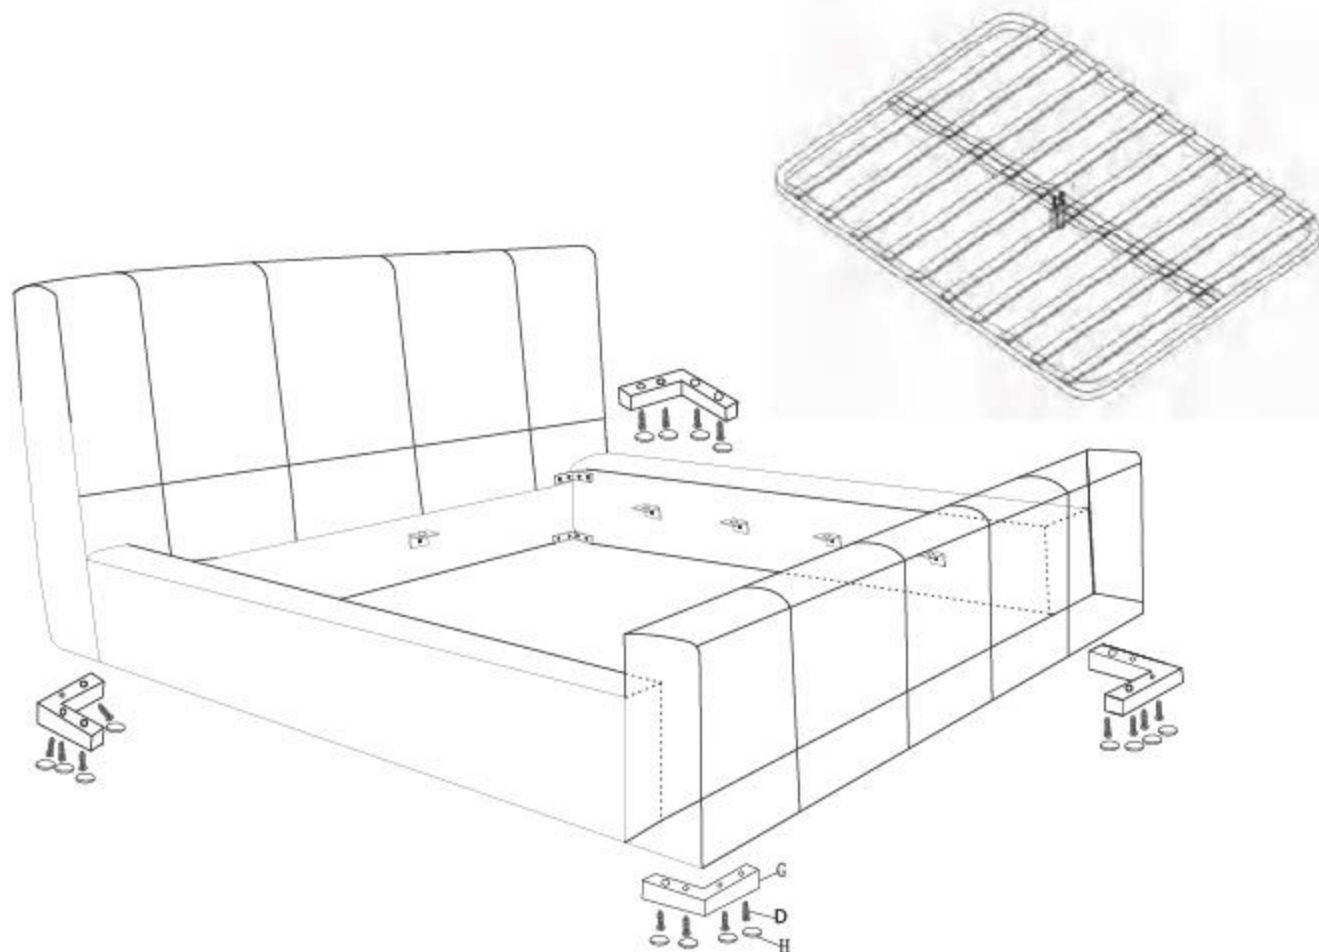


77"\*81"



Install slats on bed.


ITEM	KF.B2037
SIZE	77"*81"



Accessory code	PCS	Hardware Parts
A	8	
B	10	
C	42	 8*25mm
D	16	
E	10	
F	1	
G	4	
H	10	
I	2	 25cm


Please ensure all parts and hardware are including before getting started.

1

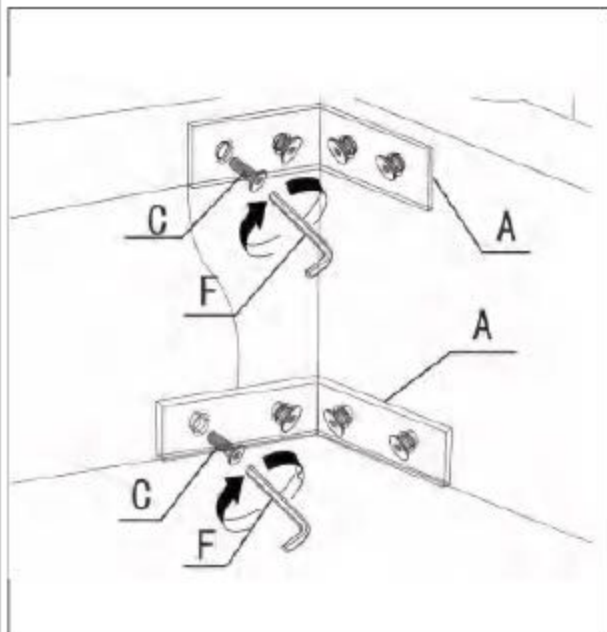


Attach metal angle A to headboard, rails and footboard, using C bolts.

2

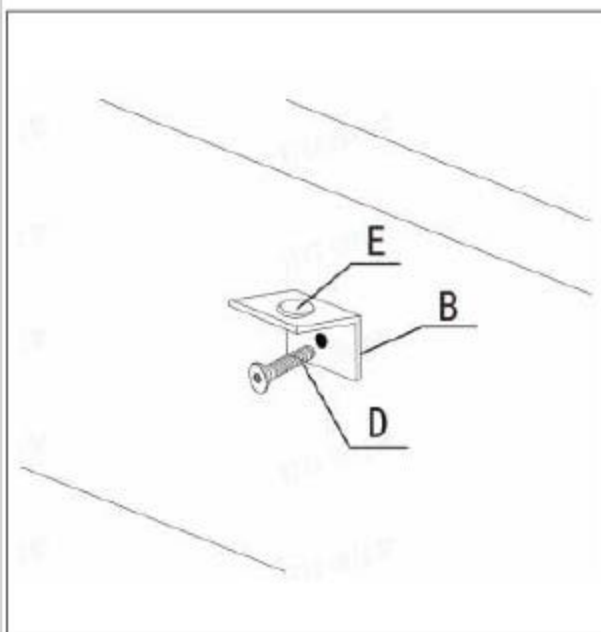

Attach metal angle B to side rails with part D bolts and put on chip E.

3

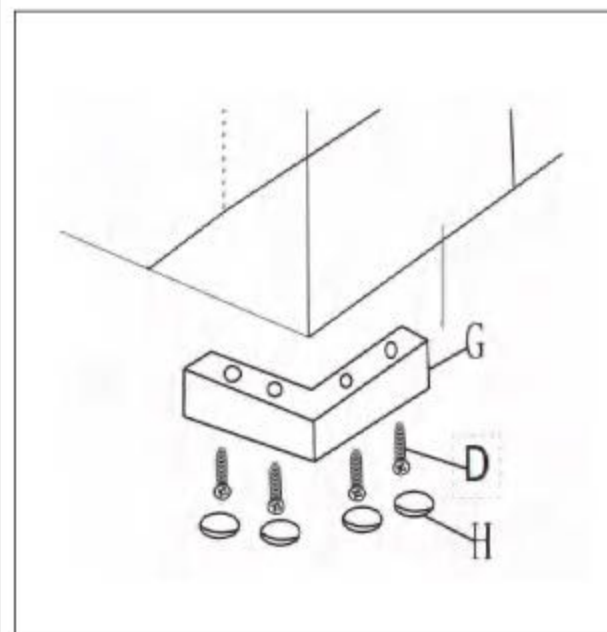

Install legs G to headboard and footboard with D bolts, put part H under the wood leg.

Size

61"×81"

4




Install support foot I to slats.

Size

61"×81"



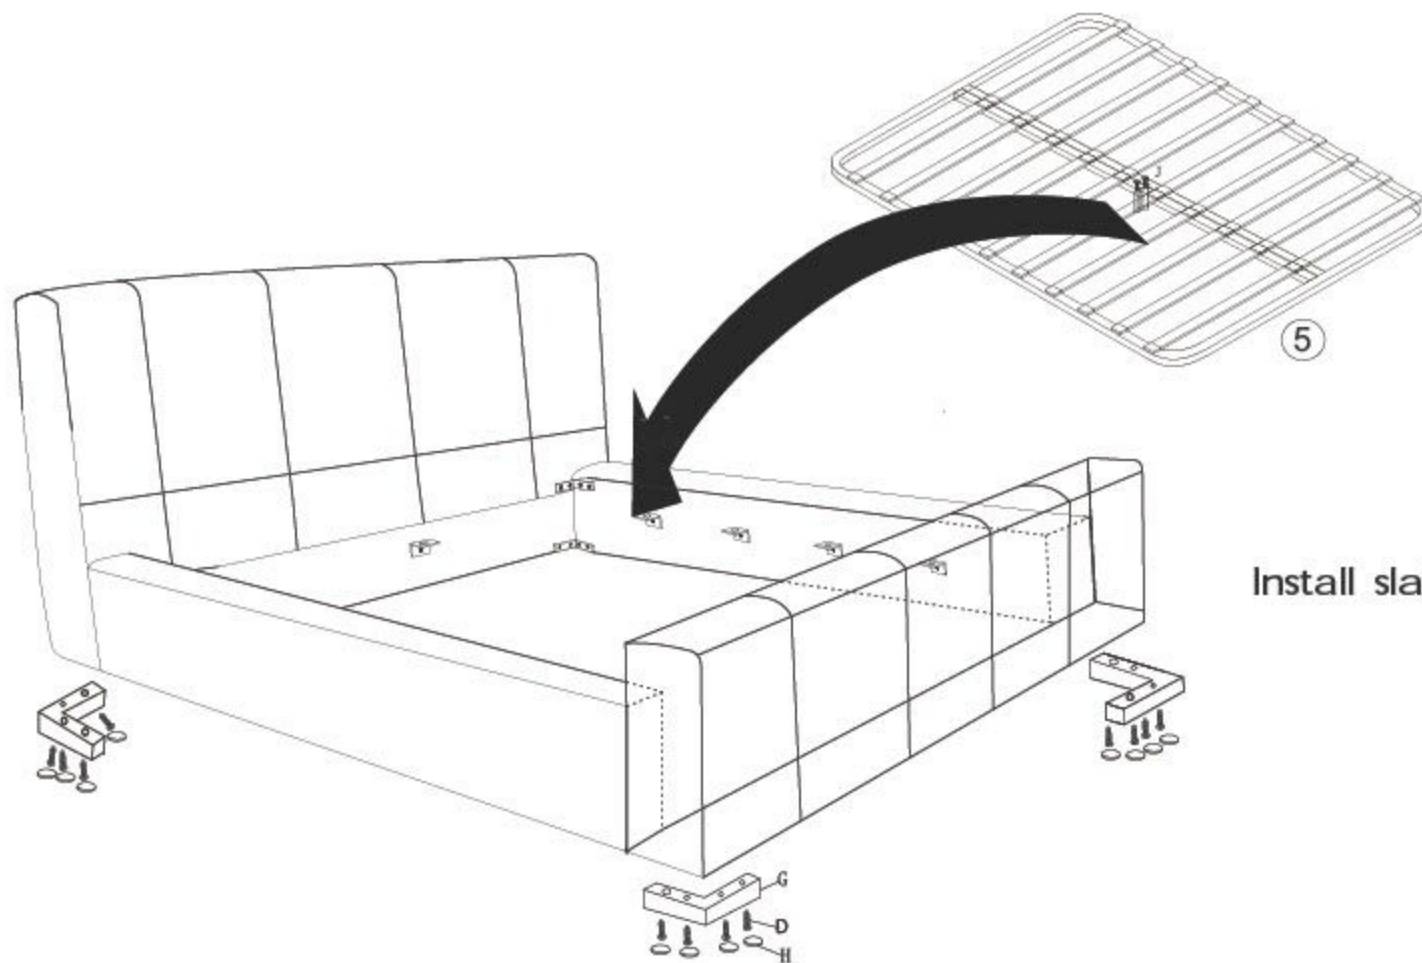

Install slats on bed.

ITEM	KF.B2037
SIZE	61"*81"