












KF.B2039MX CLIFTON

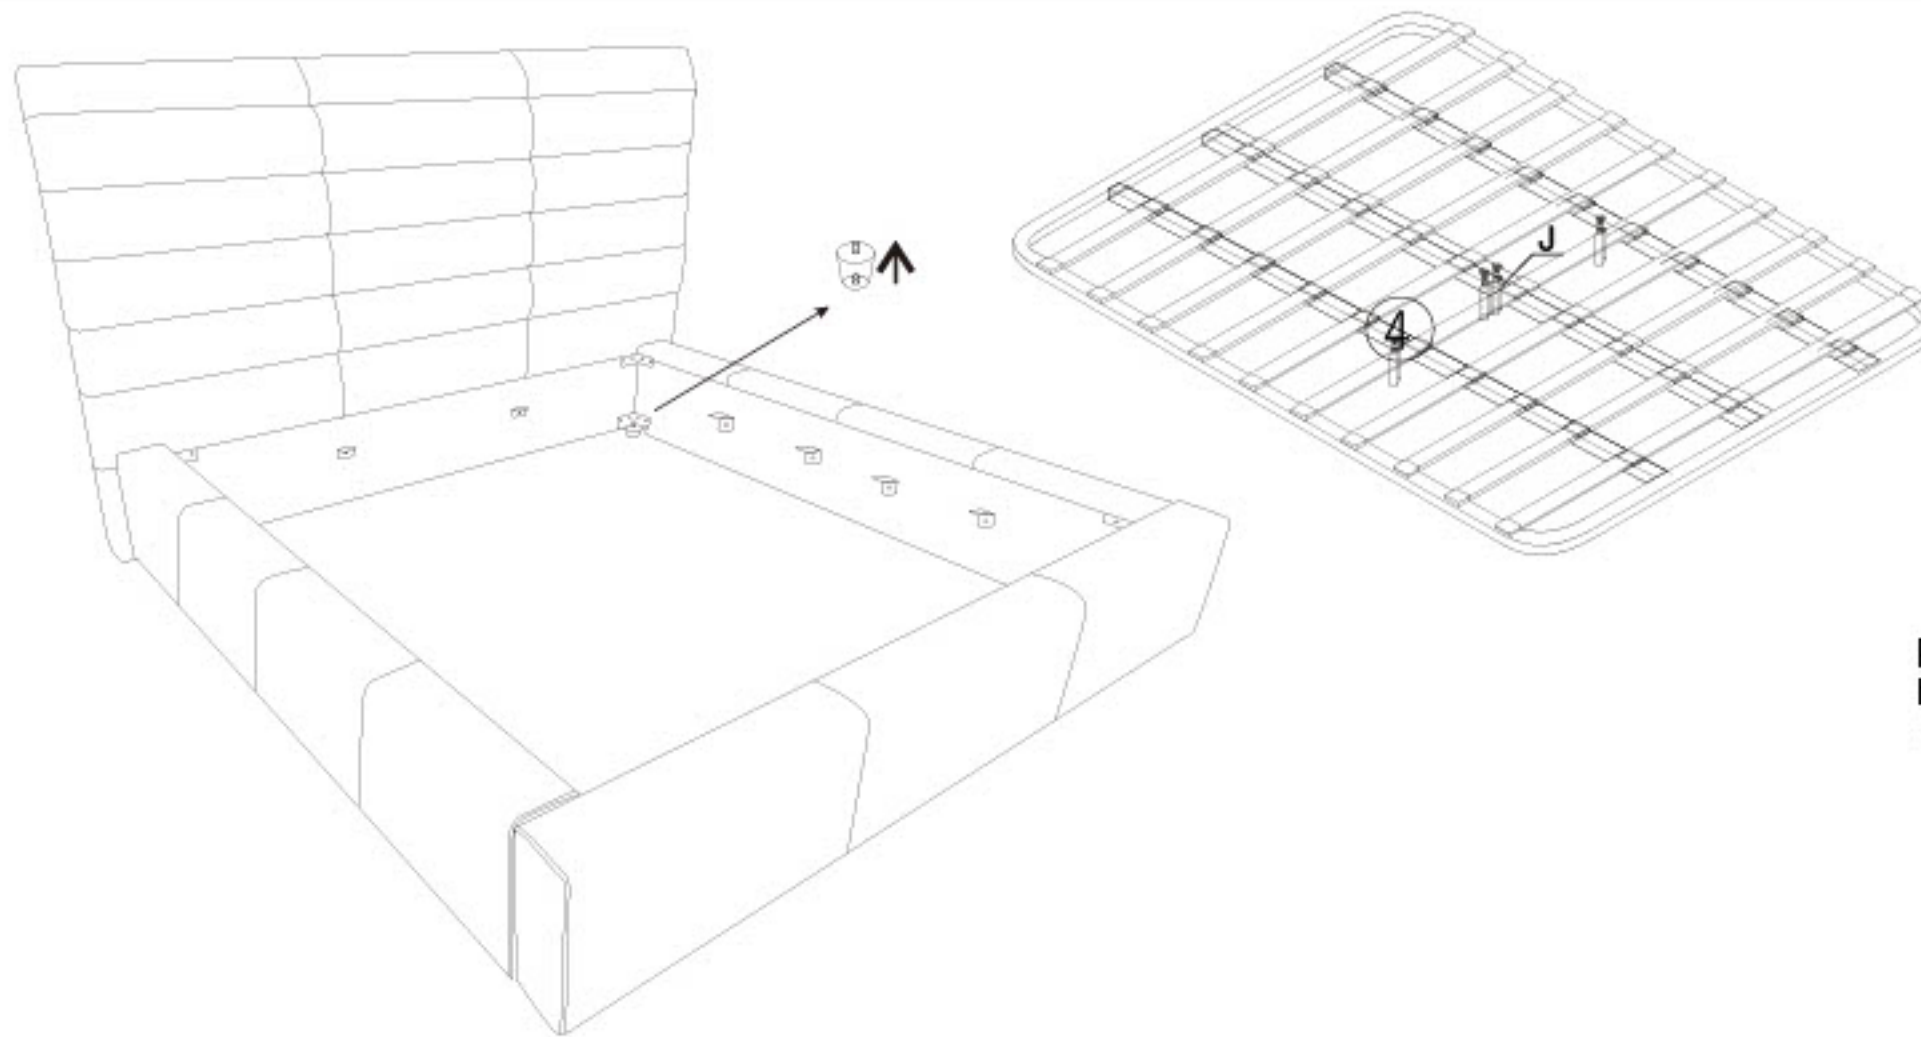


Accessory code	PCS	Hardware Parts
A	4	
B	4 只	
C	12	
D	44	 8*25mm
E	4	
F	12	
G	4	
H	4	 8mm
I	1	
J	4	 25cm

Please ensure all parts and hardware are including before getting started.


ITEM	KF. B2039MX
SIZE	77"X81"

1

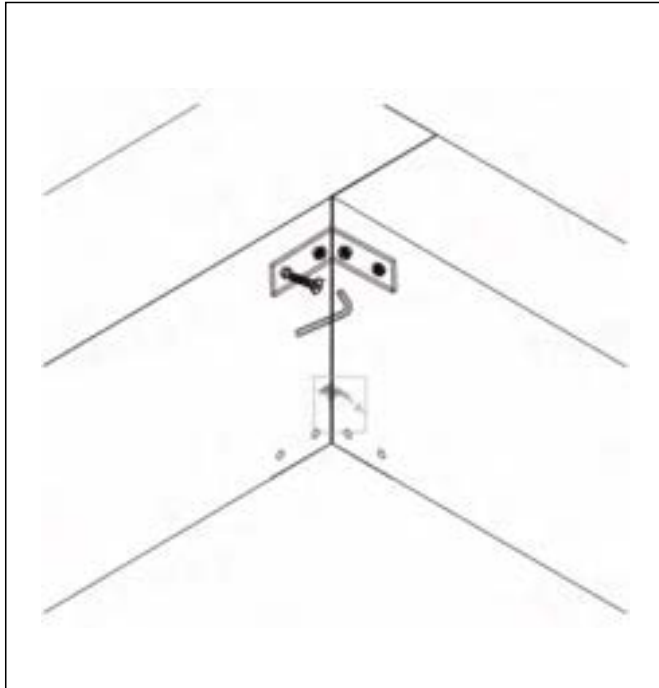


Attach metal angle A to headboard, rails and footboard, using D bolts.

2

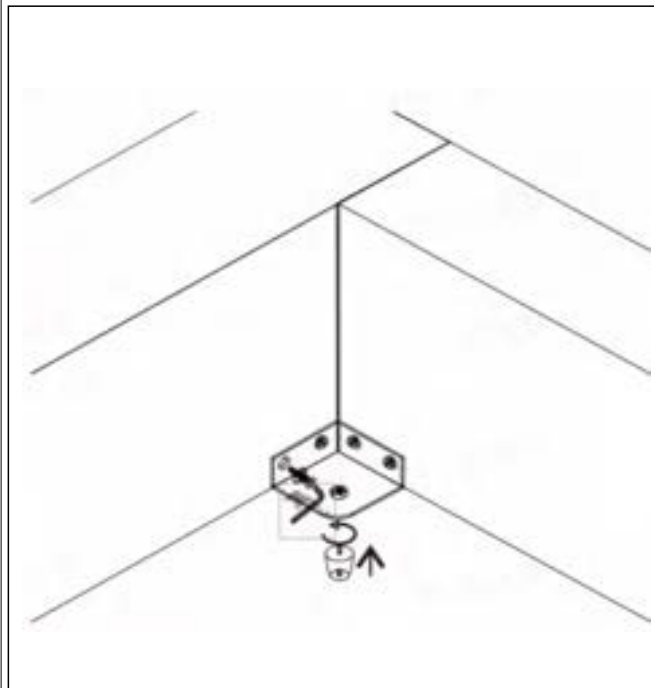

Install metal angle B to headboard , rails and footboard, using part D bolts.

3

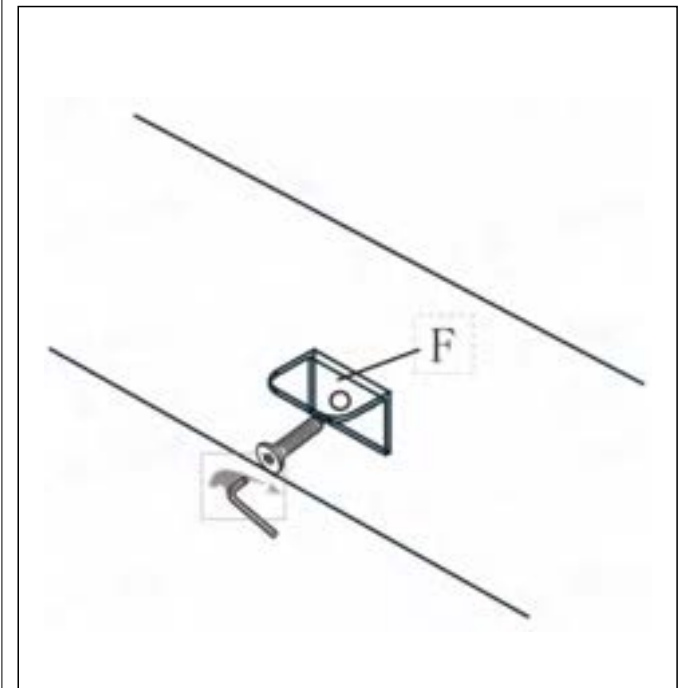


Install metal angle C to rails with D bolts, put on cotton chips F.

Size

77"*81"

4

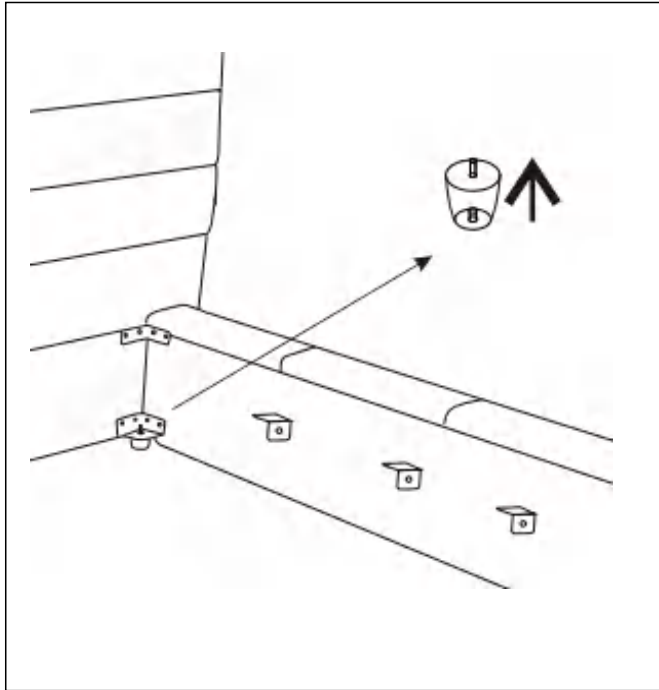

Install plastic legs G by using part E and part H .



5



Install support foot J to slats.

Size


77"×81"

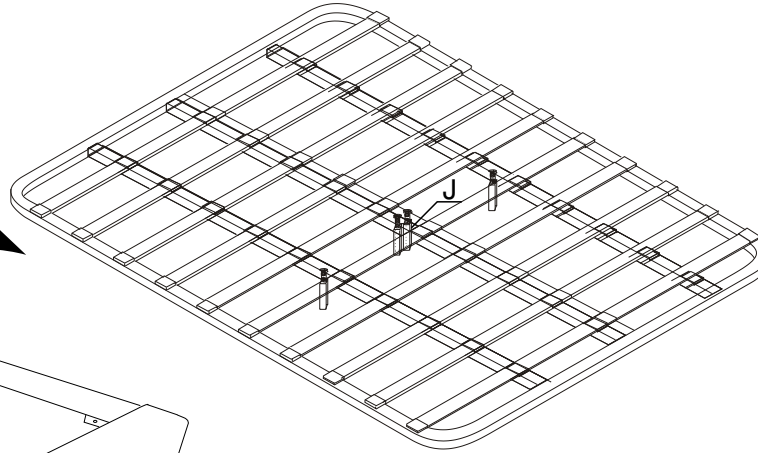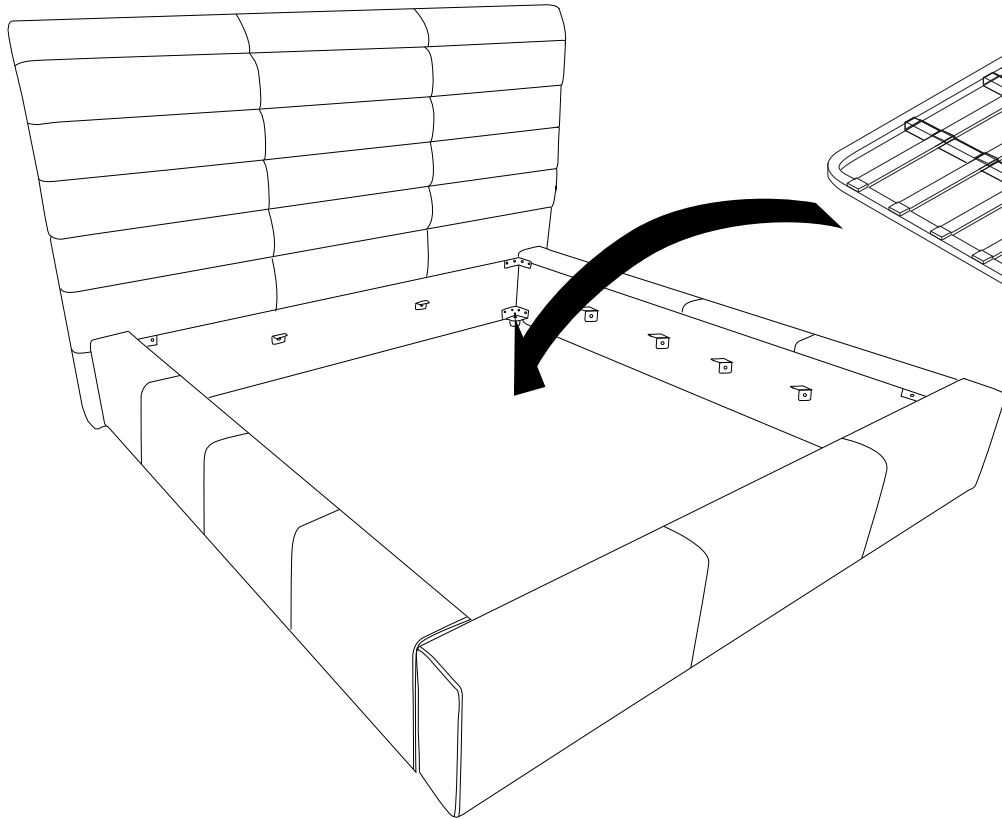







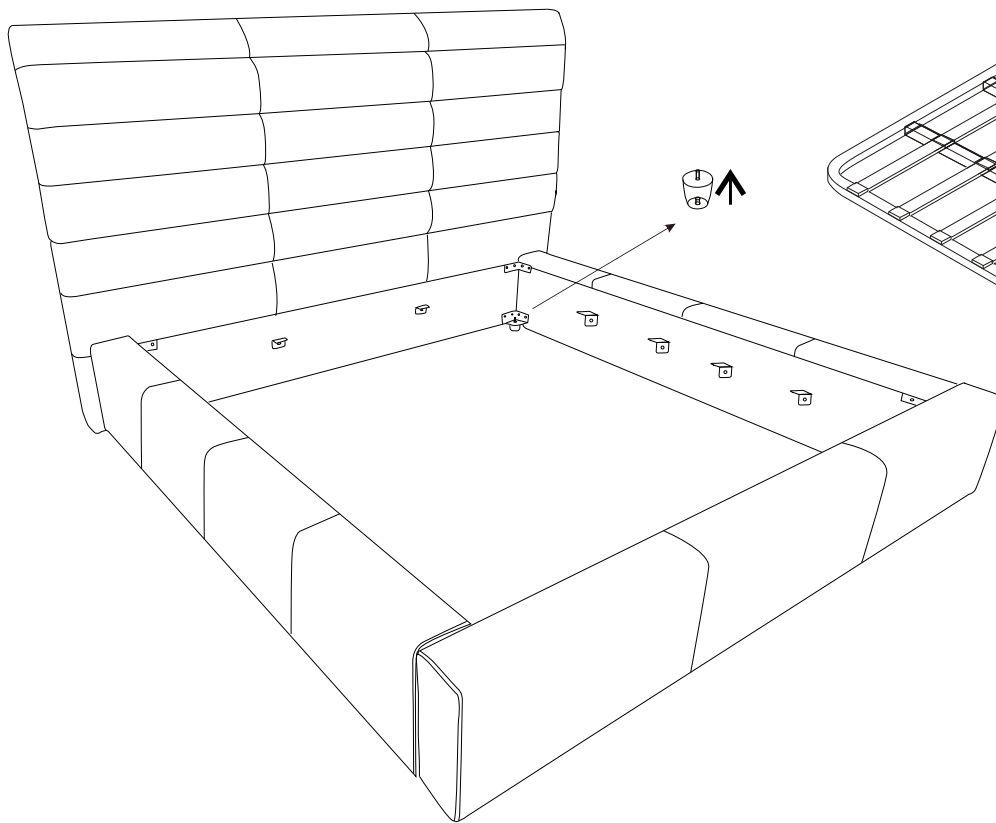



6

Install slats on bed.

ITEM	KF.B2039MX
SIZE	77"*81"




Accessory code	PCS	Hardware Parts	
A	4		
B	4		
C	12		
D	42		8*25mm
E	4		
F	10		
G	4		
H	4		8mm
I	1		
J	4		25cm

Please ensure all parts and hardware are including before getting started.


ITEM	KF. B2039MX
SIZE	61"X81"

1

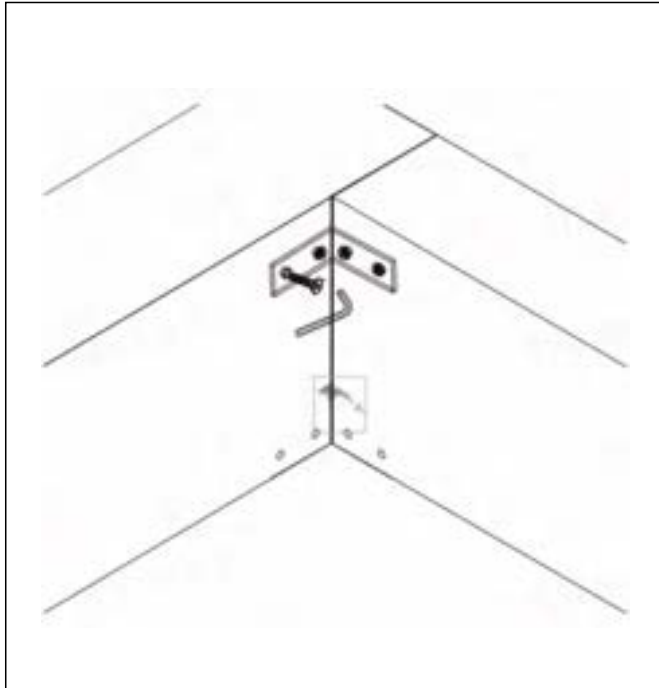


Attach metal angle A to headboard, rails and footboard, using D bolts.

2

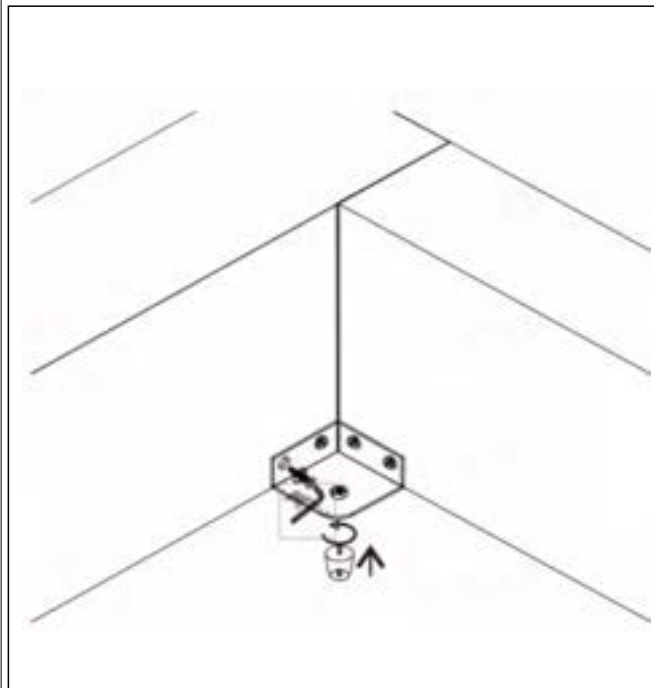

Install metal angle B to headboard , rails and footboard, using part D bolts.

3

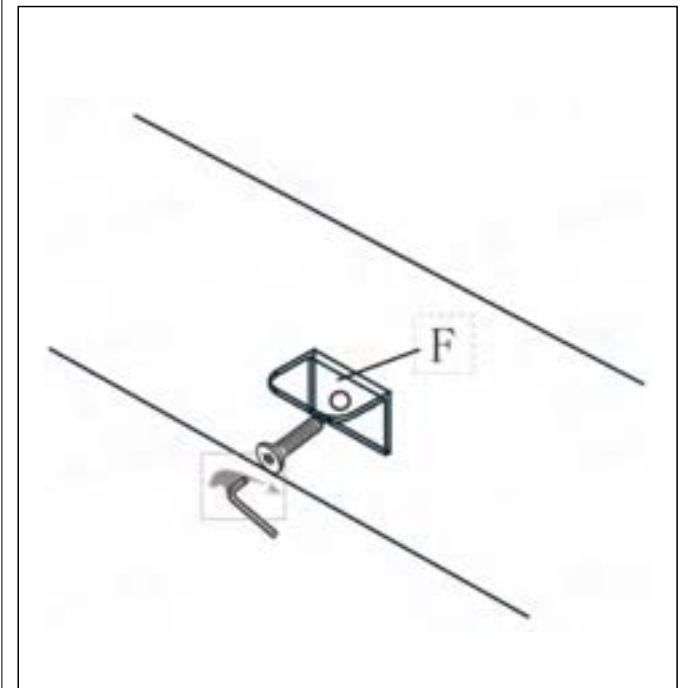


Install metal angle C to rails with D bolts, put on cotton chips F.

Size

61"*81"

4

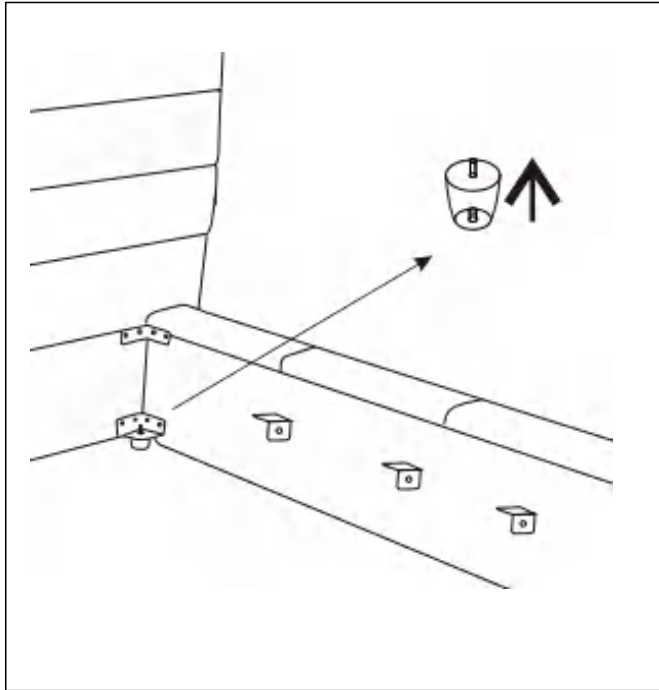

Install plastic legs G by using part E and part H .


5



Install support foot J to slats.

Size

61"×81"

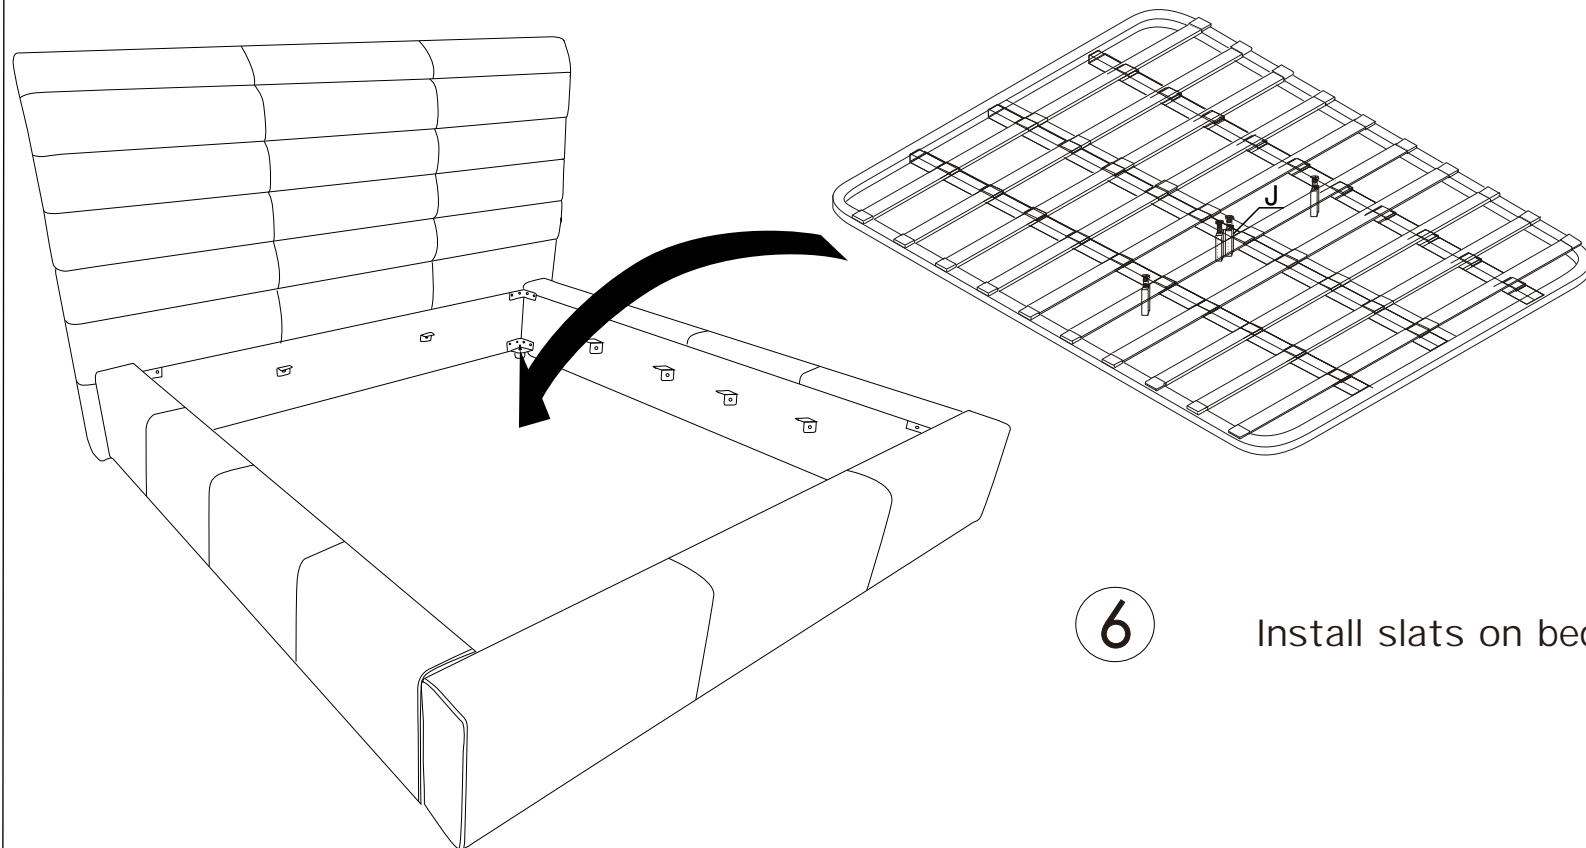

6

Install slats on bed.

ITEM	KF.B2039MX
SIZE	61"*81"