

DAYLiTE4 MKIII SOFTBOX ASSEMBLY INSTRUCTIONS



Softbox Parts.



Rods



Diffuser



Backing Material



Daylite4 MKIII Head

ASSEMBLY INSTRUCTIONS

Where To Insert the Rods



Fig. 1

The rods for this softbox insert directly into small holes located around the outer-edges of the DAYLiTE4 MKIII head. Please insert rods into the four holes marked in red in the above photo (Figure 1).

Step 1.



Inset the thinner end of the rod into one of the holes shown in figure 1.

Step 2.



Insert the other tip of a rod into the small pocket, located at the outer-edge of the softbox backing material.

Step 3



Insert the second rod into the hole diagonally opposite the first, then Insert the tip of a rod into the small pocket, located at the outer-edge of the softbox backing material as before.


ASSEMBLY INSTRUCTIONS

Step 4.



Now insert the remaining rods as before, to complete the main structure of the softbox. P.S. Please be aware that the final rod will require a bit more force to insert than the rest due to added tension from the other three rods.

Step 5.

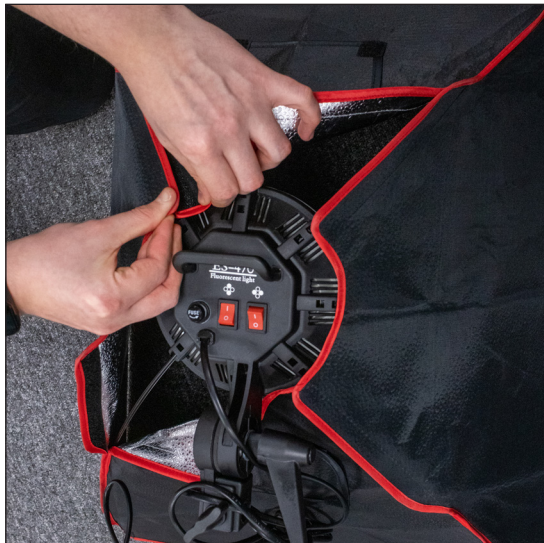

Now that the main structure of the softbox is complete, flip the softbox over and close-up the back of the softbox via the Velcro strips as shown.

Step 6.



Now all that is left to do is attach the outer diffuser. To do this, simply stretch it over the softbox frame, and attach it to the outer via the Velcro tabs, located around the external perimeter of the softbox.

PIXAPRO® LTD

Unit 5 Sterling Park, Pedmore Road, Brierley Hill
West Midlands, DY5 1TB

Tel: 0121 552 3113

Company Registration No. 07601334

Web: www.essentialphoto.co.uk

E-mail: info@essentialphoto.co.uk

Facebook: www.facebook.com/EssentialPhoto.UK

Twitter: www.twitter.com/EssentialPhoto_