


# PIXAPRO 150 x 200CM SCRIM FRAME ASSEMBLY INSTRUCTIONS

## INCLUDED PARTS

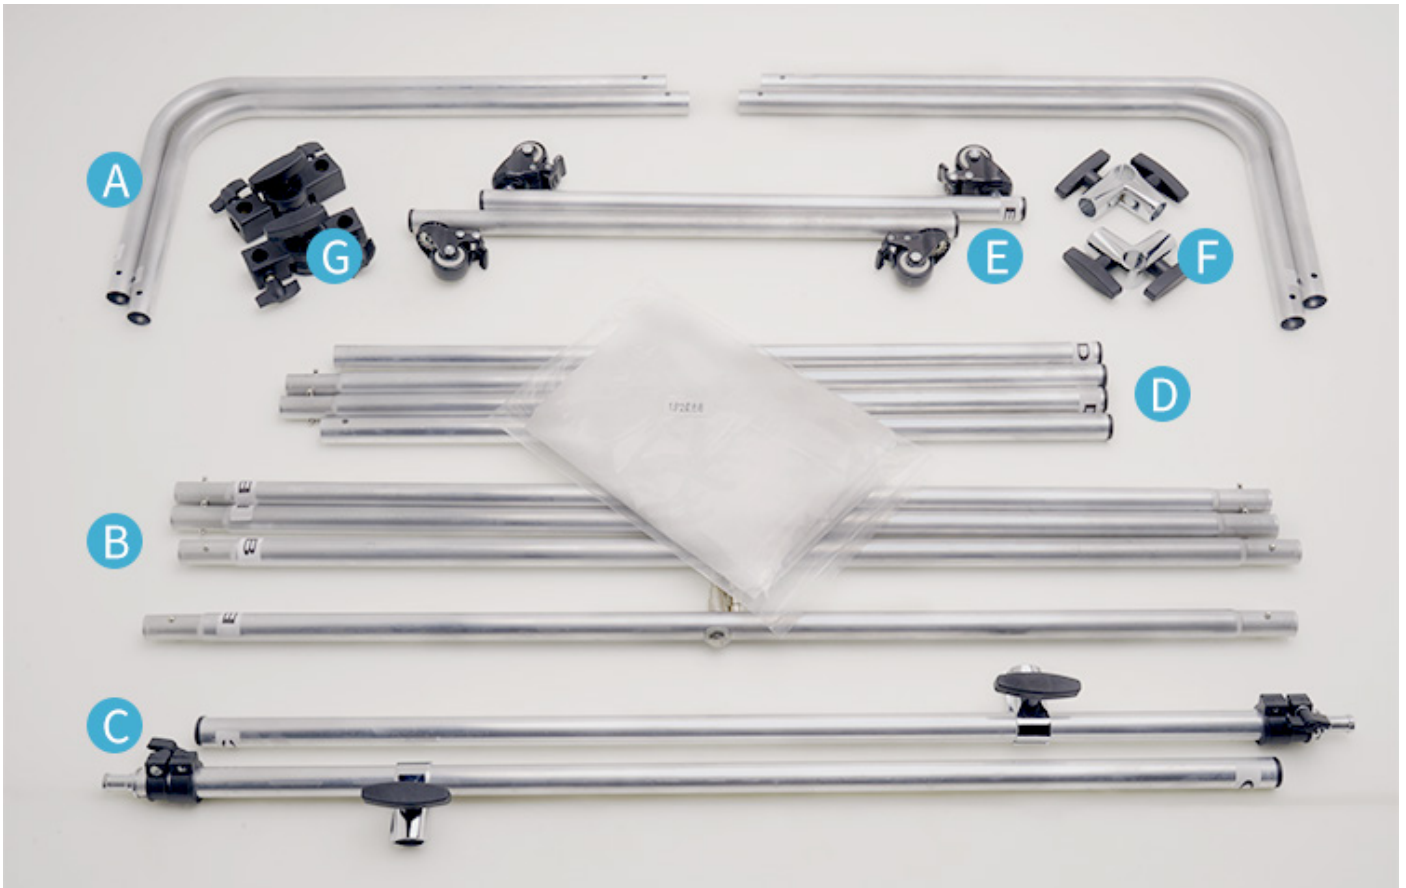


4x Corner Rod A  
4x Frame Rod B

2x Column Rod C  
4x Crossbar Rods D

2x Wheeled Rod E  
2x Rod Connector F

2x Connector-  
Brackets G

## ASSEMBLY INSTRUCTIONS

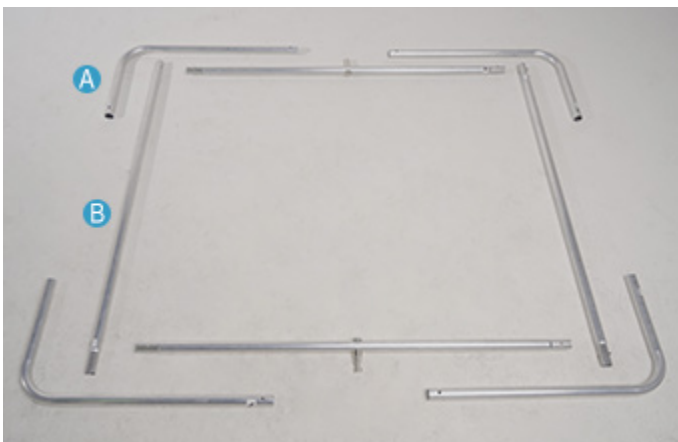

1: Take out the pipes labelled A and B, and lay them out as shown in the images above.


2: Connect the pipes together using the click lock mechanism as shown.



3: Find the four poles labelled "D" and set them on the ground as shown.



4: Now connect the two pairs of "D" Poles together as shown above.

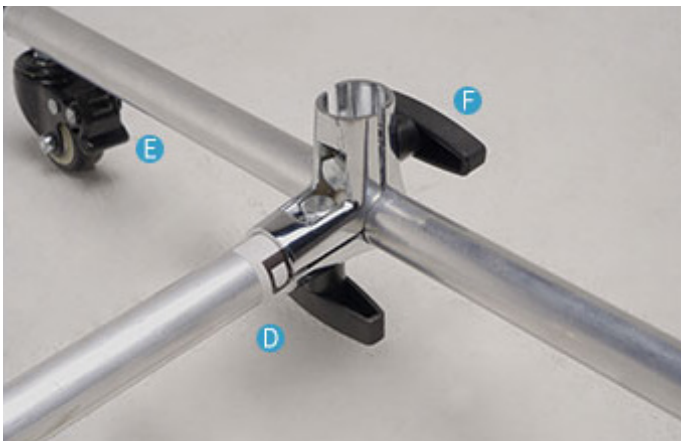

5: Take the connectors labelled "F" to connect one of the "D" rods, and the wheeled "E" rods together as shown.



6: Install the Wheeled "E" rods on both sides as shown in the image above.



7: Install the two rods labelled "C" to the "F" connectors on each side as shown. then use the remaining "D" rod to connect the two "C" rods at the top as shown.



8: Now Install the previously assembled scrim frame to the "C" rods, using the "G" brackets and the assembly of the frame is complete.