


HOW TO ASSEMBLE

THE PIXAPRO FOAM BOARD STAND WITH WHEELS

STAND PARTS

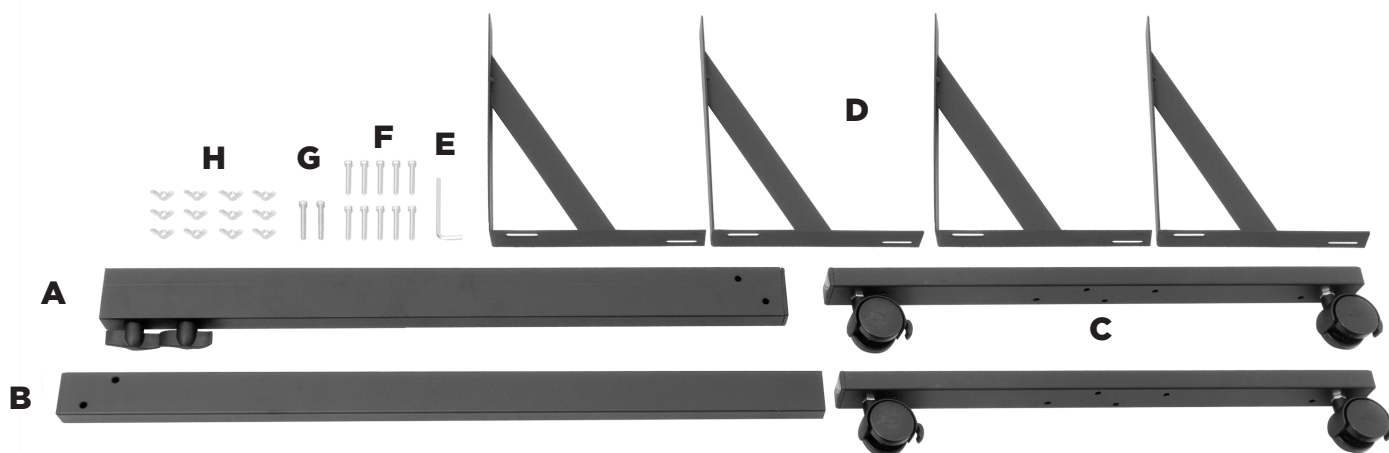


- A: Centre Bar (A)
- B: Centre Bar (B)
- C: Wheeled Bars (x2)
- D: Angle Brackets (x4)
- E: Allen Key
- F: Short Bolts (x10)
- G: Long Bolts (x2)
- H: Wing Nuts (x12)

Step 1



Loosen the winged screws on Centre Bar (A), and insert Centre Bar (B) into Centre Bar (A). Once you have set the two bars to their desired length, tighten the winged screws to secure the two bars together.

Step 2

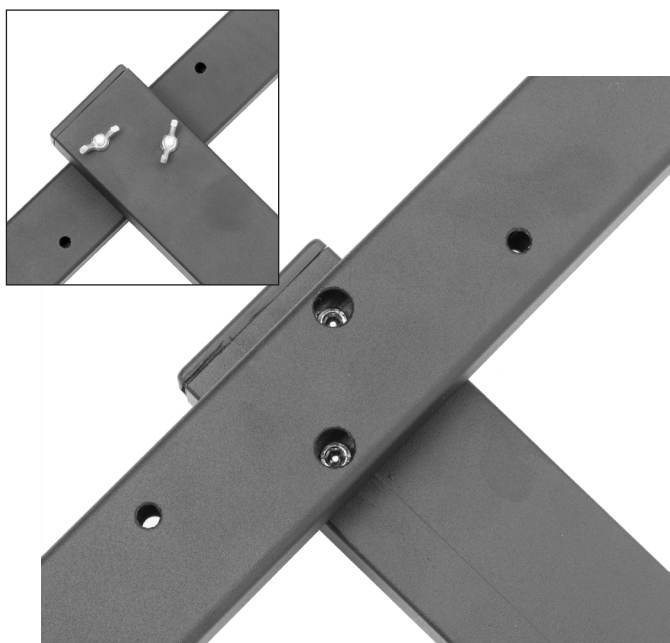

Get one of the Wheeled Bars (C) and align the screw holes over the screw holes on Centre Bar (A), ensuring that the larger holes are facing upward as shown. Once aligned, take the two slightly longer bolts (G) and insert them into the holes.

Once inserted into the screw holes, place a wing nut (H) at the bottom end of each bolt and tighten. Use the Allen Key (E) to fully tighten the bolts.

HOW TO ASSEMBLE


THE PIXAPRO FOAM BOARD STAND WITH WHEELS

Step 3



Repeat the same process as Step 2 to complete the base, only this time, you use two of the shorter bolts (F).

Step 4

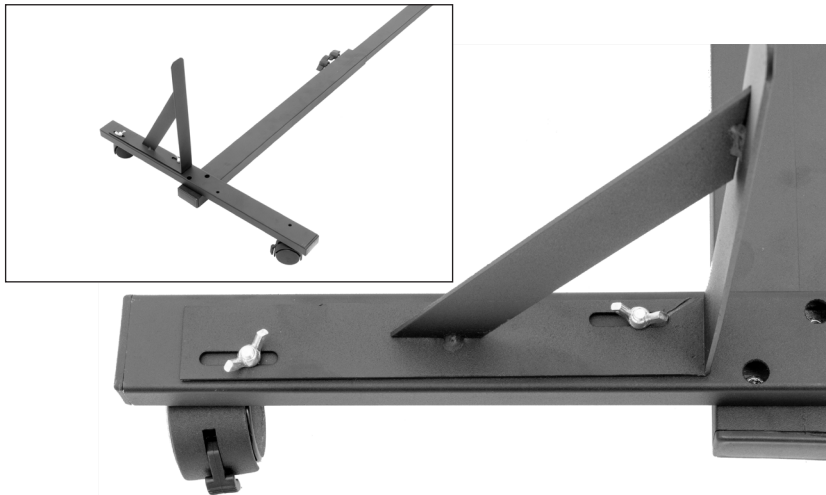

Now that the base is complete, you can now start attaching the brackets to the wheeled bars. take two of the shorter bolts (F) and two of the wing nuts (H), and attach the brackets with the wing nuts at the top as shown.

Step 5



Repeat the process for all four brackets, and the Foam Board Stand is now complete



PIXAPRO[®]

Unit 5 Sterling Park, Pedmore Road, Brierley Hill, West Midlands DY5 1TB

Tel: +44 (0)121 552 3113

Email: info@essentialphoto.co.uk

PIXAPRO LTD.