



KF.B2037 Milo

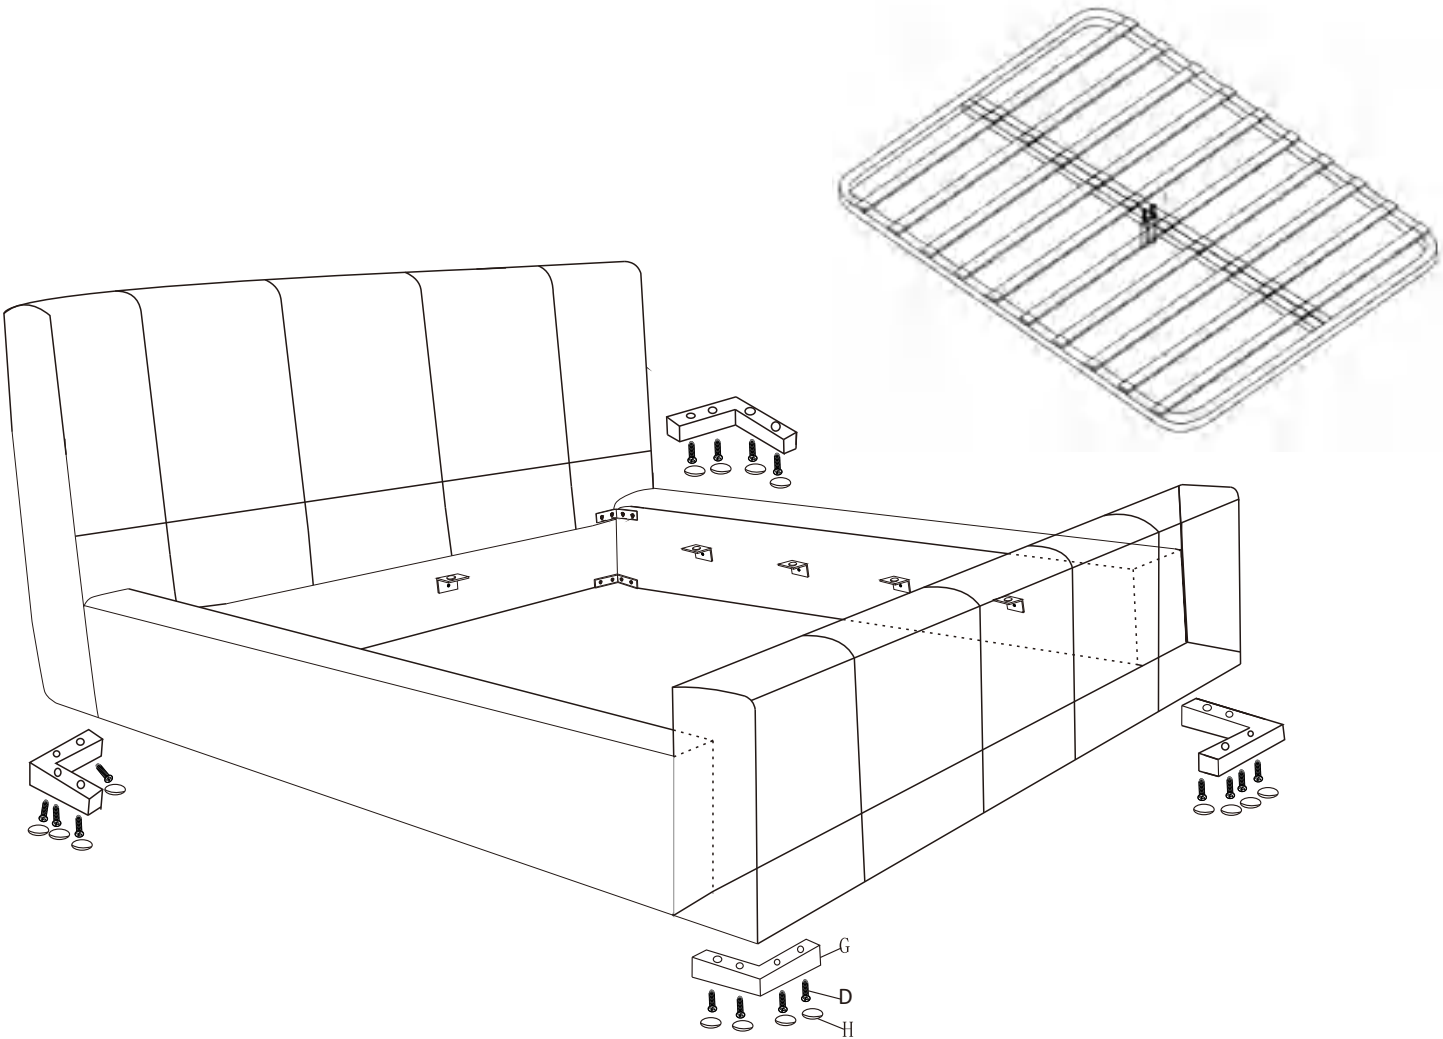

Accessory code	PCS	Hardware Parts	
A	8		
B	12		
C	44		8*25mm
D	16		
E	12		
F	1		
G	4		
H	10		
I	2		25 cm


Please ensure all parts and hardware are including before getting started.

1

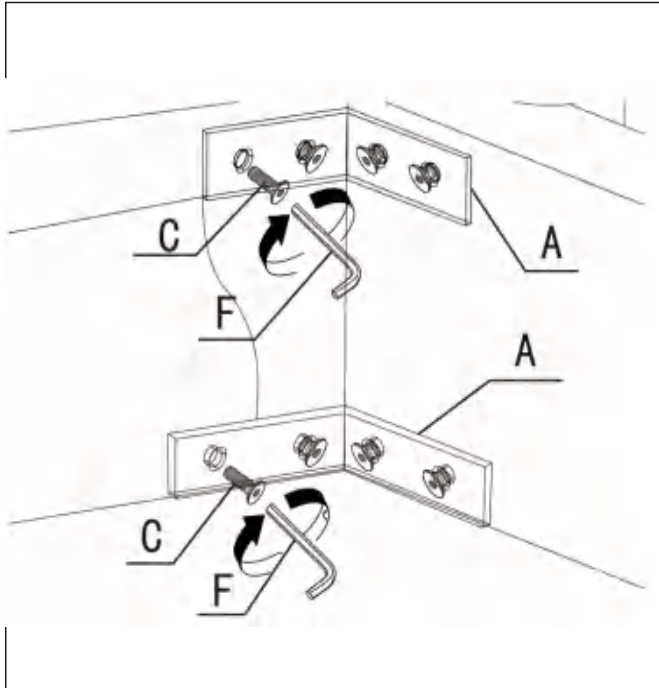


Attach metal angle A to headboard, rails and footboard, using C bolts.

2

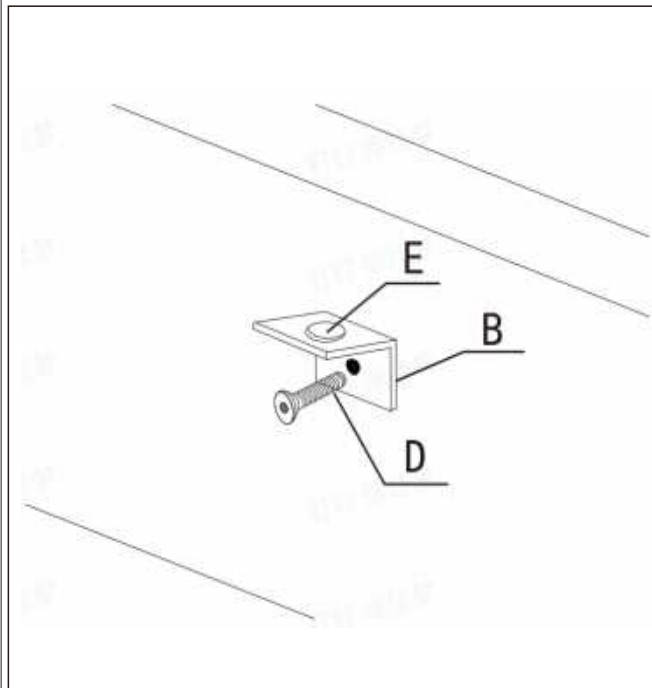

Attach metal angle B to side rails with part D bolts and put on chip E.

3

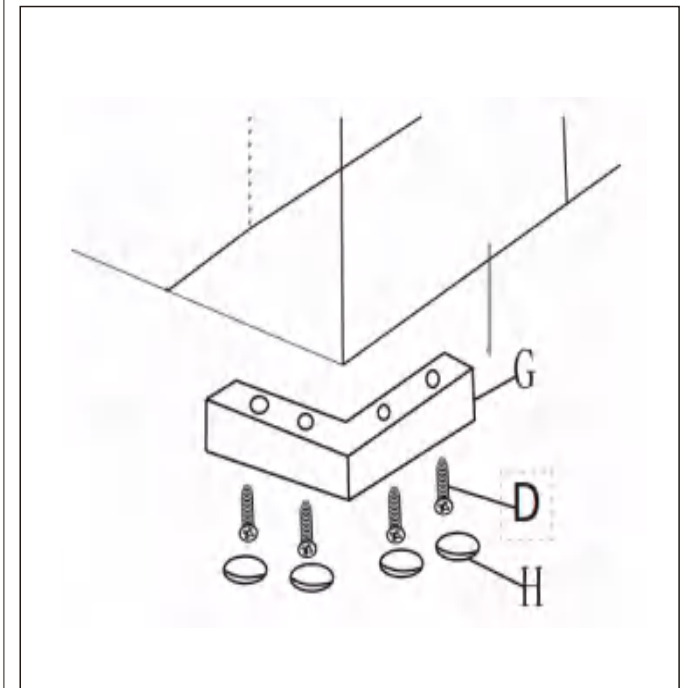

Install legs G to headboard and footboard with D bolts, put part H under the wood leg.

Size

77"×81"


4



Install support foot I to slats.


Size

77"*81"

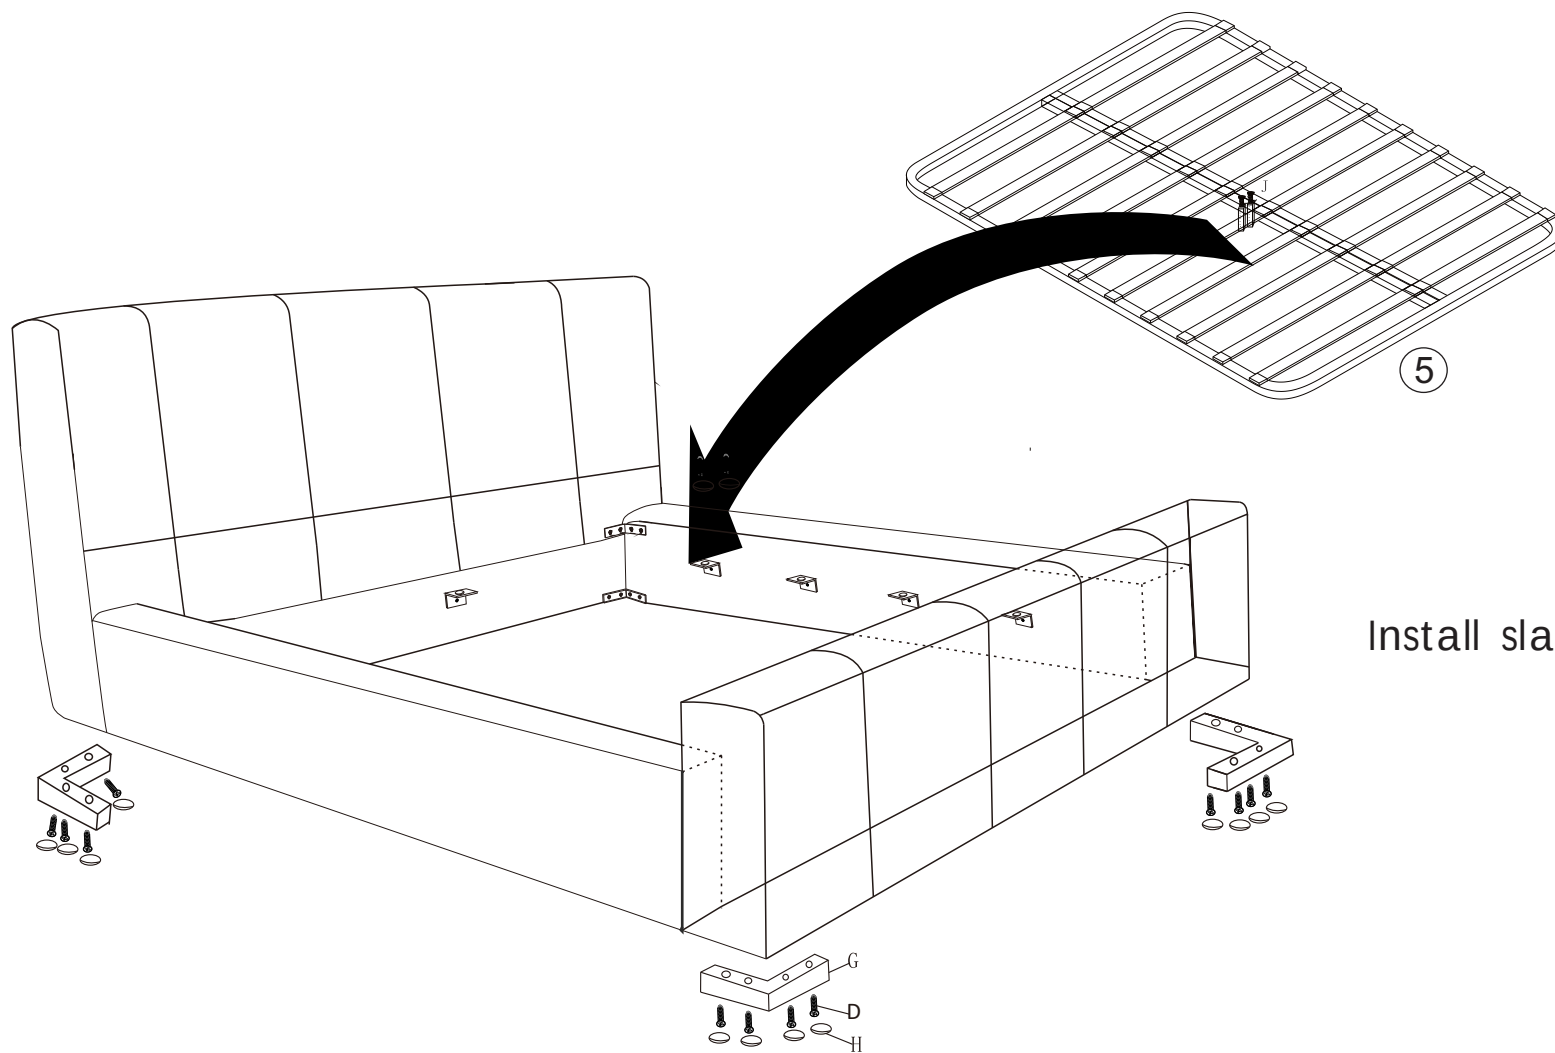

Install slats on bed.


ITEM	KF.B2037
SIZE	77"*81"

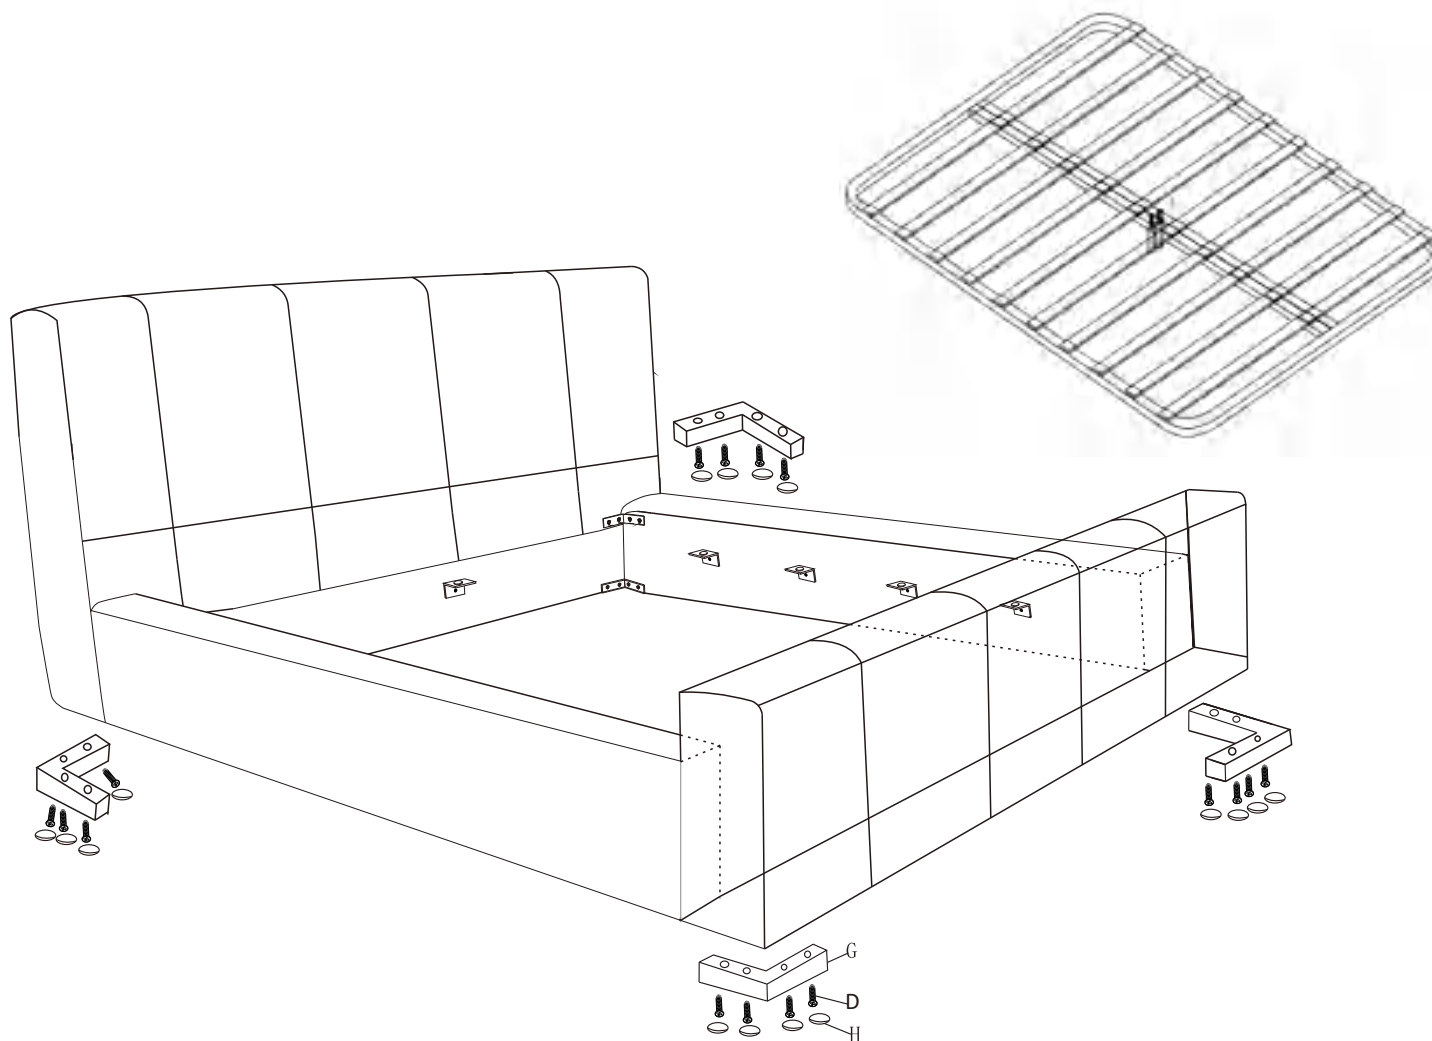

Accessory code	PCS	Hardware Parts	
A	8		
B	10		
C	42		8*25mm
D	16		
E	10		
F	1		
G	4		
H	10		
I	2		25 cm


Please ensure all parts and hardware are including before getting started.

1

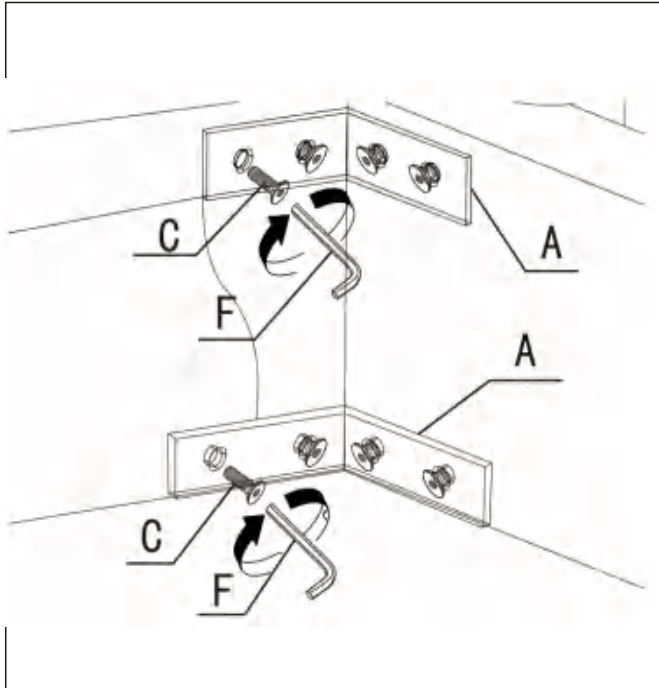


Attach metal angle A to headboard, rails and footboard, using C bolts.

2

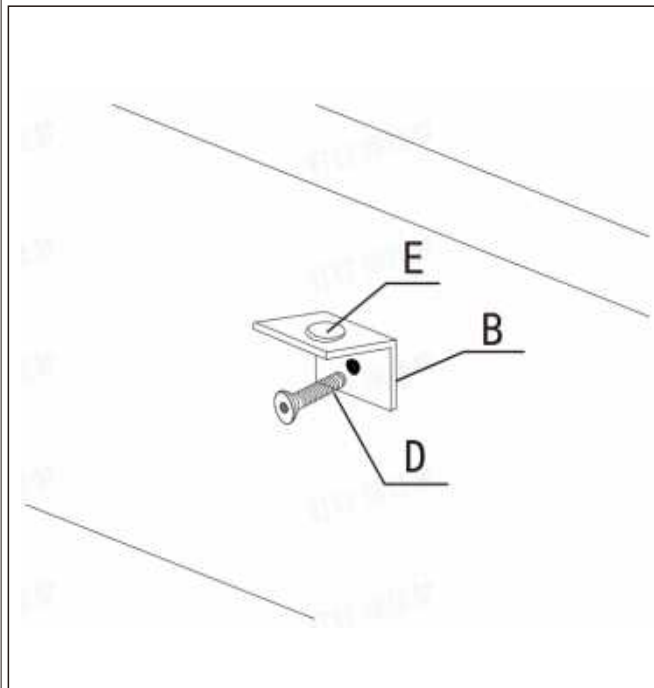

Attach metal angle B to side rails with part D bolts and put on chip E.

3

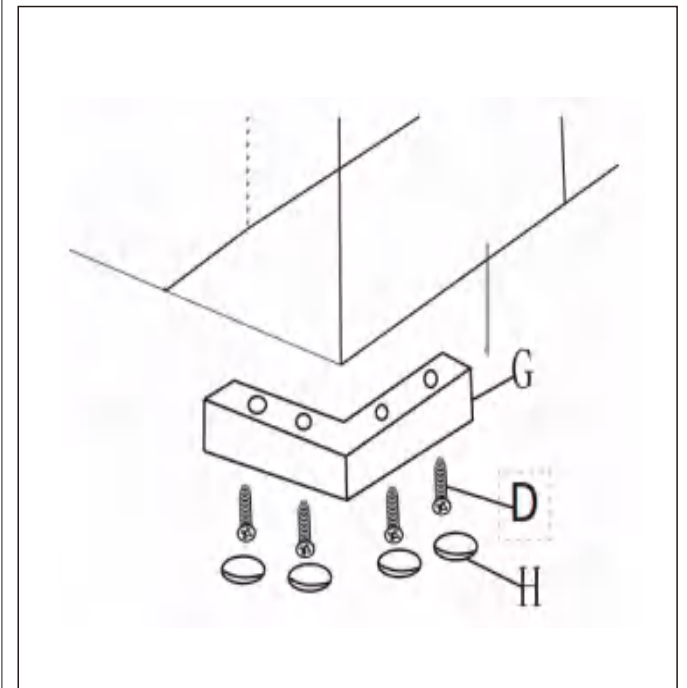

Install legs G to headboard and footboard with D bolts, put part H under the wood leg.

Size

61"×81"


4



Install support foot I to slats.

Size

61"×81"

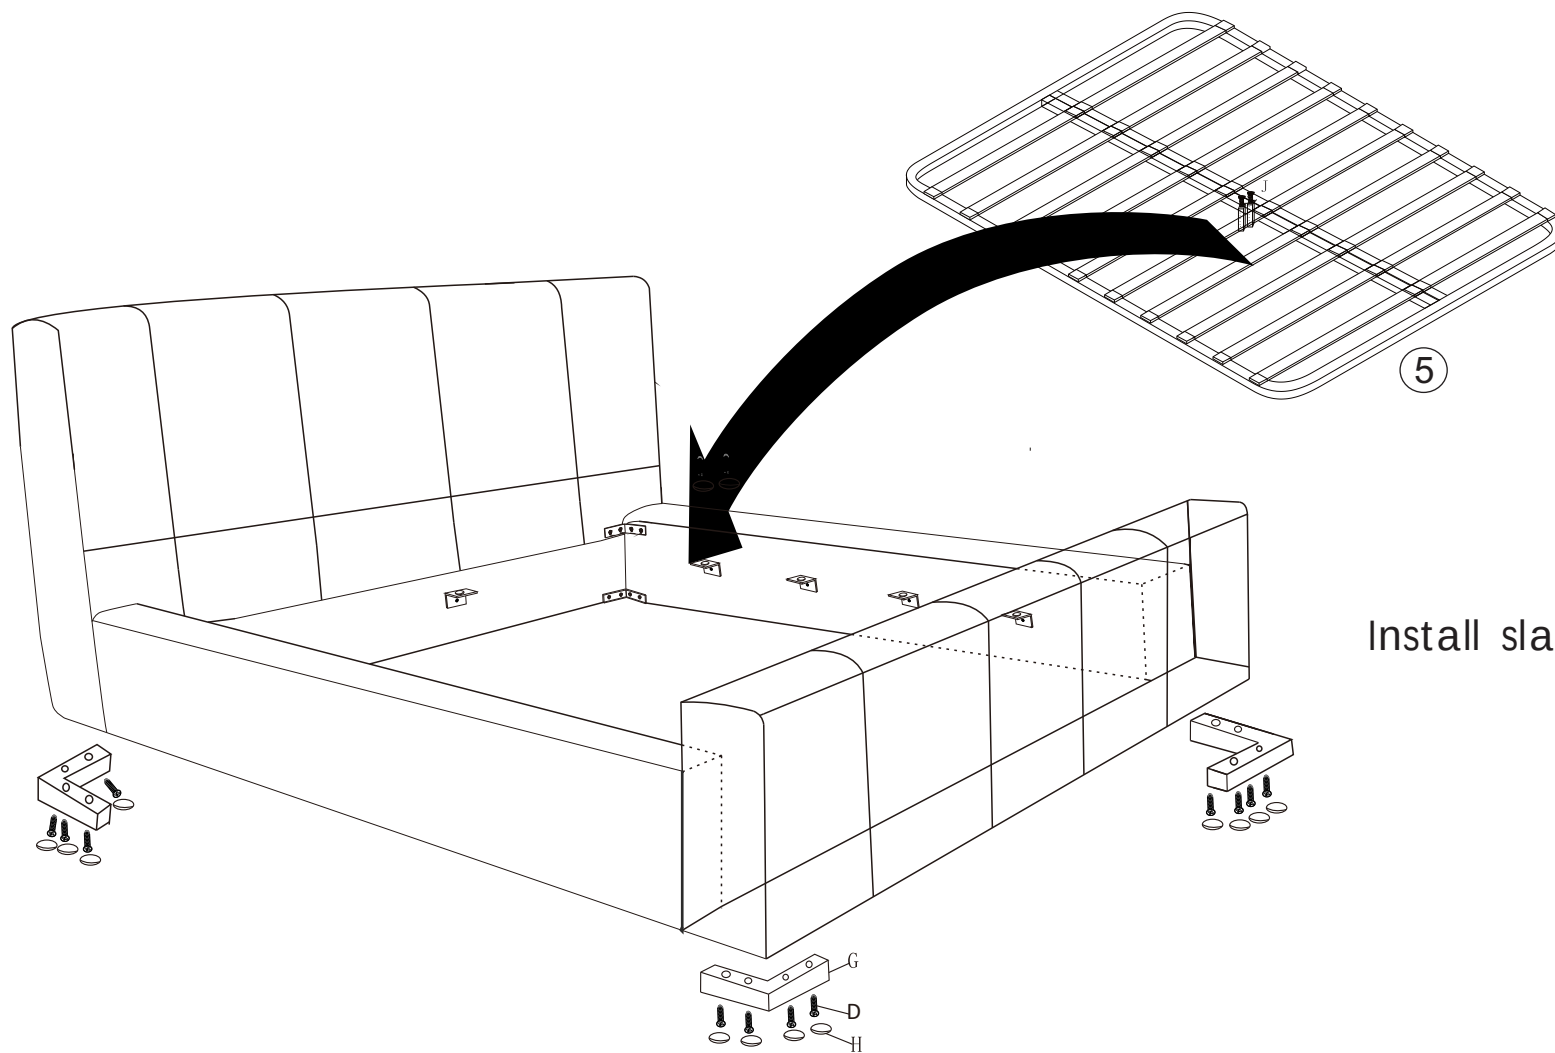

Install slats on bed.

ITEM	KF.B2037
SIZE	61"*81"