

TOILETINSTALLATION INSTRUCTIONS




APPLICABLE MODELS:

PL-12210 PL-12228


BEFORE INSTALLATION:

- Installation should be done by a licensed professional. Installation should conform to local codes.
- Inspect the toilet to ensure no damages have occurred during transit.
- Confirm that the item received will fit in the intended location and that plumbing fixtures are located where legally required before installation begins.
- Failure to follow the relevant installation instructions will void the warranty.

STEP 1: INSTALL CLOSET BOLTS

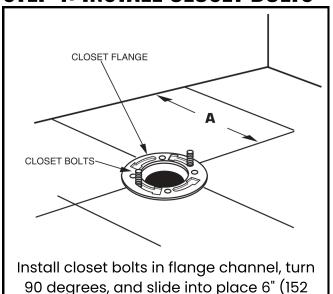


STEP 2: INSTALL WAX SEAL

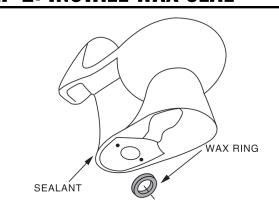

Invert toilet on floor (cushion to prevent damage), and install wax ring evenly around waste flange (horn), with tapered end of ring facing toilet. Apply a thin bead of sealant around toilet base.


STEP 3: POSITION TOILET ON FLANGE

mm) apart and parallel to wall.

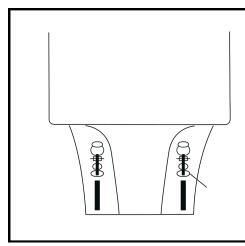

- a. Unplug floor waste opening and install toilet on closet flange so bolts project through mounting holes.
- b. Loosely install retainer washers and nuts. Side of washers marked 'THIS SIDE UP' *must* face up!

STEP 4: INSTALL TOILET

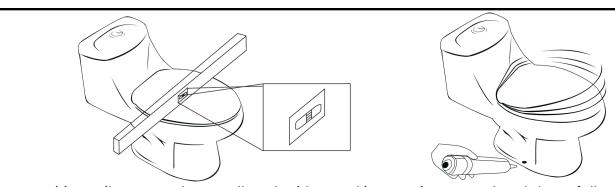

- a. Position toilet squarely to wall and, with a rocking motion, press bowl down fully on wax ring and flange. Alternately tighten nuts until toilet is firmly seated on floor.
- **A** CAUTION: DO NOT OVERTIGHTEN NUTS OR BASE MAY BE DAMAGED!
- b. Adhere bolt covers to toilet
- c. Smooth off the bead of sealant around base. Remove excess sealant.