


## THINK DESK (SIT-TO-STAND)

Includes Add-ons: Cable Tray & Modesty Panels

## 1 | ATTACH LEGS AND SIDE BRACKETS TO CENTER BEAM


Place main frame pieces onto the floor and slide the side bracket onto the end. Once in place, set the BOOST leg into the frame as shown below. Line up the the 2 pre-drilled holes one ach side and secure.

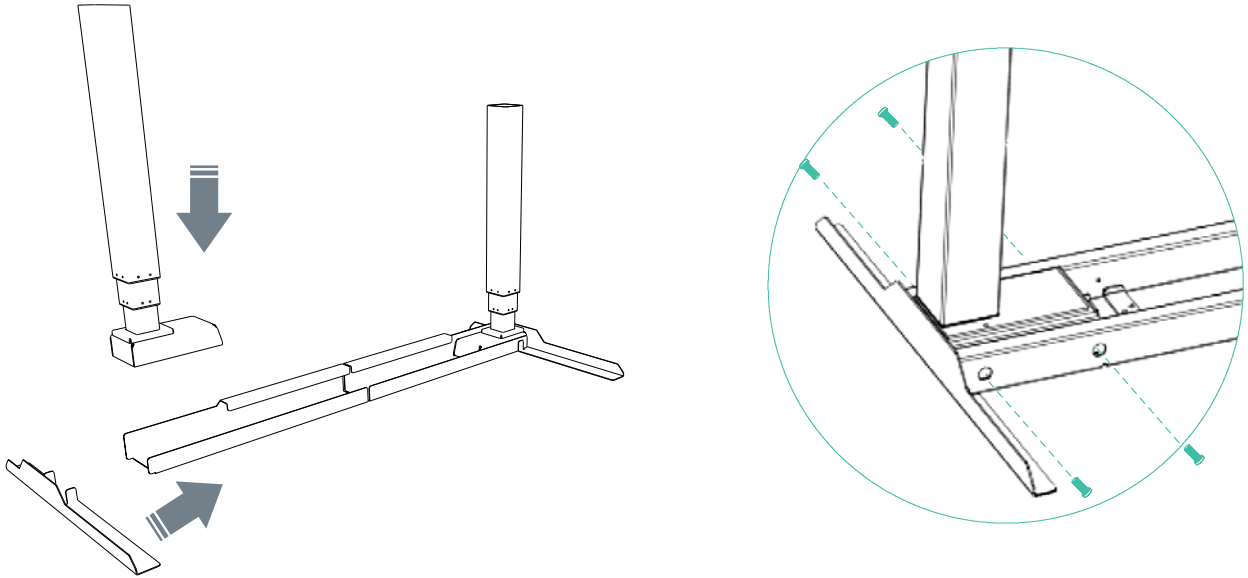

## 2 | ATTACH FRAME TO SURFACE


Place surface upside down on padded floor to prevent damage. Place BOOST frame onto the underside of the surface and measure 1" from each outer edge.

Align the each end of the frame to the 1" mark and secure with wood screws.

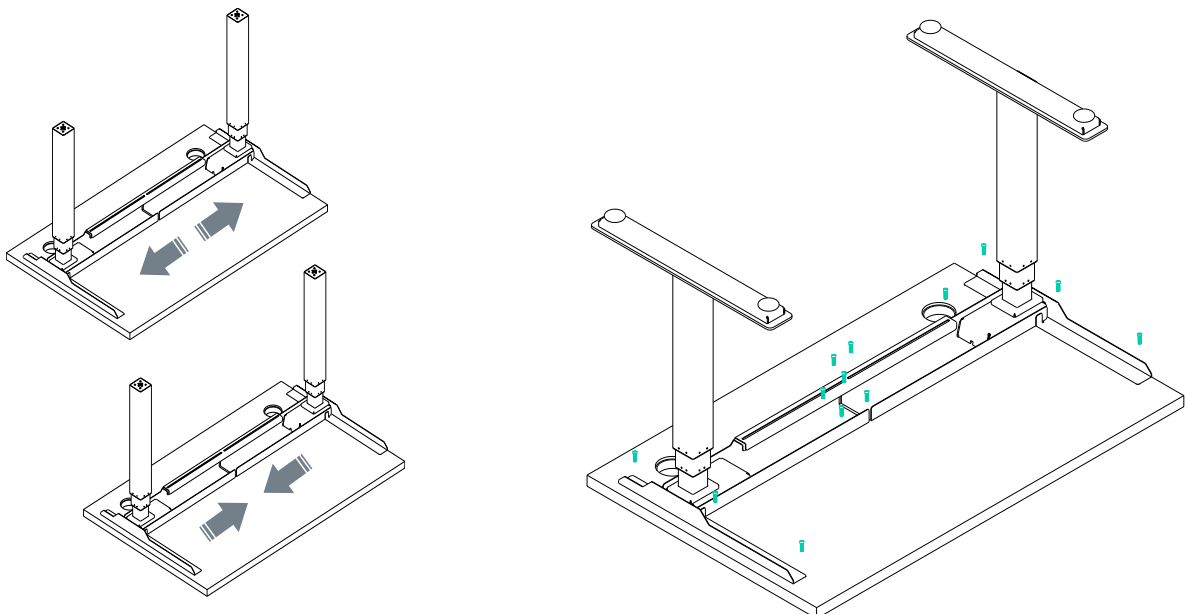

### 3 | SECURE BOOST BEAM


Tighten all 4 bolts on BOOST beam to secure length adjustment.

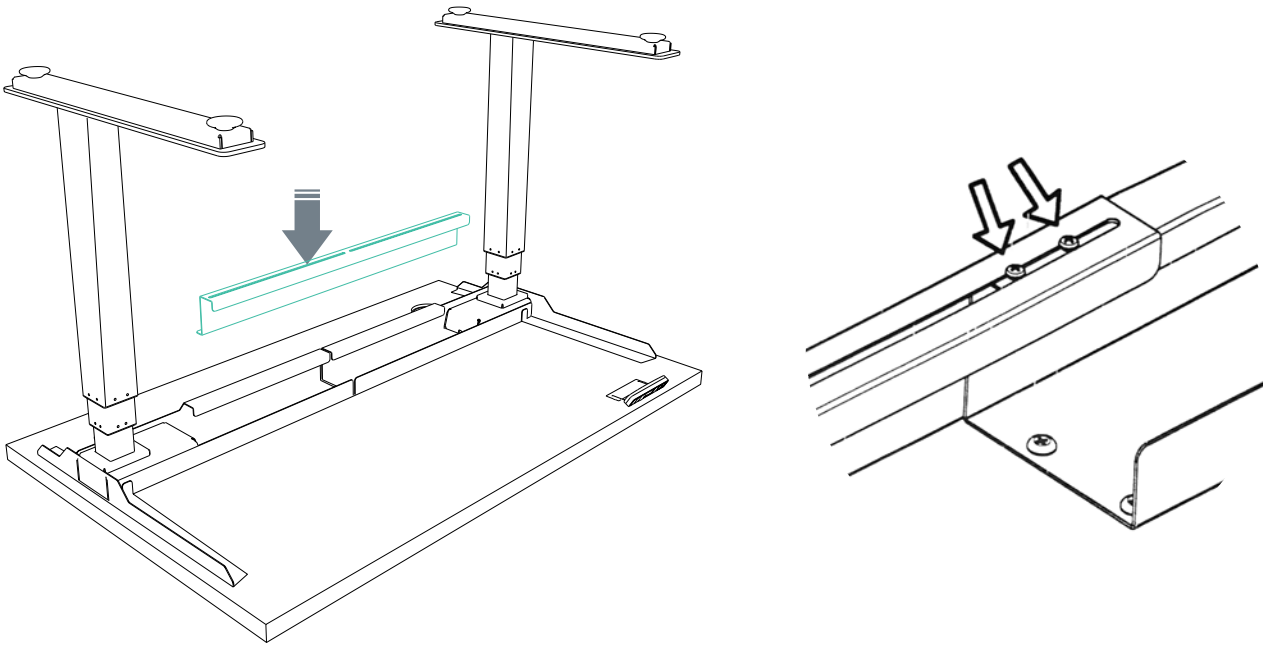

### 4 | ATTACH FEET AND LEVELERS

Fit a foot onto the end of each leg assembly and secure with 4 bolts, tightening in a cross pattern.


Attach 2 levelers on the ends of each foot.

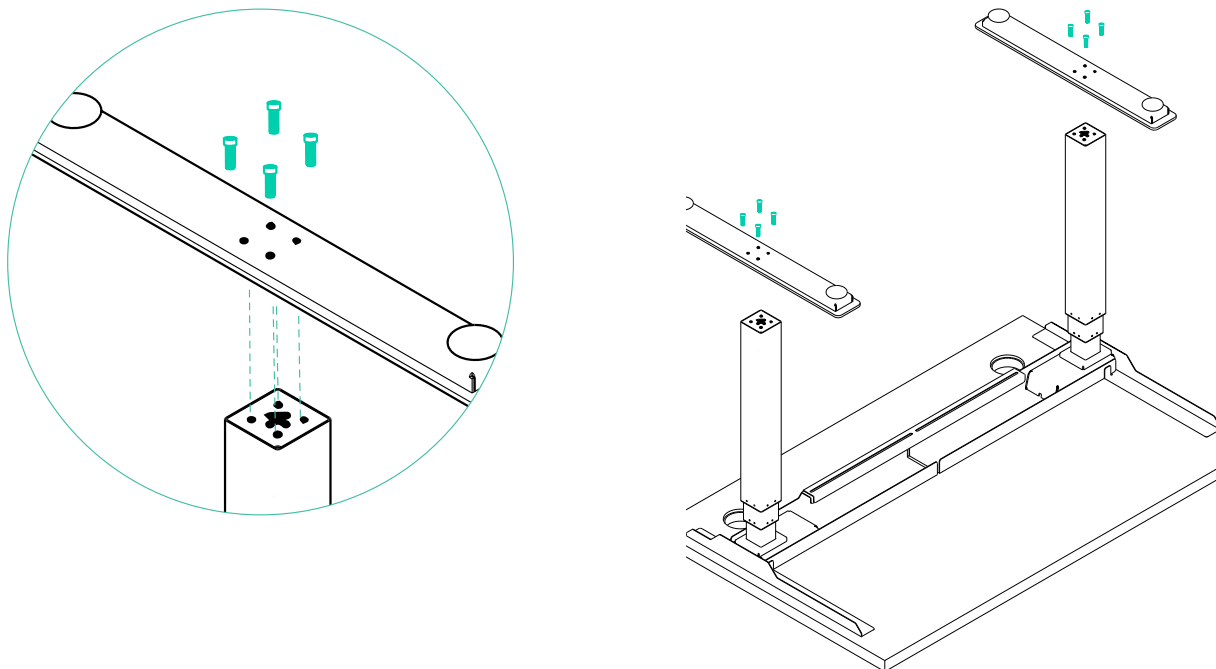

## 5 | SECURE AND CONNECT CONTROL BOX


Place control box inside of the BOOST center beam and secure with 2 wood screws.

Connect the legs to the control box.

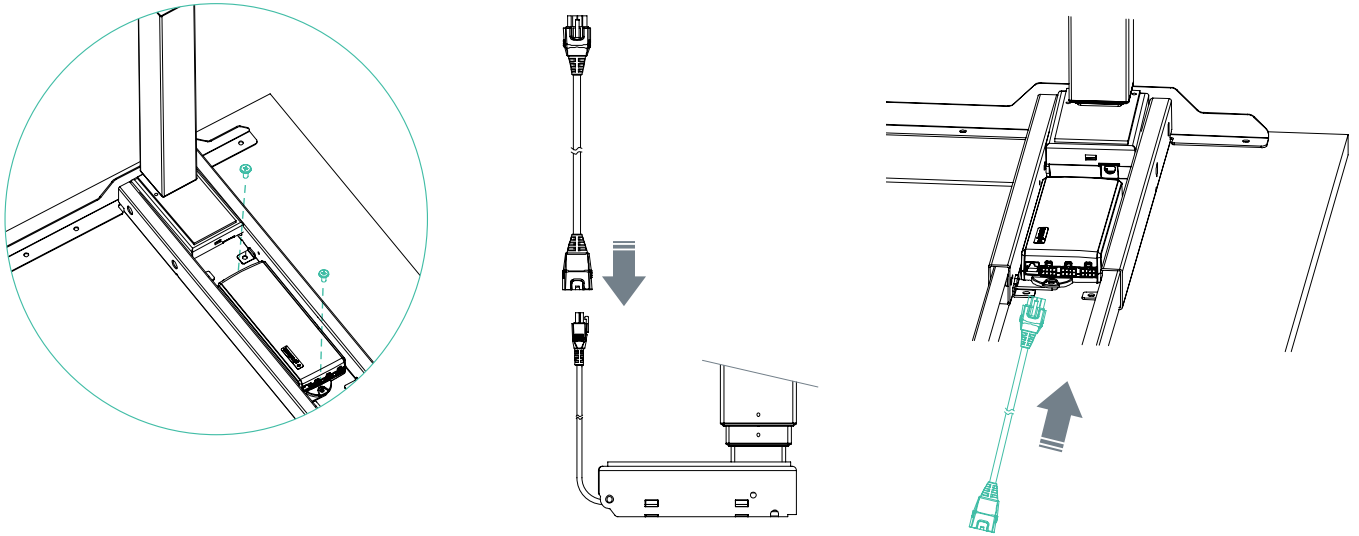

## 6 | SECURE HANDSET AND CONNECT TO CONTROL BOX


Connect handset cable to control box. Align front of handset with surface edge and secure with 3 woodscrews.

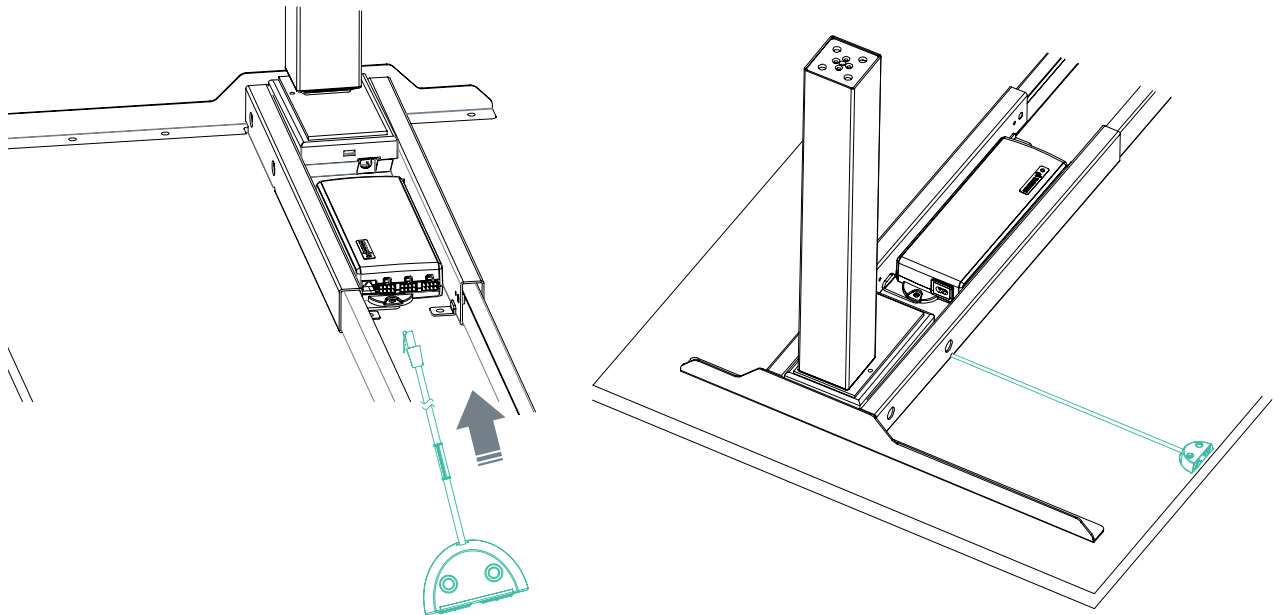

## 7 | POWER UP AND INITIALIZE



Flip workstation onto feet and plug power cord into a power source.

Press and hold  $\wedge$  and  $\vee$  simultaneously for 5 seconds until both leg columns are in lowest position. Desk will slightly rise, lower again, and then stop. Release buttons. The system is now operational.

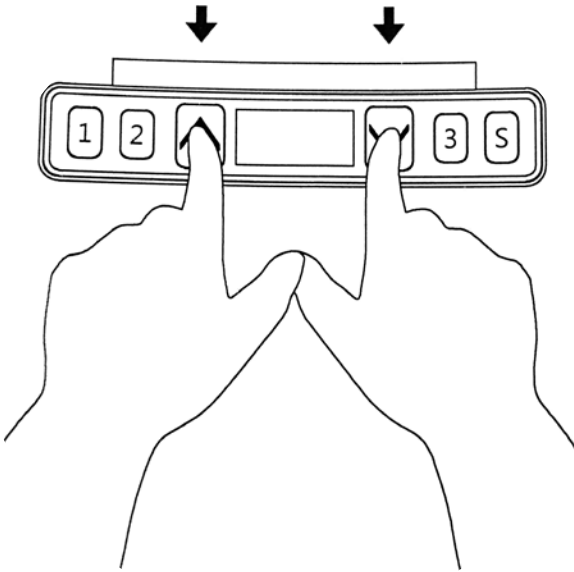


## OPTIONAL: SECURE CABLE TRAY

Extend cable tray to desired width. Mount to underside of work surface towards the back of the desk using wood screws.

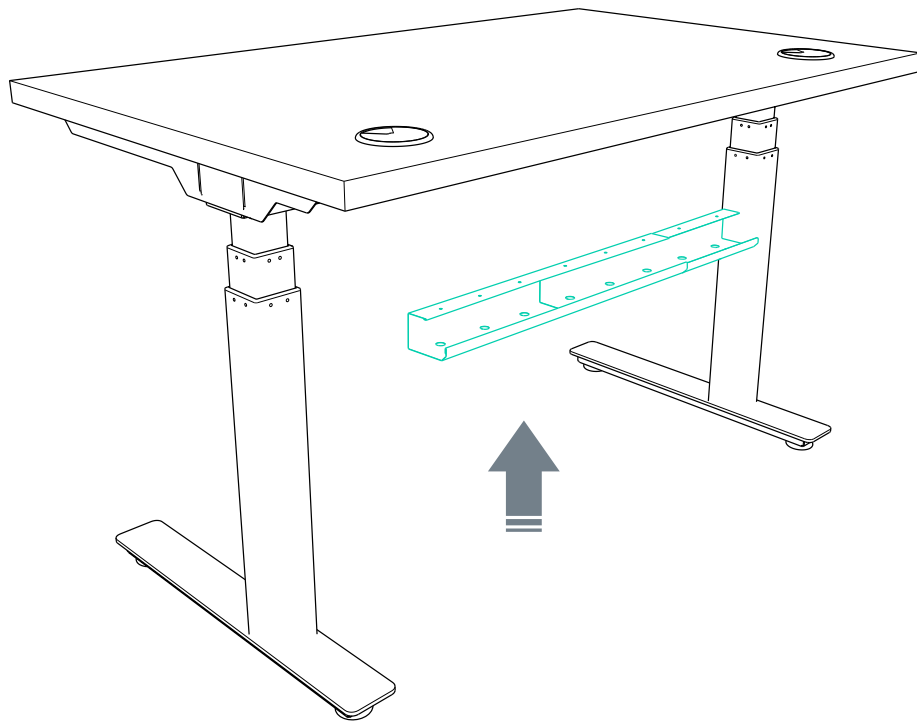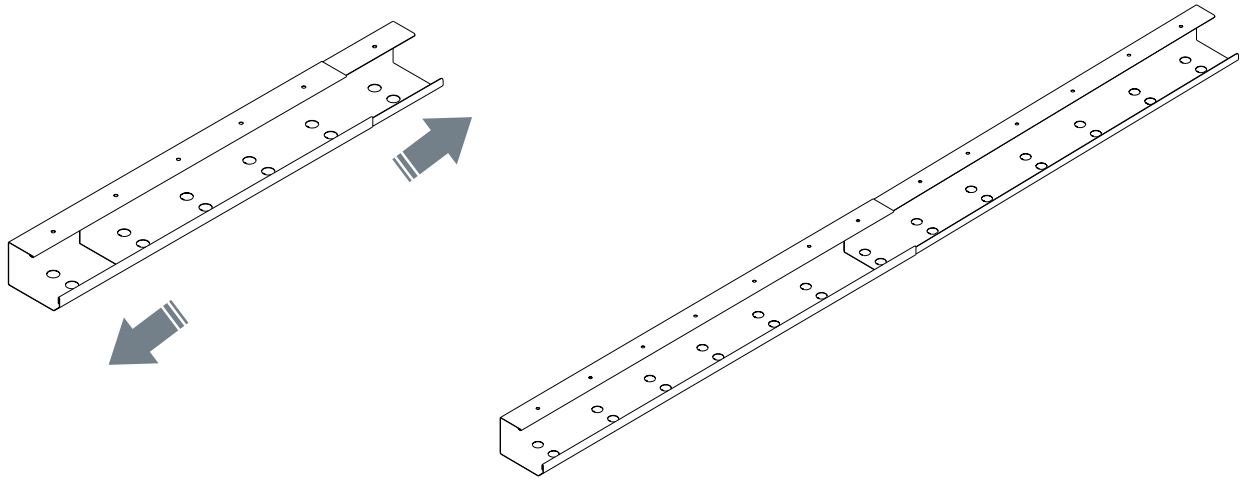


## OPTIONAL: SECURE BRACKET TO MODESTY PANEL

**Steel Modesty Panel:** Using 4 machine screws, secure bracket to the back of the steel modesty panel.

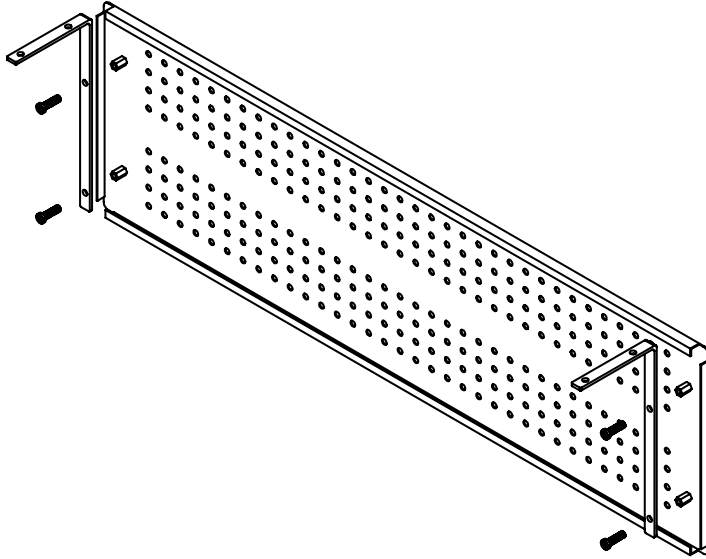

**Laminate Modesty Panel:** Using 4 wood screws, secure bracket to the back of the laminate modesty panel.

NOTE: Holes are not pre-drilled.

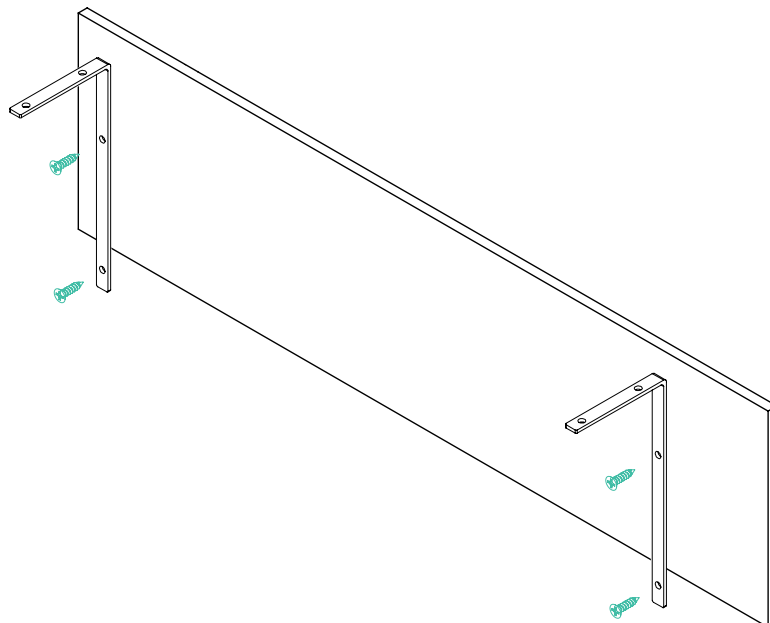

## OPTIONAL: ATTACH MODESTY PANEL TO WORKSTATION

Center the panel in reference to the width of the surface and screw modestly panel directly to the bottom of your surface with wood screws.

NOTE: Bracket may pass under the grommet, use a wood screw to secure the bracket by the end.

