


THINK DESK (SIT-TO-STAND)L-SHAPE

Includes Add-ons: Cable Tray & Modesty Panels


1 | ATTACH LEGS AND SIDE BRACKETS TO CENTER BEAM

Set surface upside down on padded floor to prevent damage. Place main frame pieces onto the surface and slide the side bracket onto the end. Once in place, set the BOOST leg into the frame as shown below. Line up the the 2 pre-drilled holes on each side and secure.

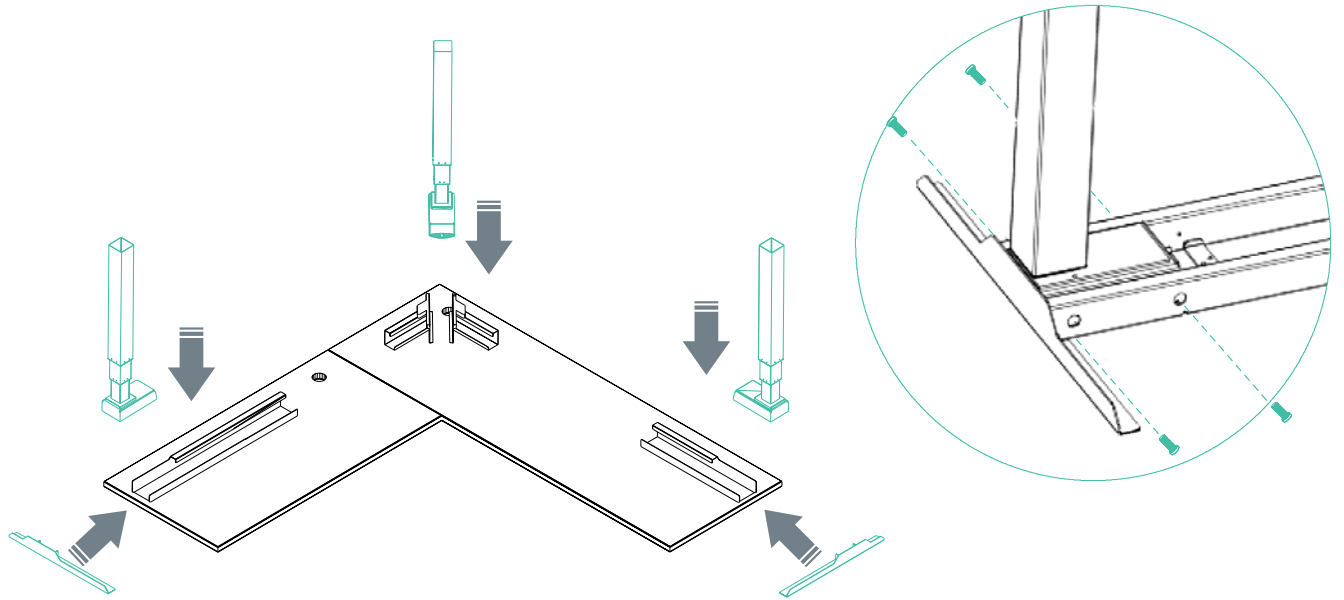


2 | ATTACH FRAME TO SURFACE

Measure 1" from each outer edge of the surface, align each end of the frame to the 1" mark and secure with wood screws.

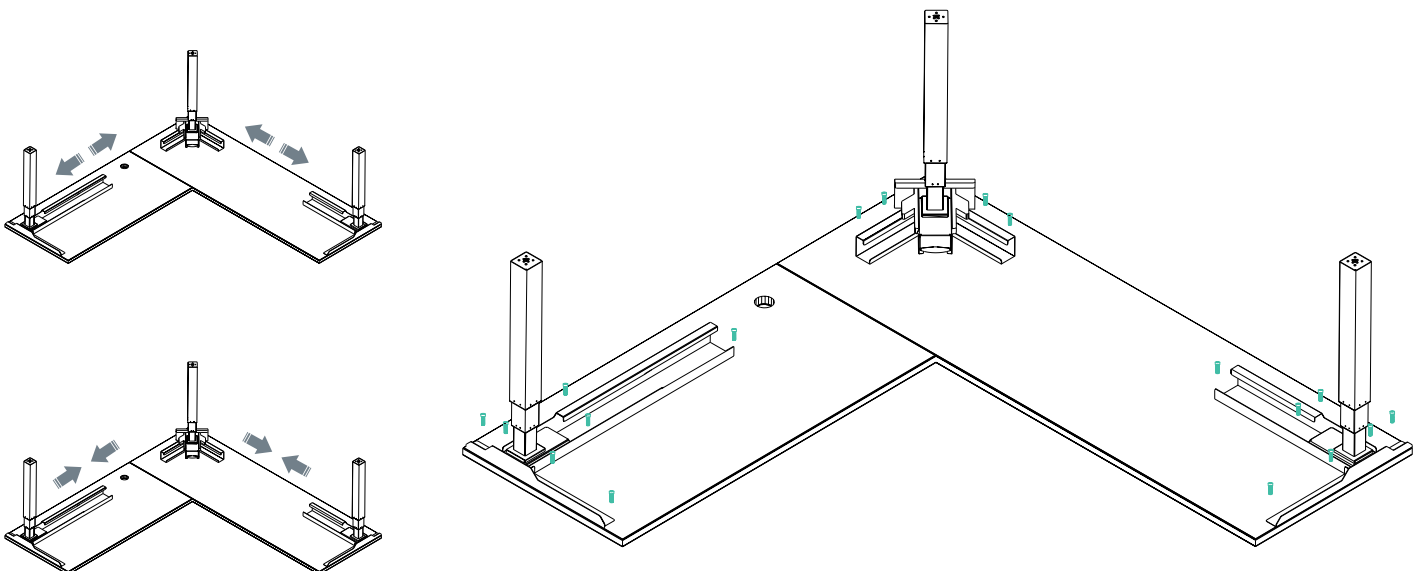

3 | SECURE CENTER BEAM TO CONNECT LEGS


Place beam so that it fits over both leg brackets. Line up pre-drilled holes and secure.

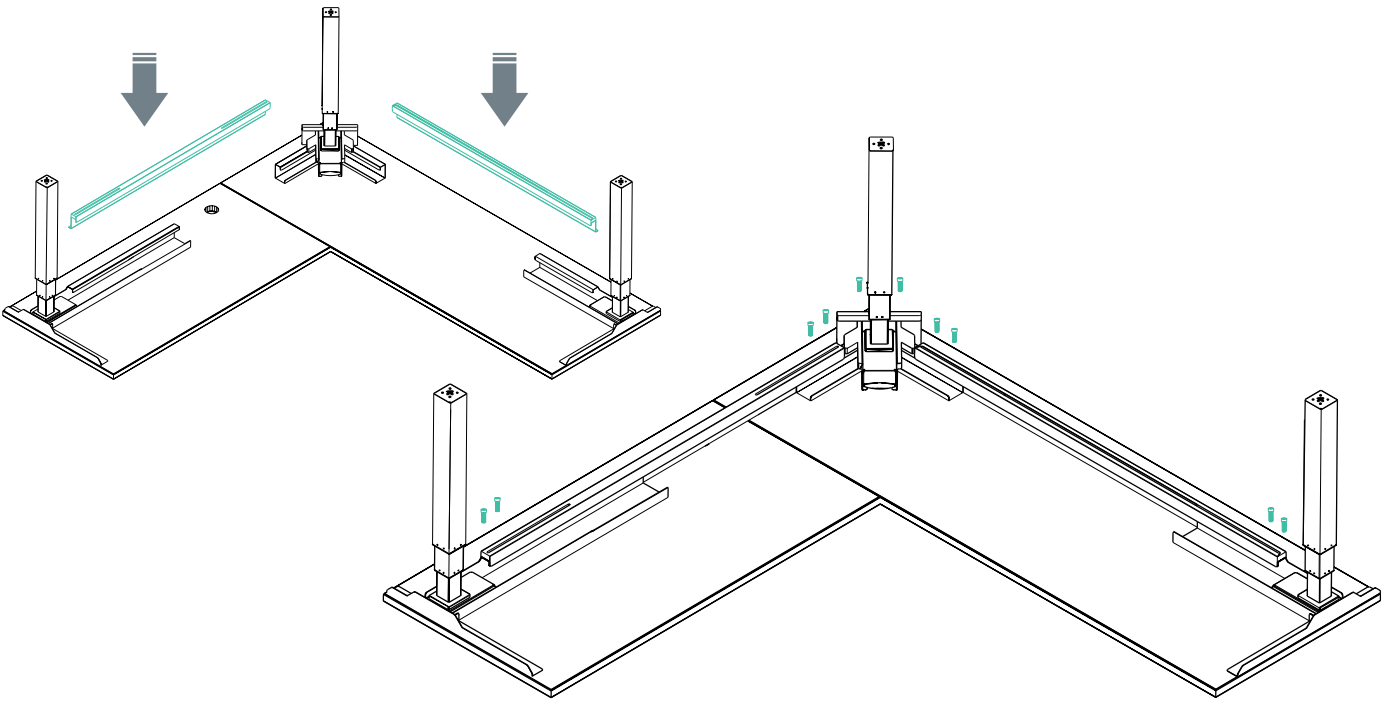

4 | ATTACH FEET AND LEVELERS

Fit a foot onto the end of each leg assembly and secure with 4 bolts, tightening in a cross pattern.


Attach 2 levelers on the ends of each foot.

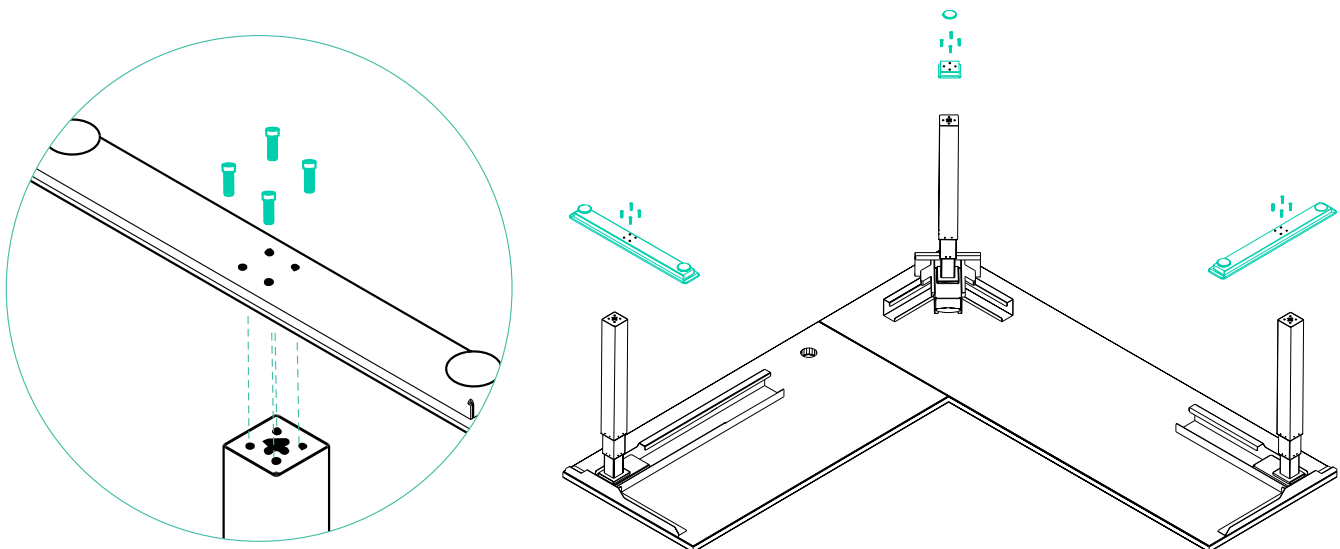

5 | SECURE AND CONNECT CONTROL BOX


Place control box inside of the BOOST center beam and secure with 2 wood screws.

Connect the legs to the control box.

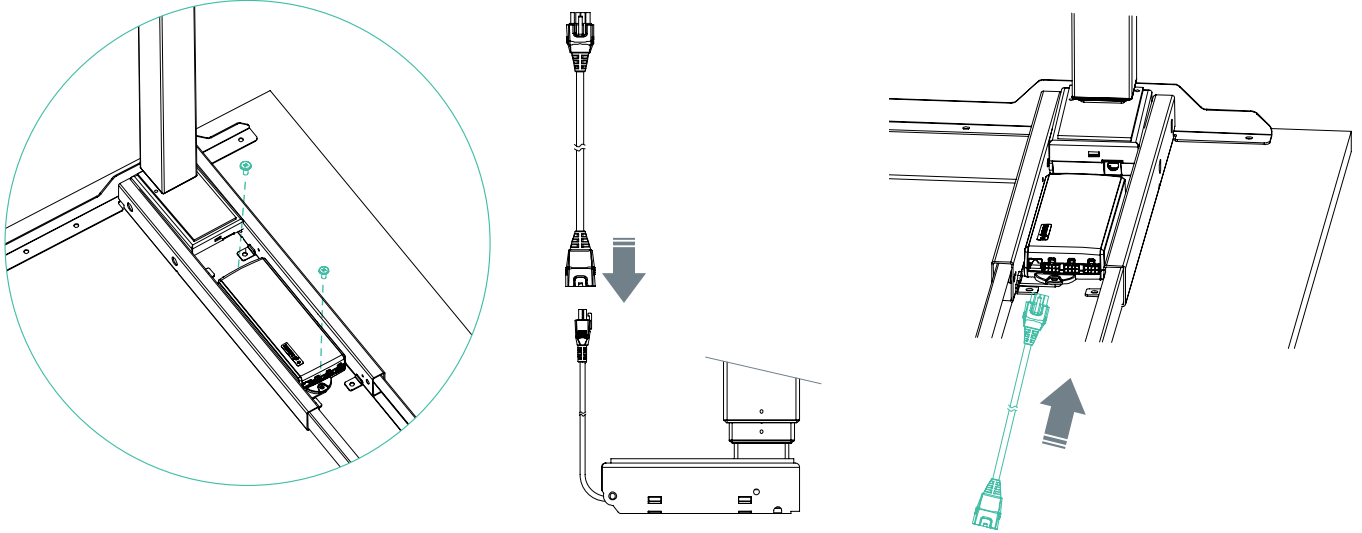


6 | CONNECT LEGS TO CONTROL BOX

Connect handset cable to control box. Align front of handset with surface edge and secure with 3 woodscrews.

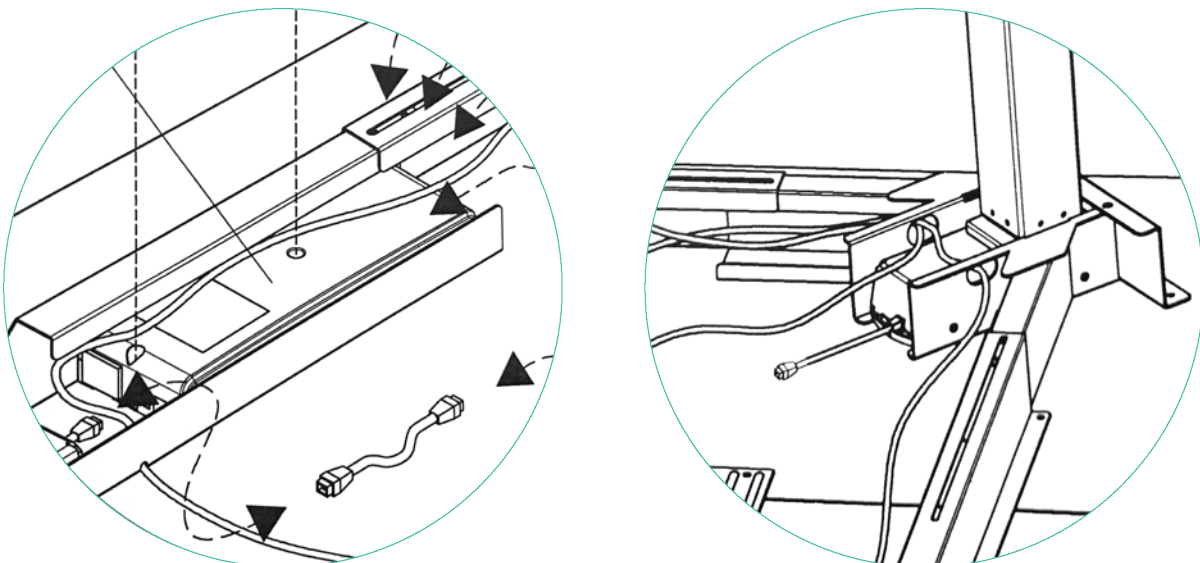


7 | SECURE HANDSET AND CONNECT TO CONTROL BOX

Connect handset cable to control box. Align front of handset with surface edge and secure with 3 woodscrews.

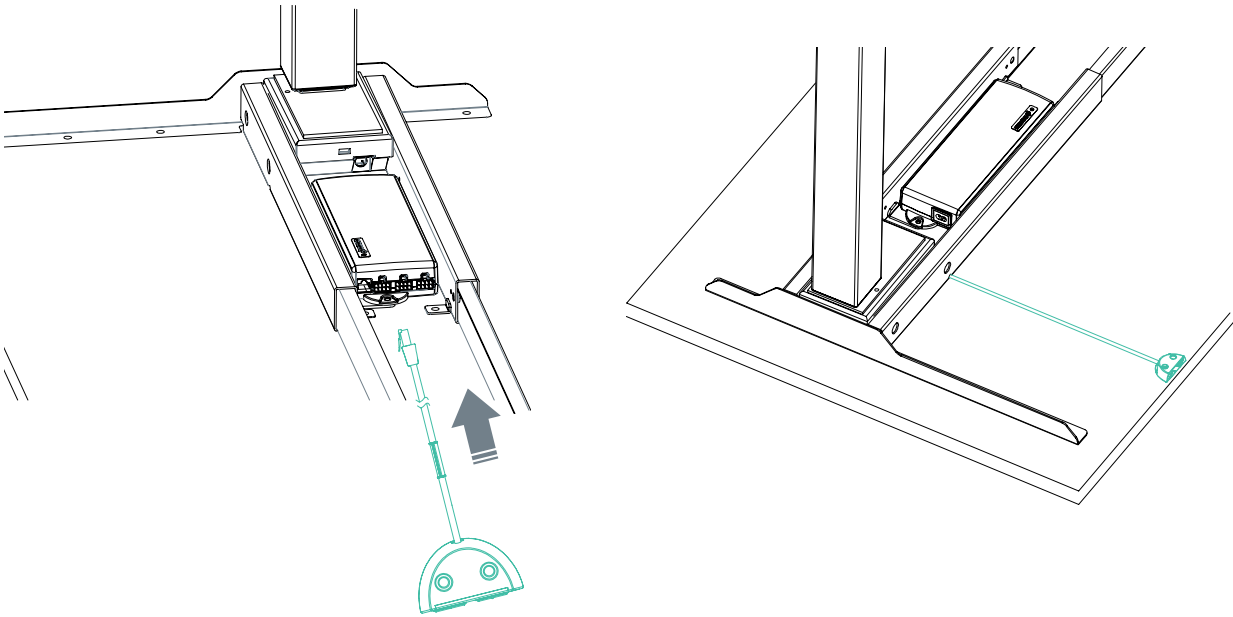

8 | FINISHING TOUCHES


Place anti-sag bars and connector brackets and secure with wood screws.

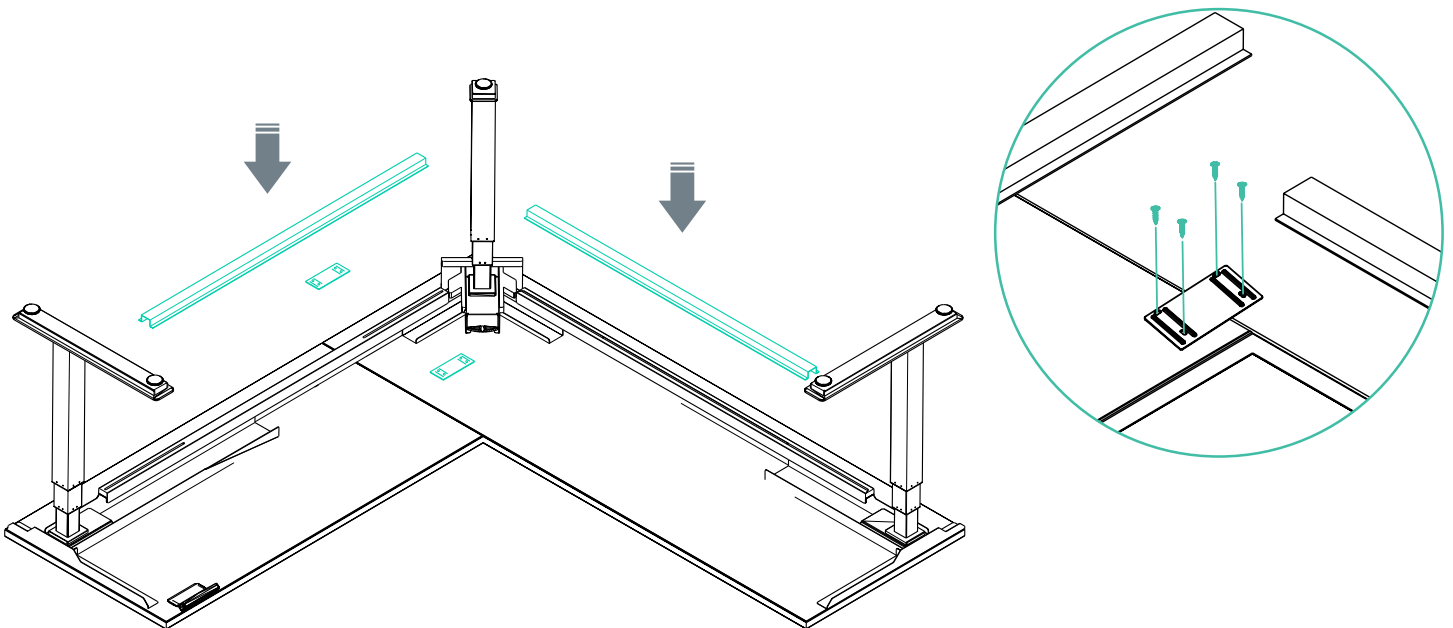

9 | FLIP, POWER AND INITIALIZE HANDSET


Flip workstation onto feet and plug power cord into a power source.

Press and hold ^ and v simultaneously for 5 seconds until both leg columns are in lowest position. Desk will slightly rise, lower again, and then stop. Release buttons. The system is now operational.

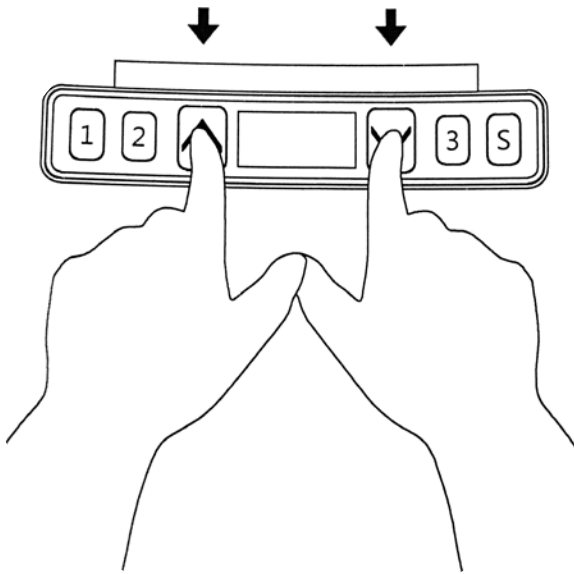


OPTIONAL: SECURE CABLE TRAY

Extend cable tray to desired width. Mount to underside of work surface towards the back of the desk using wood screws.

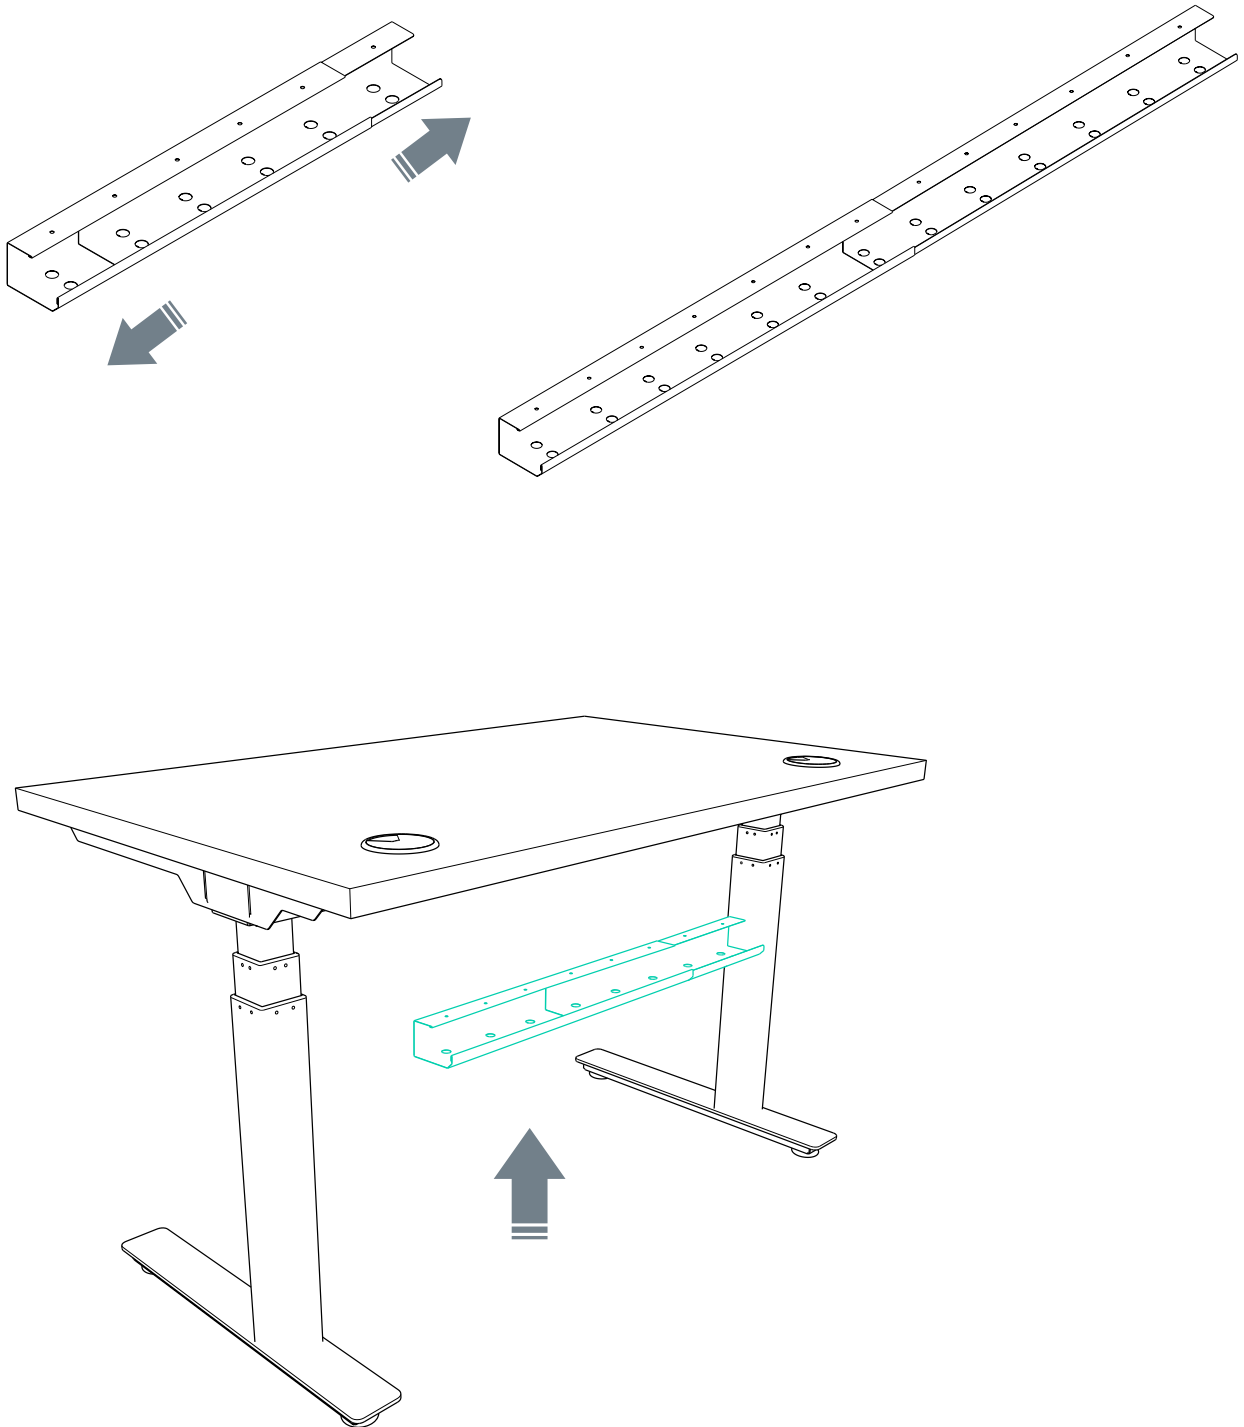


OPTIONAL: SECURE BRACKET TO MODESTY PANEL

Steel Modesty Panel: Using 4 machine screws, secure bracket to the back of the steel modesty panel.

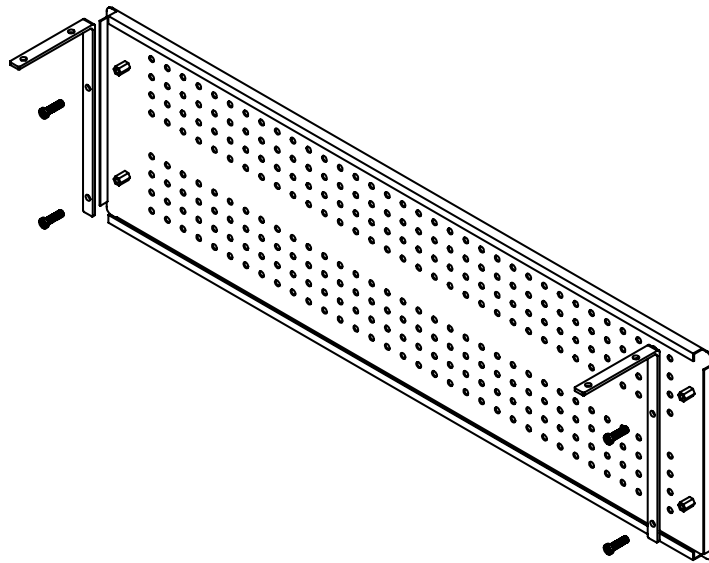

Laminate Modesty Panel: Using 4 wood screws, secure bracket to the back of the laminate modesty panel.

NOTE: Holes are not pre-drilled.

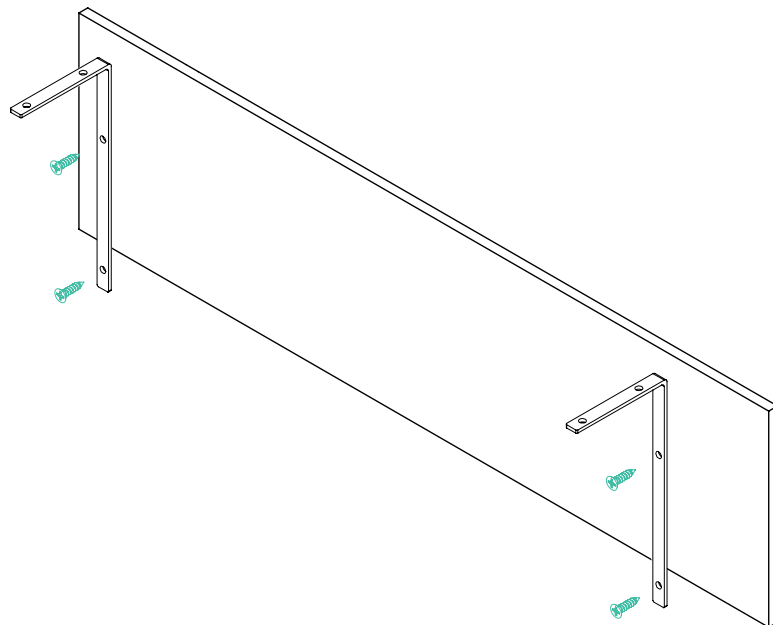

OPTIONAL: ATTACH MODESTY PANEL TO WORKSTATION

Center the panel in reference to the width of the surface and screw modesty panel directly to the bottom of your surface with wood screws.

NOTE: Bracket may pass under the grommet, use a wood screw to secure the bracket by the end.

