

STORAGE













LAMINATE CONFERENCE













CREDENZA

Includes Optional Laminate Top Install

General Installation Guide

PARTS LIST


CODE	QTY	DESCRIPTION	
BLCC##	1	Bottom Panel	
	1	Top Panel	
	2	End Panel	
	1	Center Support Panel	
	1	Back Panel	
	1	Fixed Shelf 1	
	1	Fixed Shelf 2	
	4	Door	
	14	Wooden Dowel	
	34	Cam Lock	
	30	Cam Pin	
	2	Connecting Rod	

CODE	QTY	DESCRIPTION	
BLCC##	34	Cam Cover	
	4	Corner Foot	
	1	Center Footer	
	28	Wood Screw 1	
	48	Wood Screw 2	
	4	Handle w/ Screws	
	2	Lock	
	4	Corner Bracket	
	2	Latch	
WALAMCC.X	1	Custom FX Top Panel*	
KIT-LCCB	12	Plastic L-Bracket	
	24	Wood Screws	


*If applicable. FX Top Panel does not include pre-drilled holes.

1 | INSERT HARDWARE INTO BOTTOM PANEL

Using a screwdriver, secure 8 cam pins into the pre-drilled holes on the bottom panel of the credenza.

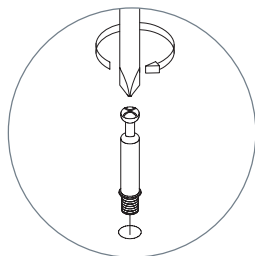


Cam Pin

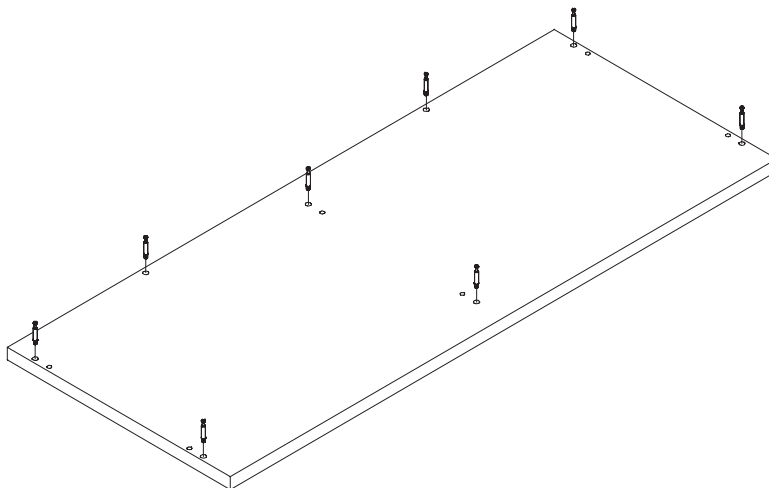


2 | INSERT HARDWARE INTO TOP PANEL

Using a screwdriver, secure 8 cam pins into the pre-drilled holes on the top panel of the credenza.

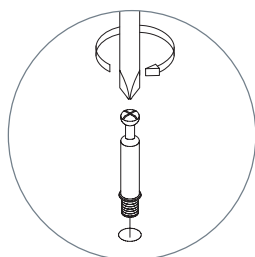


Cam Pin

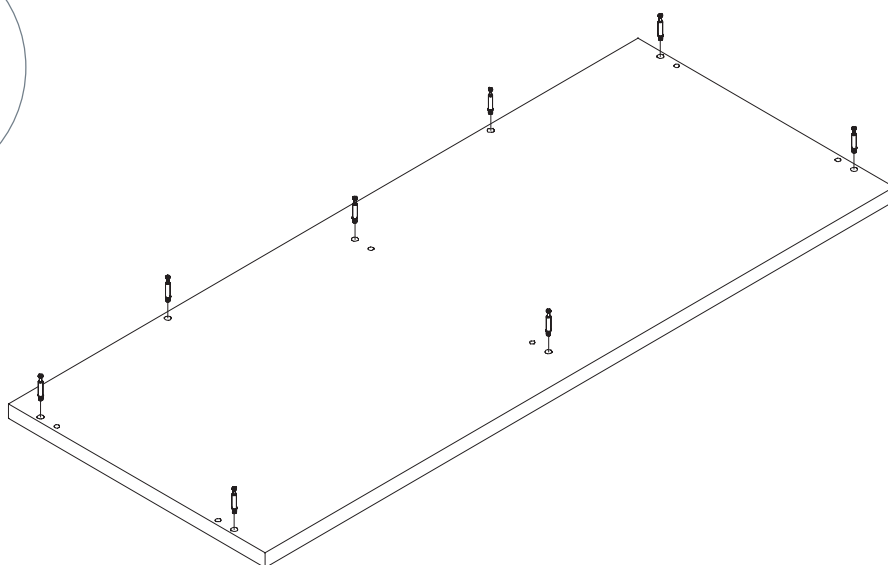

3 | INSERT HARDWARE INTO FIXED SHELF



Using a screwdriver, secure 4 cam pins into the pre-drilled holes as they are shown below, for each panel. Insert 4 wooden dowels and 4 cam locks into the pre-drilled holes at the top and bottom of the panel.

Note: Repeat steps for both side panels.

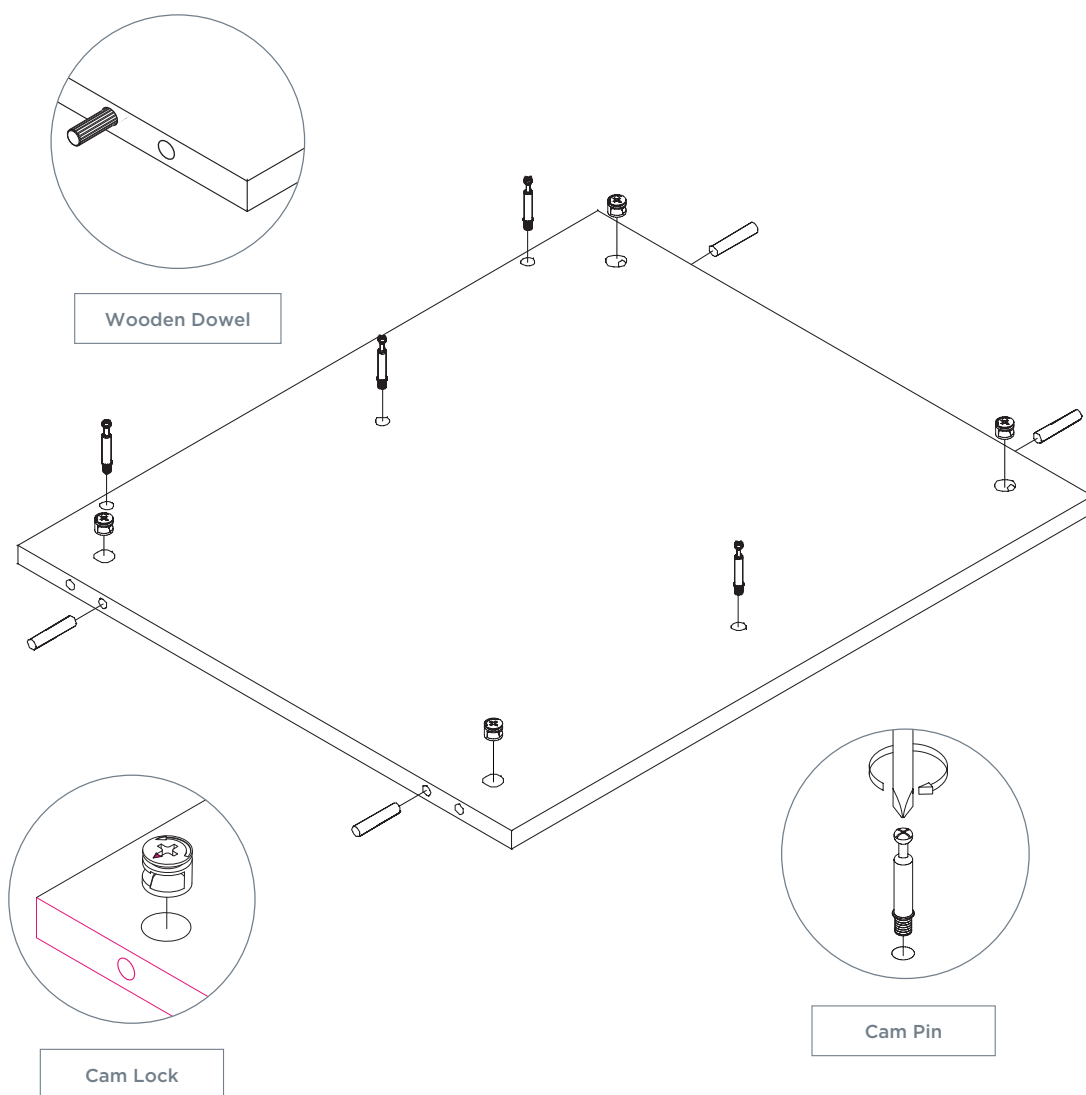


4 | INSERT HARDWARE INTO CENTER SUPPORT PANEL

Insert 4 wooden dowels and 6 cam locks into the pre-drilled holes in the panel.

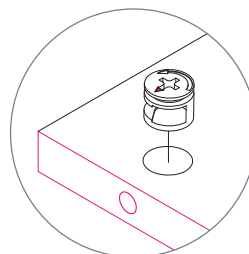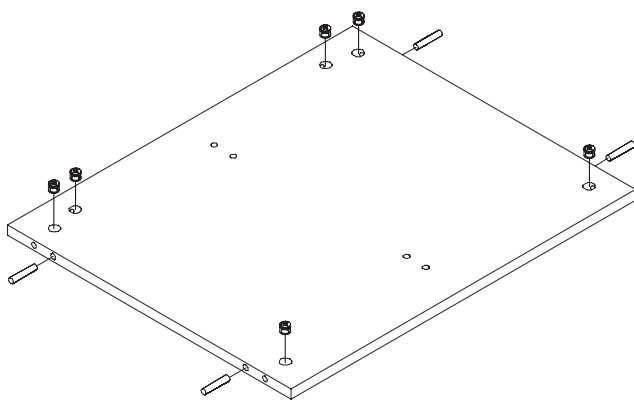



Cam Lock

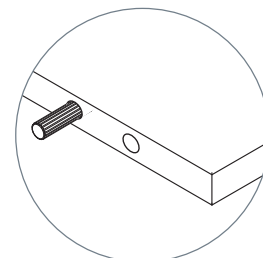


Wooden Dowel

5 | INSERT HARDWARE INTO BACK PANEL

Using a screwdriver, secure 6 cam pins and 8 cam locks into the pre-drilled holes in the panel.

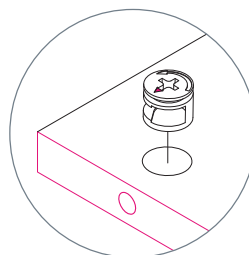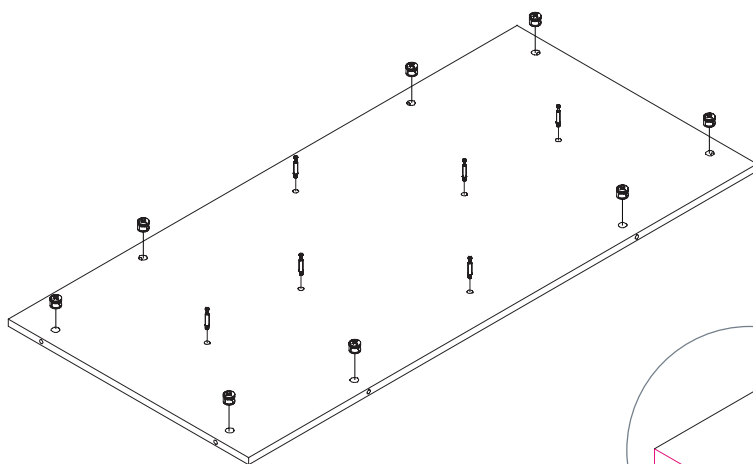


Cam Lock

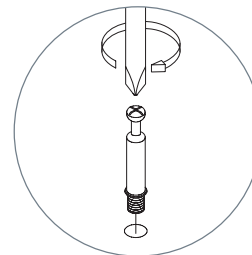

Cam Pin

6 | INSERT HARDWARE INTO FIXED SHELF 1


Insert 2 wooden dowels into the pre-drilled holes at the bottom of the panel.
Insert 6 cam locks into the pre-drilled holes on the side of the panel.

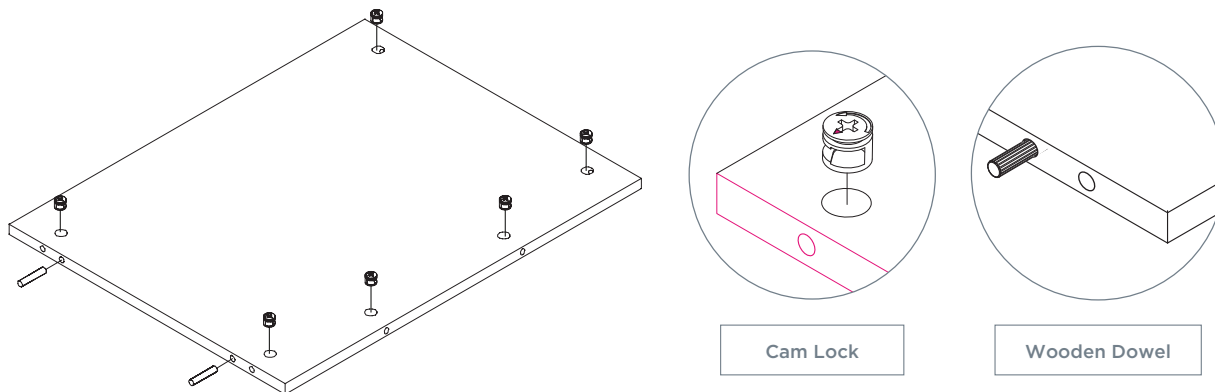

7 | INSERT HARDWARE INTO FIXED SHELF 2


Insert 6 cam locks into the pre-drilled holes at the top and bottom of the panel.

Note: Repeat steps for both side panels.

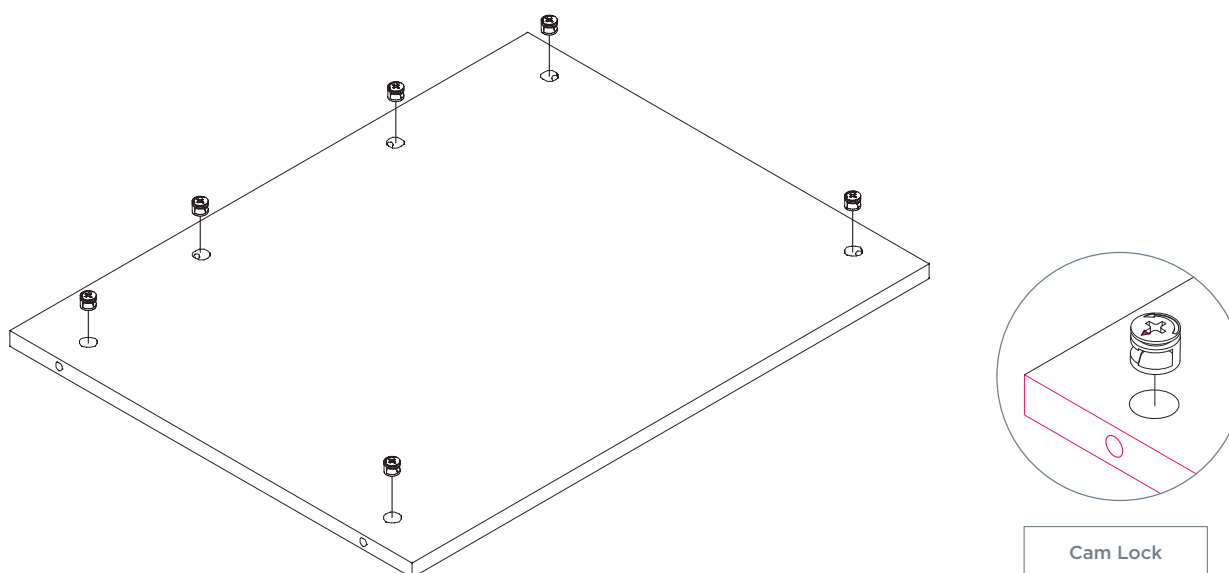



8 | SECURE FIXED SHELVES TO CENTER SUPPORT PANEL

Pass 2 wooden dowels and 2 connecting rods through the center support panel and insert into the sides of both of the fixed shelf panels. Using a screwdriver, turn the 4 cam locks to lock the connecting rods in place.

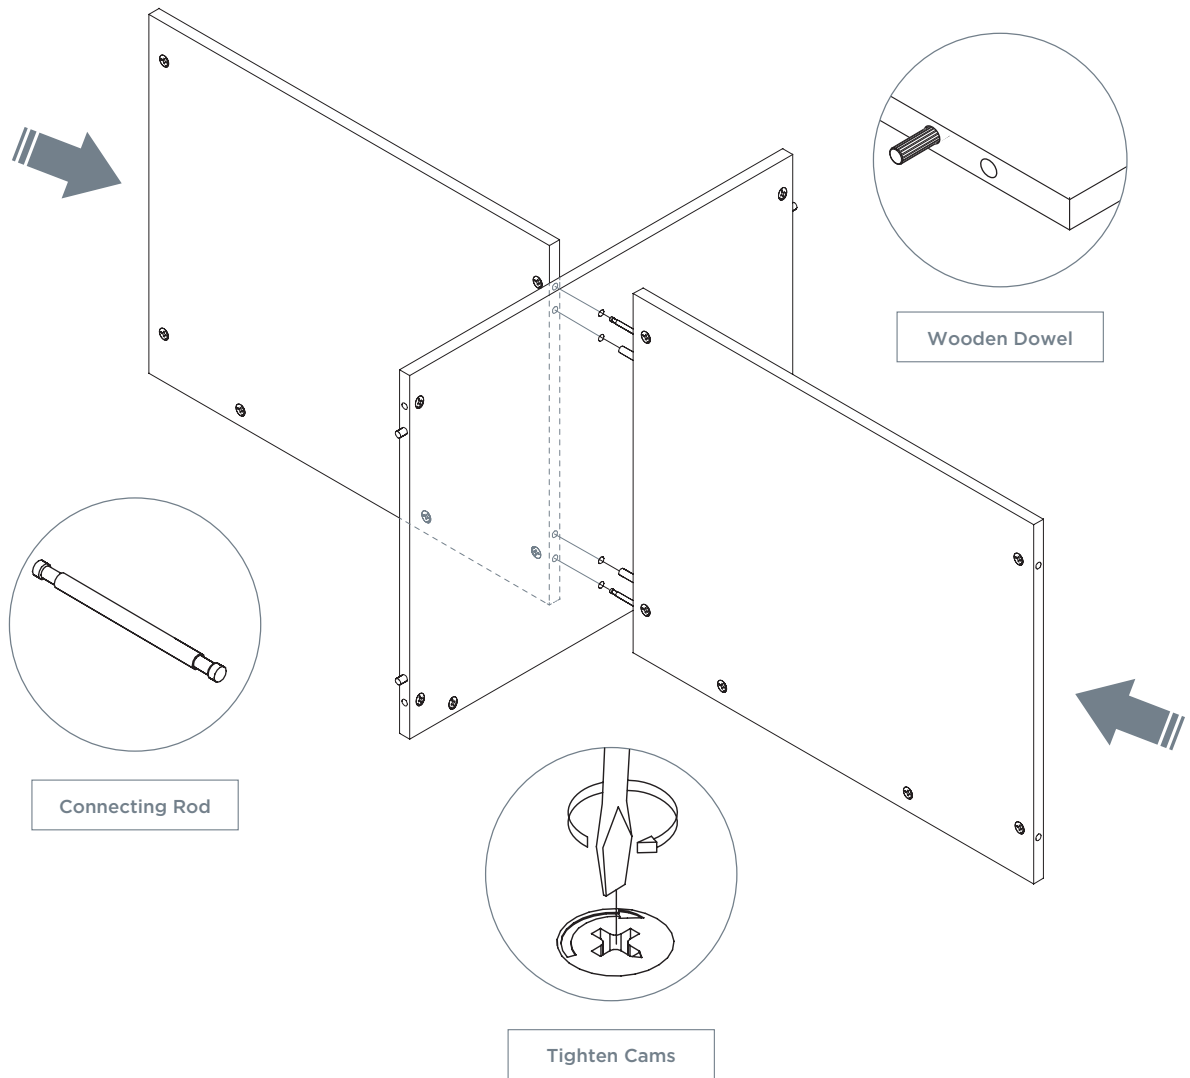

9 | SECURE BACK PANEL TO ASSEMBLED STRUCTURE



Align the cam pins with the open cam locks on the assembled structure. Using a screwdriver, turn the 6 cam locks to lock the cam pins in place.

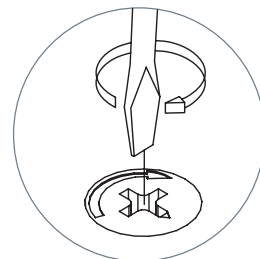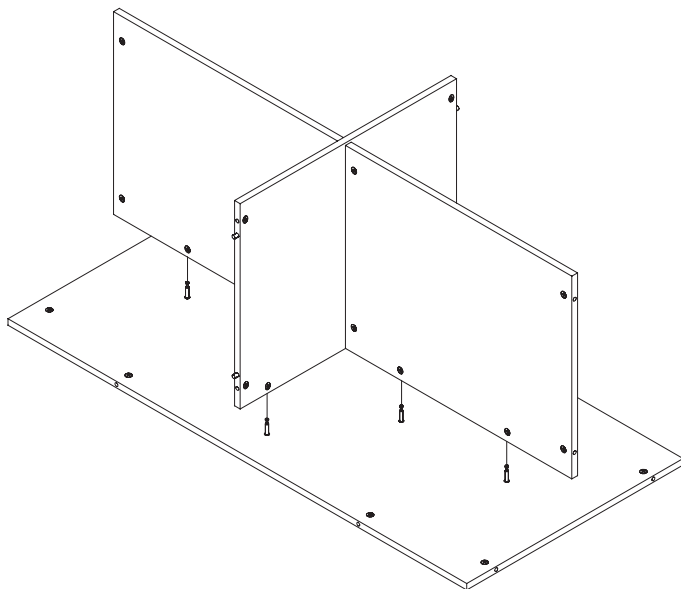

Tighten Cams

10 | SECURE END PANELS TO ASSEMBLED STRUCTURE



Align the cam pins with the open cam locks on the assembled structure. Using a screwdriver, turn the 8 cam locks to lock the cam pins in place.

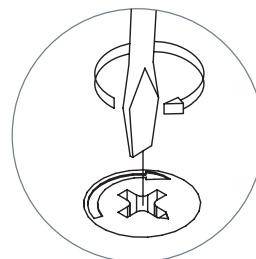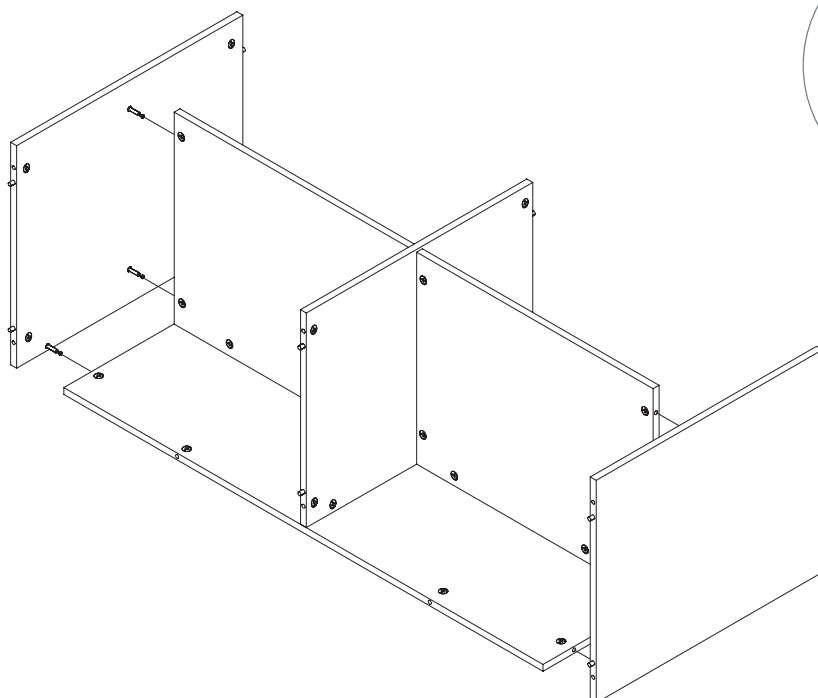

Tighten Cam Locks

11 | SECURE BOTTOM PANEL TO ASSEMBLED STRUCTURE

Align the cam pins with the open cam locks on the assembled structure. Using a screwdriver, turn the 8 cam locks to lock the cam pins in place.

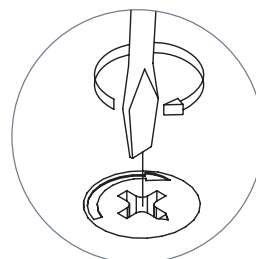
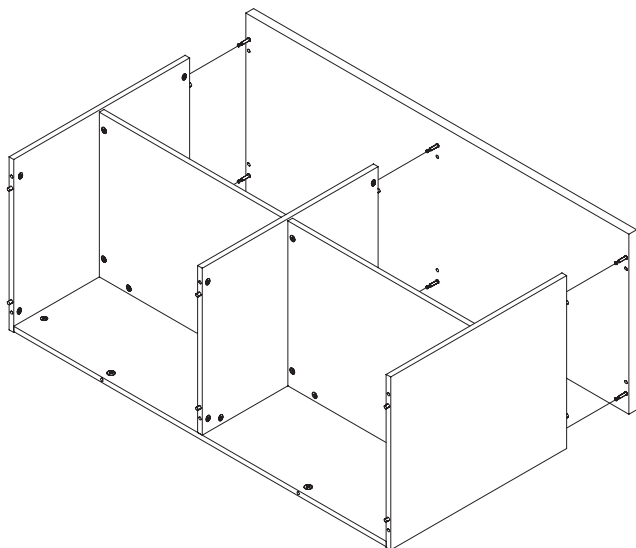


Tighten Cam Locks

12 | SECURE TOP PANEL TO ASSEMBLED STRUCTURE


(A) **FAST (1" Thick) Top:** Align the cam pins with the open cam locks on the assembled structure. Using a screwdriver, turn the 8 cam locks to lock the cam pins in place.

Note: If Credenza has an 1.25" top, skip to 12B.

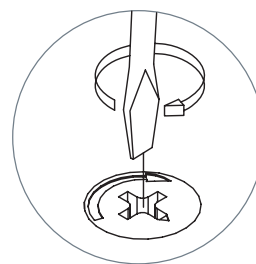
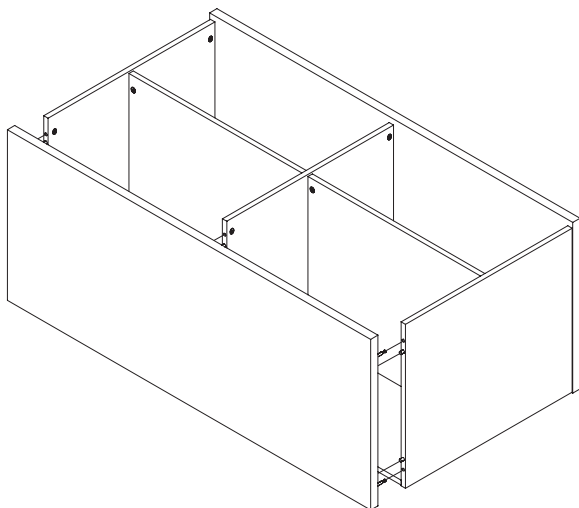


Tighten Cam Locks

(B) **FX (1.25" Thick) Top:** Drill 2.5" deep holes with a 5/16" drill bit. Holes should be 17 5/8" from the left edge, 16 3/8" from the right edge and 7" from the bottom edge.

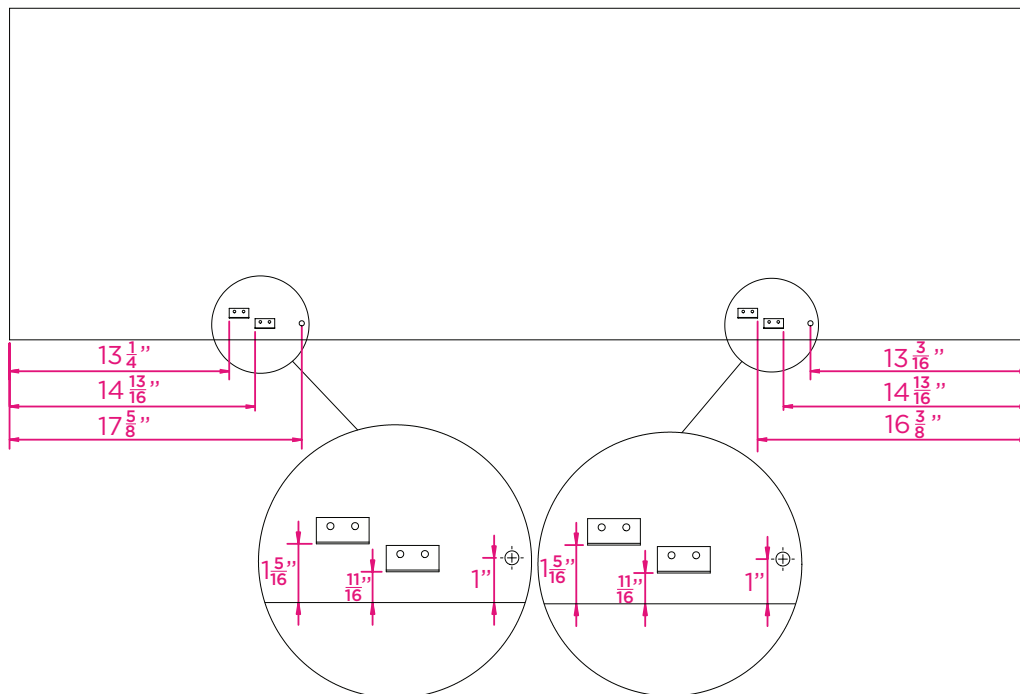


Attach corner braces in the location shown below. Insert 2 wood screws through each of the corner braces into the top and side panels.

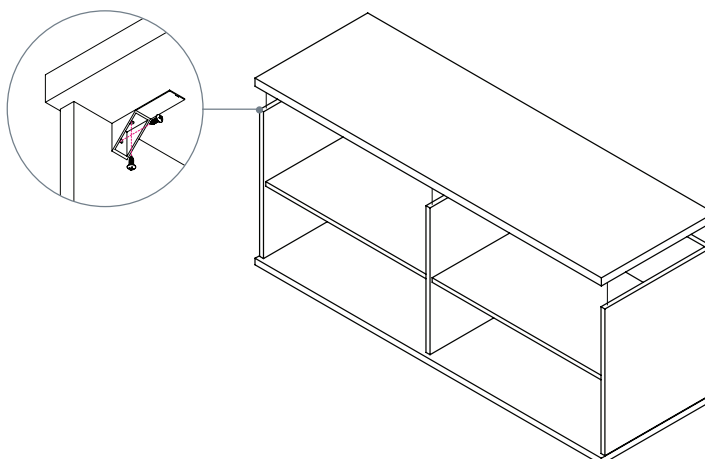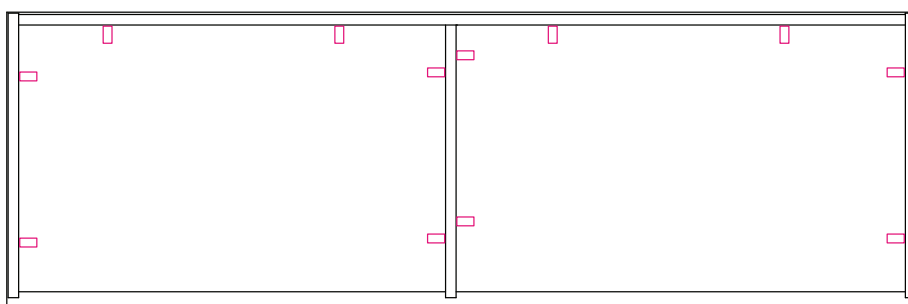


13 | SECURE FEET TO BOTTOM PANEL

Attach corner feet and center foot to the bottom panel with 4 wood screws per foot. Cover all exposed cam locks with cam covers.

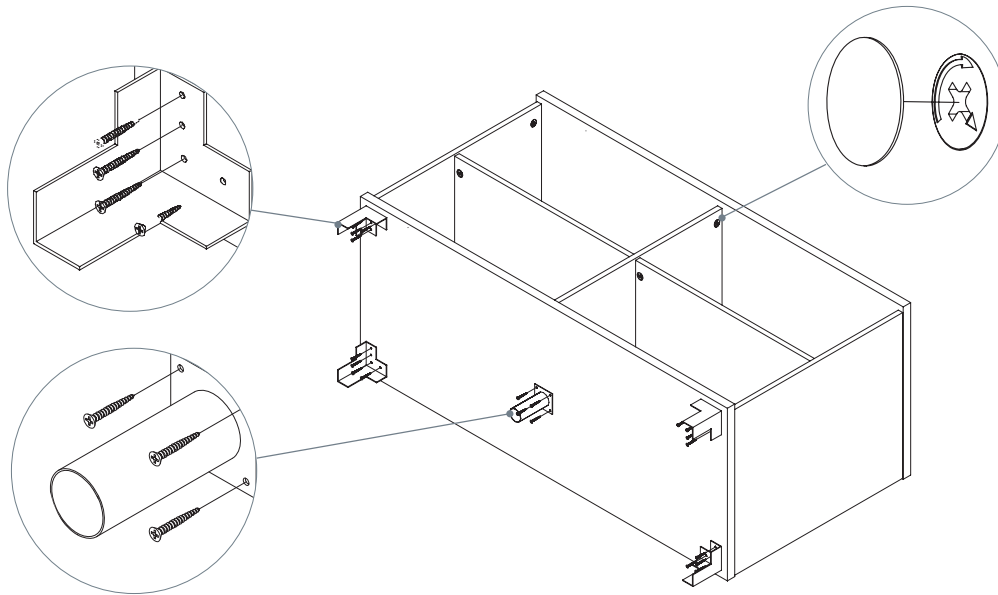


14 | SECURE DOORS TO CREDENZA

Use 4 wood screws to the side and center panels.

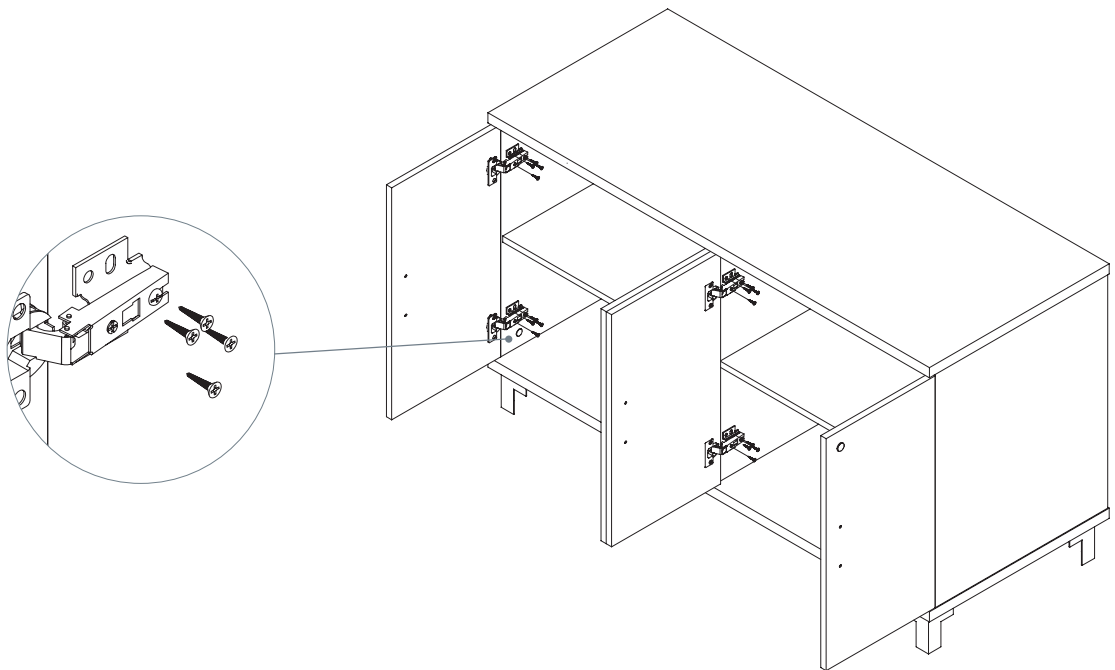


15 | SECURE LOCKS AND LATCHES TO DOORS

Align the cam pins with the open cam locks on the assembled structure. Using a screwdriver, turn the 6 cam locks to lock the cam pins in place.

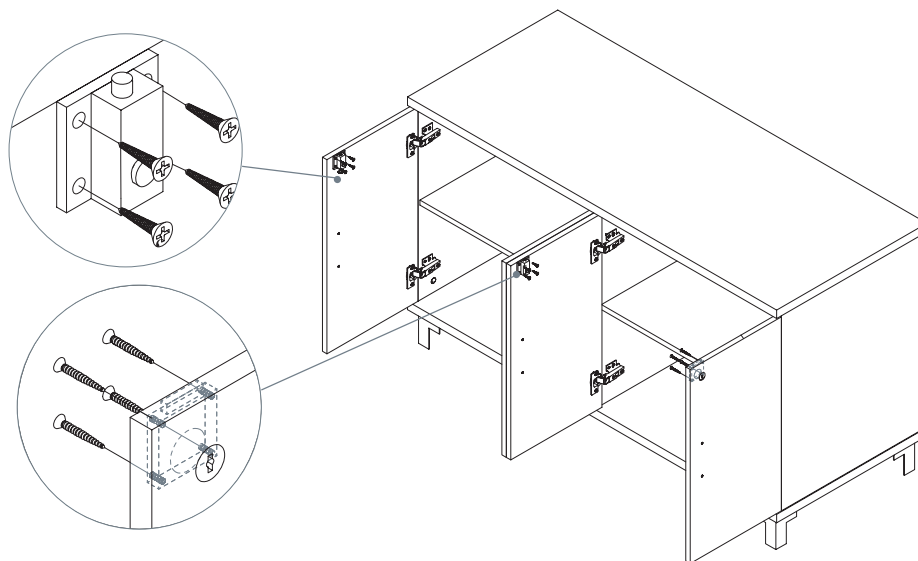


16 | ATTACH CORNER BRACKETS TO THE TOP PANEL

Attach brackets to the underside of the top panel using 2 wood screws each.

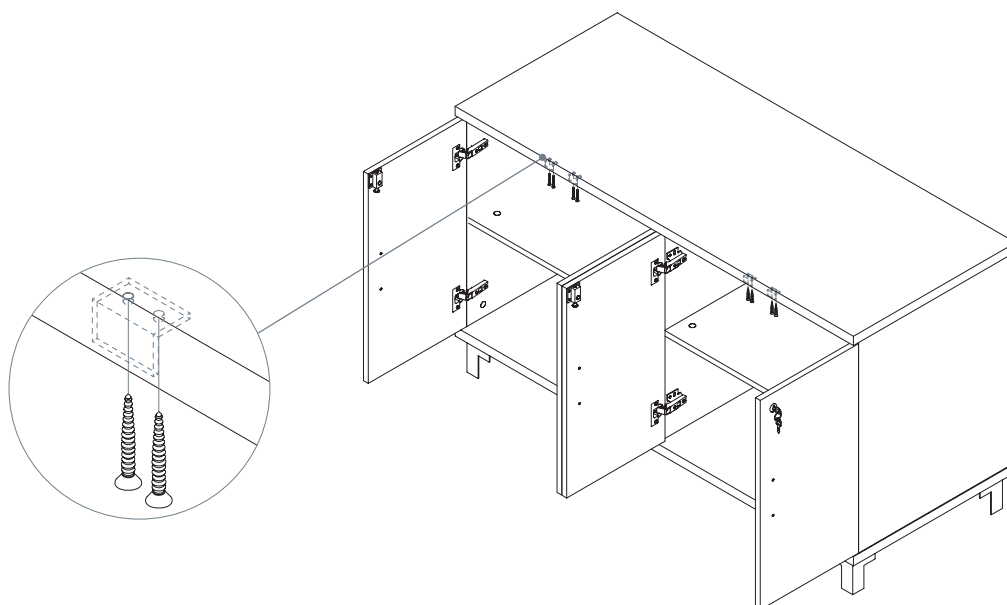

17 | ATTACH HANDLES TO EACH DOOR

Attach using 2 wood screws for each handle.

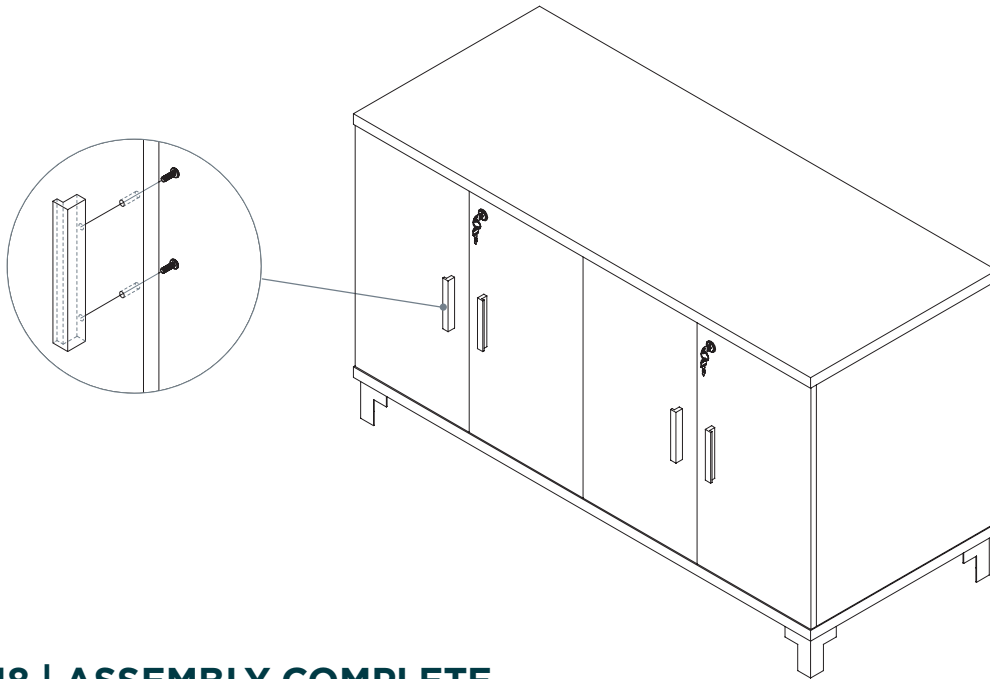

18 | ASSEMBLY COMPLETE

