
Easiframe®Curved Instructions



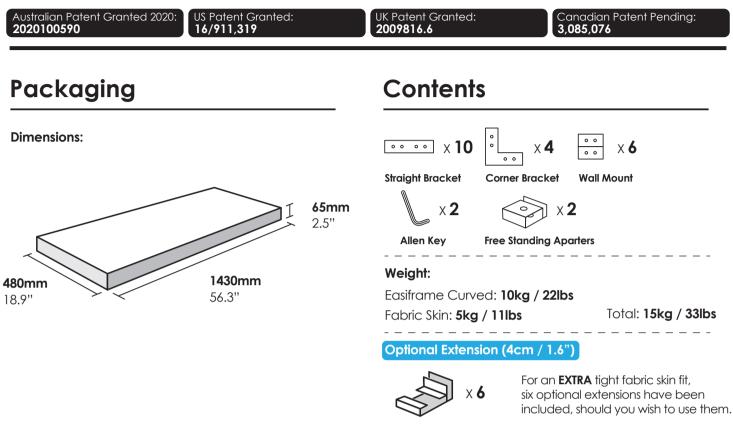

Frame Assembly



The Easiframe® Curved is

labelled on each joint with a green dot . Please ensure that the same labels are connected


(A + A - B + B etc.)

All joints require an Allen Key to tighten which is supplied.


Please Note: Green dot labels are stuck to the **BACK** of the frame. Once in place, frame peices will need to be **TURNED OVER** to connect the joints. The Easiframe[®] Curved can be converted into 3 size options Please follow the instructions for the size option you require

	WIDTH	HEIGHT	FLOOR
Option 1	98.4"	84.4"	76.5″
	2500mm	2145mm	1945mm
Option 2	98.4"	94.3"	66.7"
	2500mm	2395mm	1695mm
Option 3	98.4"	104"	56.9"
	2500mm	2645mm	1445mm


Option 1

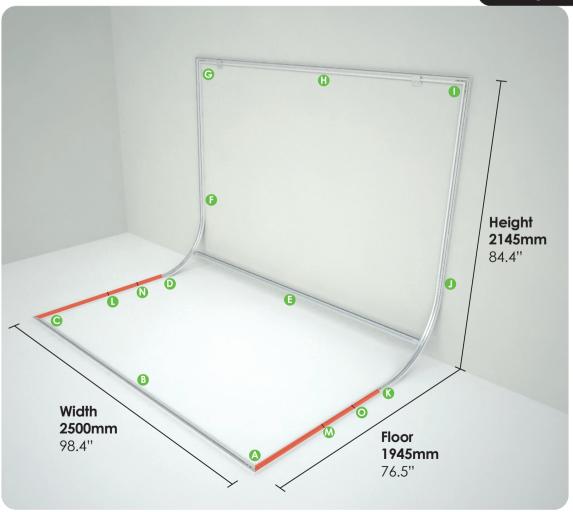

Option 2

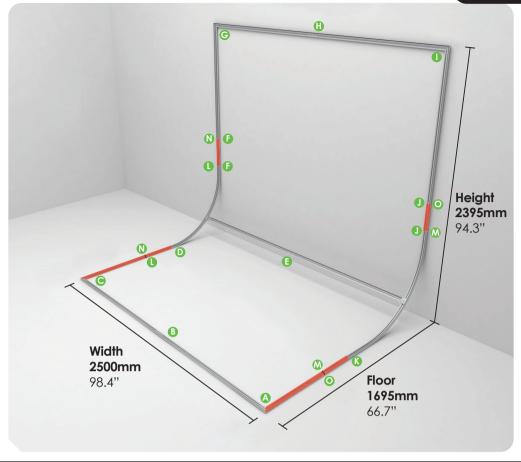


Option 3

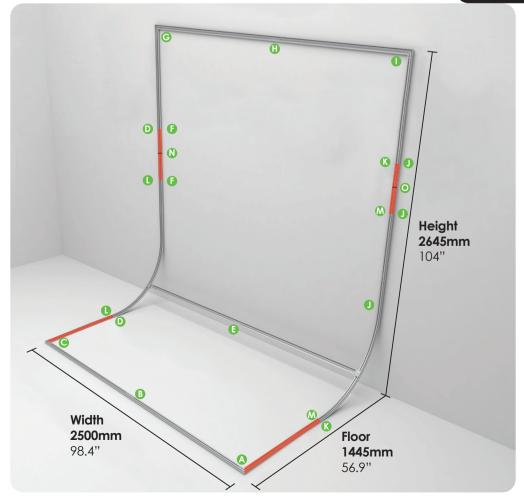

Easiframe®Curved Instructions



Fabric Insert

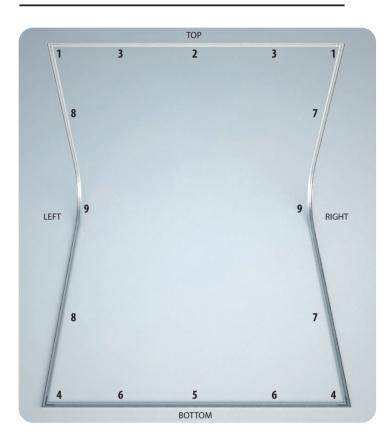


To install the fabric skin correctly, start by inserting the fabrics silicone edge into the top two corners, then into the middle and finish the remaining section of the top.

Repeat the same process for the bottom section and then the sides.

Please refer to the diagram - Starting from '1'

Insert silicone edge into the frame sewn side down. When inserted correctly, you should not be able to see the sewing.

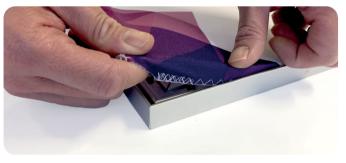



For More Information

For more information and tutorials head to our website at **www.easiframe.com**

Or head to our socials: Facebook: Easi Frame Printaly Instagram: @Easiframe YouTube: Printaly EASIFRAME

Head to YouTube for more information and Tutorials - Printaly EASIFRAME