



# SKIRTED SOAKING TUB INSTALLATION INSTRUCTIONS



Retain these instructions for future use.

[www.buildpelican.com](http://www.buildpelican.com)

# 1. Packing List


<b>1</b> Bathtub <b>1pc</b> 	<b>2</b> Iron Support 270 <b>3pcs</b> 	<b>3</b> Screw ST6*20 <b>6pcs</b> 
---	--	--

# 2. Required Tools

Screwdriver 	Level 
---	--

# 3. Checking

After opening the package, please check the tub and accessories carefully.

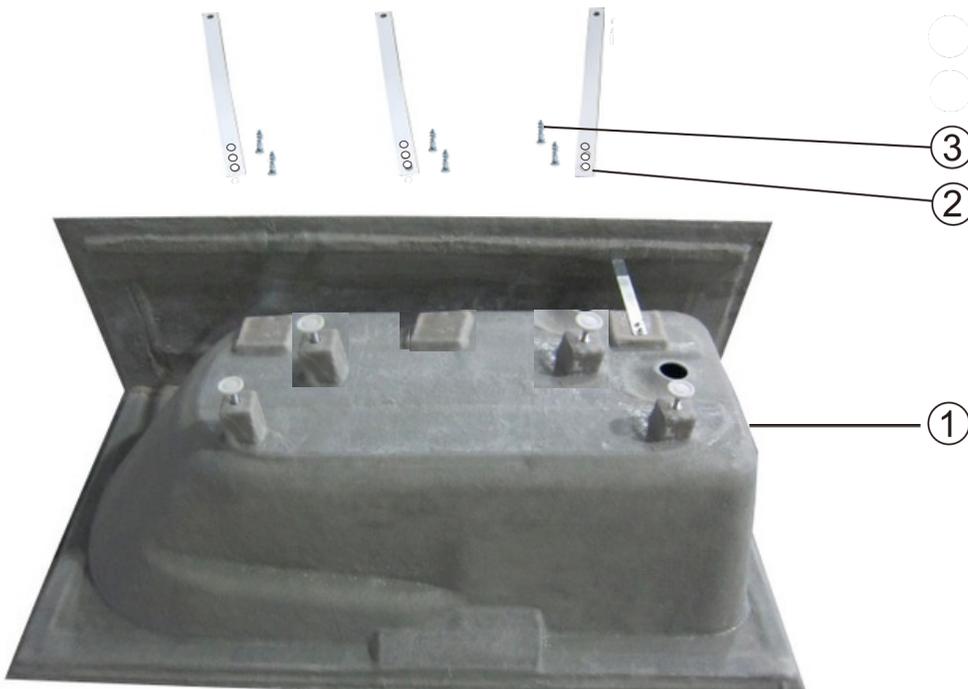

# Installation Process:

**Step 1:** Put the tub on the mat, tub mounted upside down, then install iron support ②, see figure 1.



FIGURE 1



FIGURE 2

A. Insert the supporting cast iron bar as shown in figure 2.

B. Next, use level to make sure apron is vertical to the ground. See figure 3.



FIGURE 3



FIGURE 4

C. Lastly, using two ST6x16 screws to fix the iron support on the solid wood. See figure 4.

**Step 2:** After the installation of the first flat iron, go on to the second one, installation see figure 5. At the same time make sure skirt panel flat surface, with the method shown in figure 6, then begin installation for the iron support, installation method as step 1.

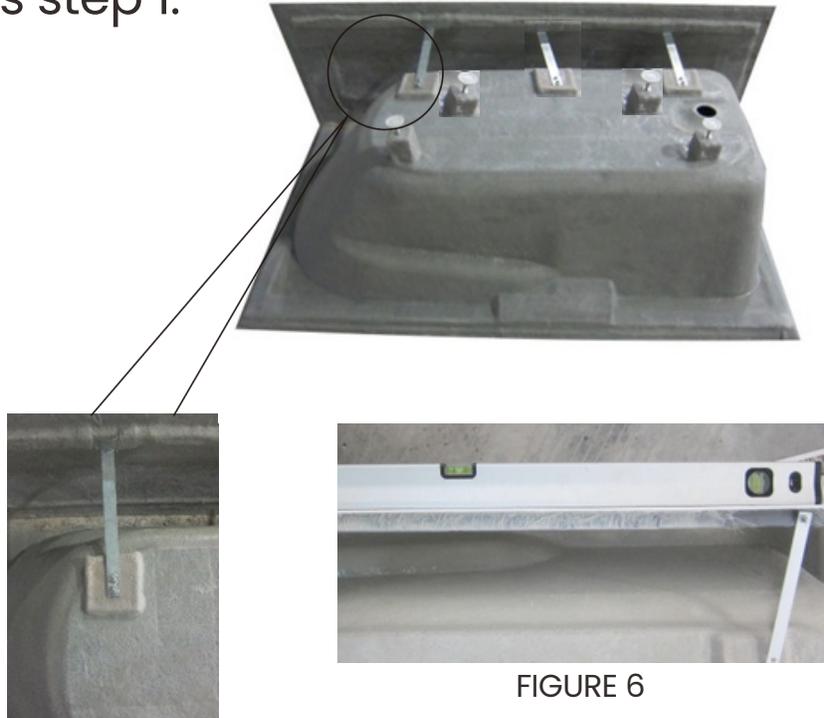


FIGURE 5

FIGURE 6

**Step 3:** Apron fixed firmly with bathtub bottom, then adjust feet to make bathtub level, see figure 7 and 8 – the finished installation.

*\*If you use the prelevel feet, Step 3 is not necessary.*

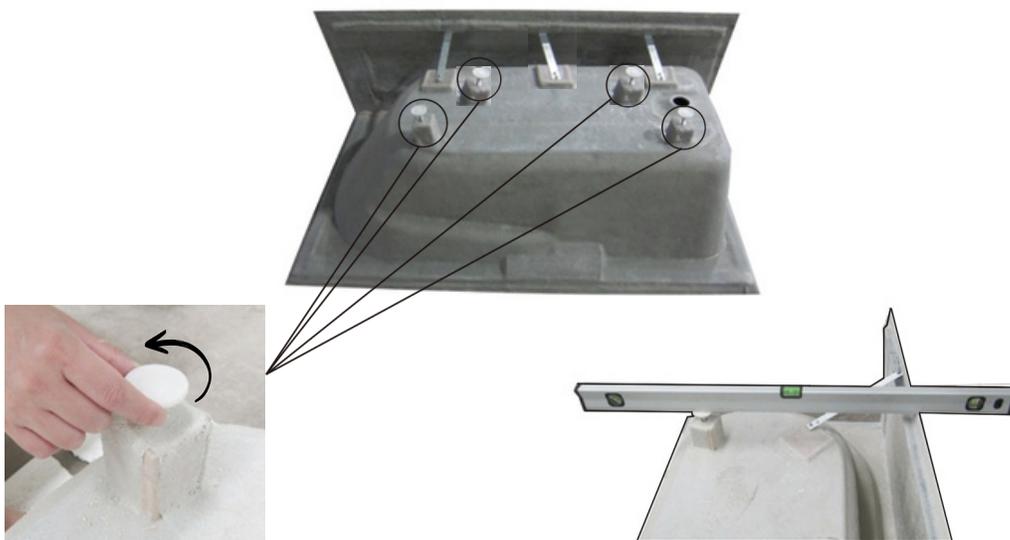


FIGURE 7

FIGURE 8