

retrospec

Tote^{PLUS} XL

Front Basket



OWNER'S MANUAL



Tools Needed

1. 1.5mm hex wrench
2. 3mm hex wrench
3. 8mm box wrench
4. Diagonal cutters

1. Turn off the bike and remove the battery from the bike.
2. Take the basket out of its packaging and ensure all parts are present.
 - A. 1 basket
 - B. 1 light extension wire
 - C. 1 M5 nut
3. Using the 5mm hex wrench, remove the 4 mounting bolts from the headtube mounting points.
4. Disconnect the headlight wire and remove the headlight wire from its current mounting point using the 3mm hex wrench.
5. Position the basket on the front of the bike by hand and align the 4 bolt holes with the 4 mounting points on the frame. Pay attention to the path of cables and wires during the process. If any of them are bent at sharp angles or kinked, reposition them until the kink or bend is eliminated.
6. Thread each of the 4 mounting bolts through the basket into the frame one at a time and tighten by hand.
7. With the basket loosely fixed to the frame, use the 5mm hex wrench to slowly tighten each bolt until each is snug, but still allows the basket to be moved with slight force.

8. At this time, make sure the basket is level. Adjust by hand if needed. Once you are happy with its position, tighten all 4 bolts (6Nm for those using a torque wrench).
9. With the basket now installed, the headlight can be repositioned to the front of the basket. The front plate has an M5 hole. With the light bracket held in position by hand, run the light mounting screw through the bracket and hole. Then spin the included M5 nut onto the screw by hand.
10. Finish by tightening with the 3mm hex wrench and 8mm box wrench.
11. Connect the included wire extensions to the headlight and then to the original light wire that runs into the frame. Use the included zip ties to fix the wire extension to the mounting points on the underside of the basket. Use the diagonal cutters to trim the excess zip tie for a clean look.
12. Use basket to carry stuff :)



Tools Needed

1. Clé hexagonale de 5 mm
 2. Clé hexagonale de 3 mm
 3. Clé à douille de 8mm
 4. Pince coupante diagonale
-
1. Éteignez le vélo et retirez la batterie du vétéo.
 2. Sortez le panier de son emballage et assurez-vous que toutes les pièces sont présentes.
 - A. 1 panier
 - B. 1 rallonge de lumière
 - C. 1 écrou M5
 3. A l'aide de la clé hexagonale de 5mm, retirez les 4 boulons de montage des points de montage du tube de direction.
 4. Débranchez le fil du phare et retirez le phare de son point de montage actuel à l'aide.
 5. Positionnez le panier à l'avant du vélo à la main et alignez les 4 trous de boulons avec les 4 points de montage sur le cadre. Faites attention au cheminement des câbles et des fils pendant ce processus. Si l'un d'eux est plié à angle vif ou pilié, repositionnez-vous jusqu'à ce que le pli ou la courbure soit éliminé.
 6. Vissez chacun des 4 boulons de montage à travers le panier dans le cadre un à la fois et serrez à la main.
 7. Avec le panier fixe sans serre au cadre, utilisez la clé hexagonale de 5mm pour serrer lentement chaque boulon jusqu'à ce que chacun soit bien ajusté, mais permet toujours au panier d'être déplacé avec une légère force.


8. A ce stade, assurez-vous que le panier est de niveau. Ajustez à la main si nécessaire. Une fois que vous êtes satisfait de sa position, serrez les 4 boulons (6 Nm pour ceux qui utilisent une clé dynamométrique).
9. Une fois le panier installé, le phare peut être positionné à l'avant du panier. La plaque avant a un trou M5. Avec le support de lumière maintenu en position à la main; faites passer la vis de montage de la lumière à travers le support et le trou. Vissez ensuite l'écrou M5 fourni sur la vis à la main.
10. Terminez en serrant avec la clé hexagonale de 3mm et le cli à douille de 8mm.
11. Connectez l'extension de fil incluse au phare, puis au fil de lumière d'origine qui passe dans le cadre. Utilisez les attaches zippées incluses pour fixer l'extension de fil aux points de montage sur le dessous du panier. Utilisez les pinces coupantes diagonales pour couper l'excédent de lien zip pour couper l'excédent de lien zip pour un look propre.
12. Utilisez le panier pour transporter des choses.

retrospec



Contact Us

Need some help with your new gear? Just want to say “hey” and talk to someone on our team? We’re here for that too.

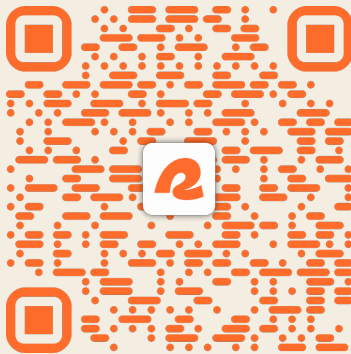

Give us a follow, while you're at it:

@retrospec

#retrospec

#readytooutdoor