


Ⓑ IMPORTANT:

COMPRESSOR EQUIPPED WITH AN EXTERNAL OF INTERNAL OVERLOAD PROTECTOR. ALLOW TIME FOR RESET.
USE COPPER CONDUCTORS ONLY.
(EMPLOYER DES CONDUCTEURS DE CUIVER SEULEMENT.)

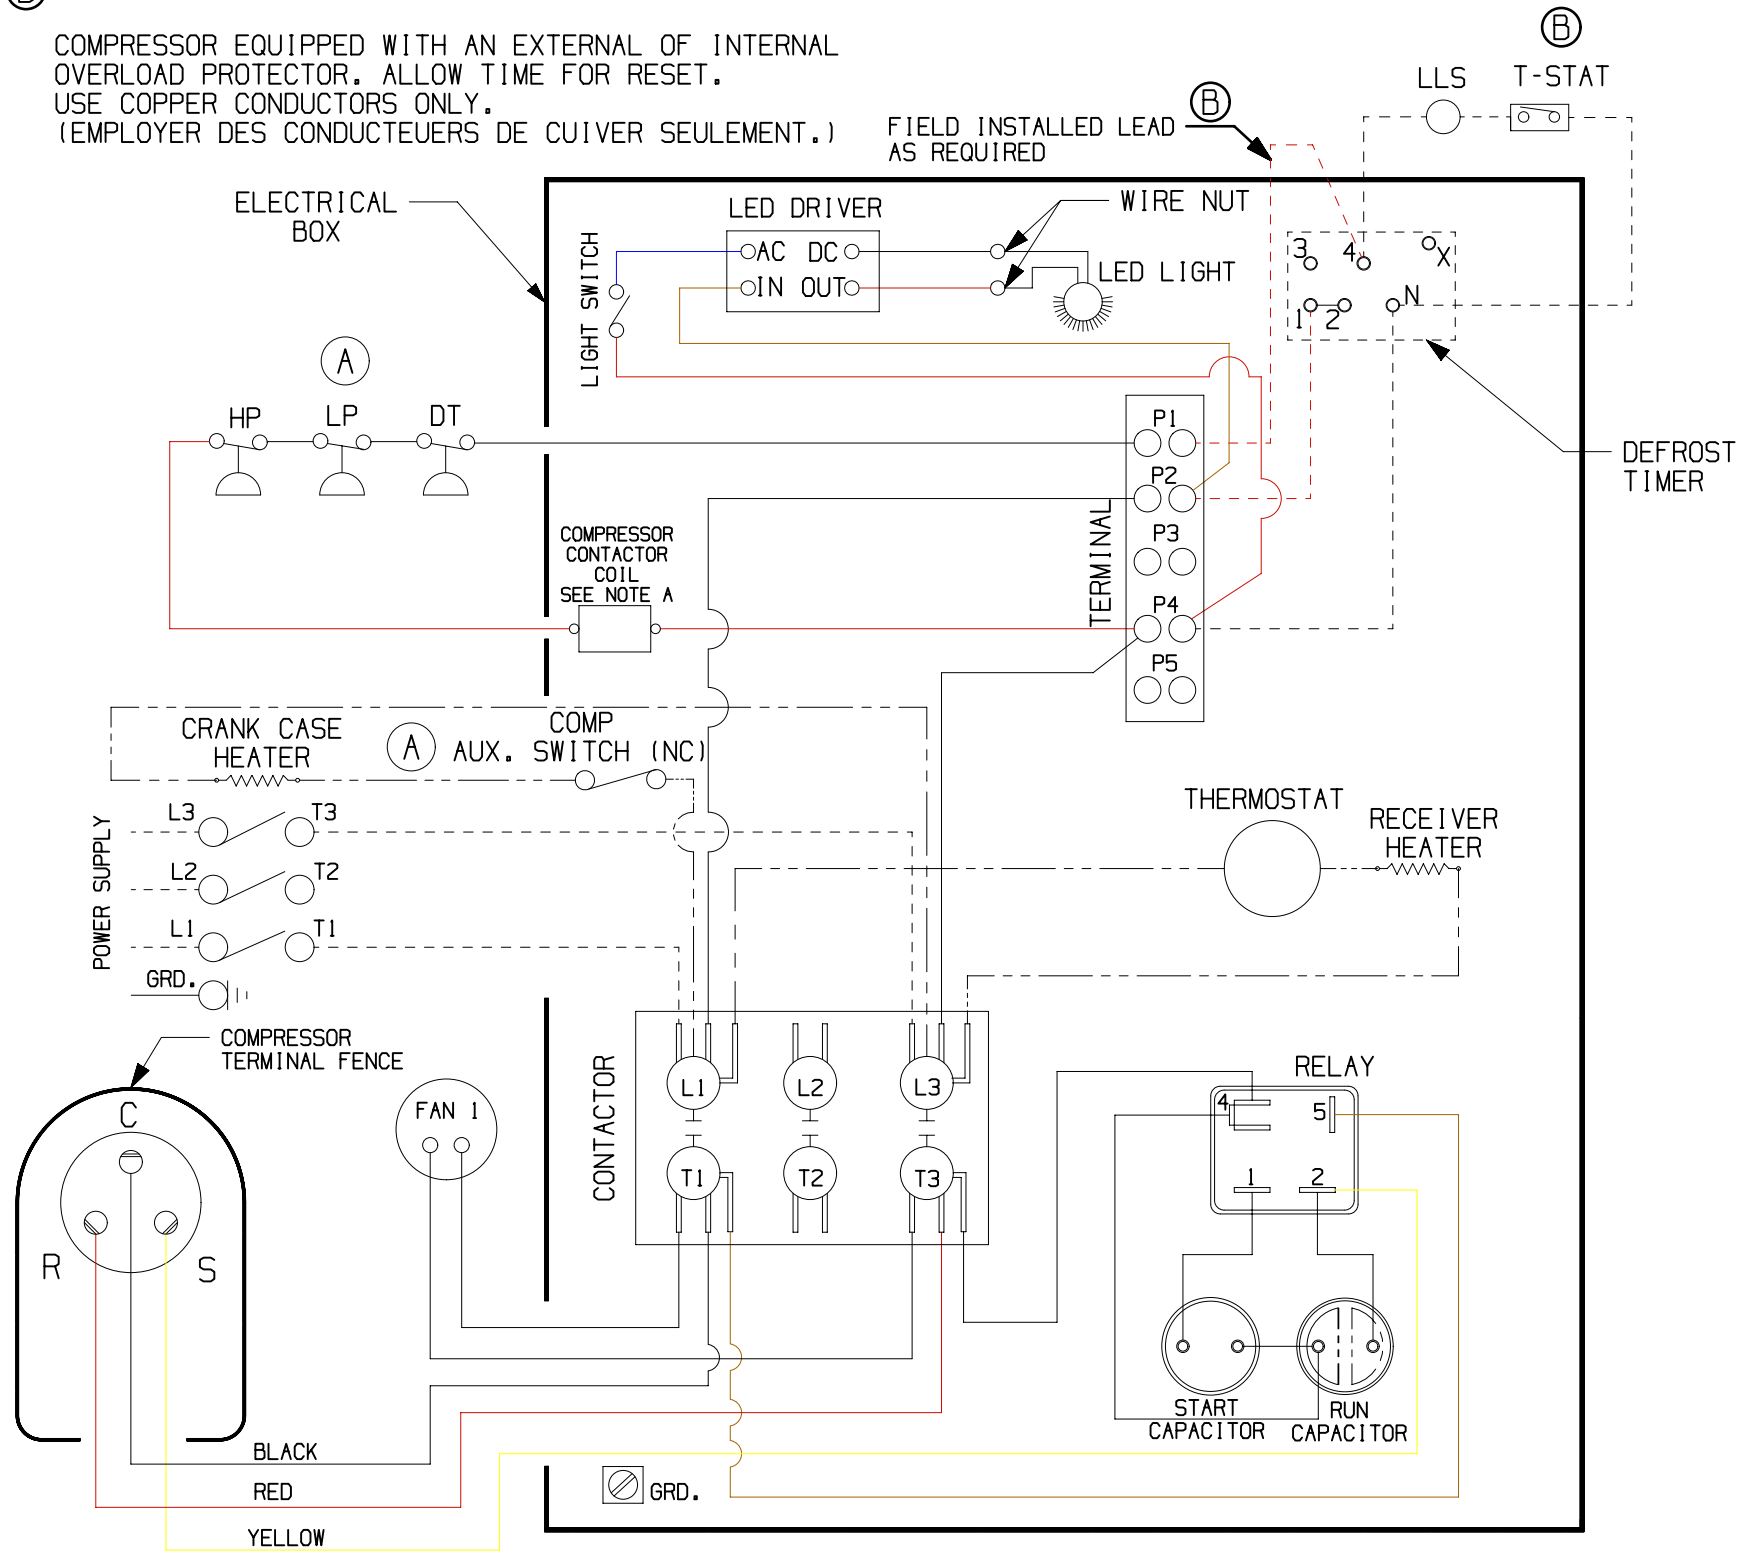


NOTES

FIELD WIRING NOTES

1. ALL FIELD WIRING MUST BE DONE IN COMPLIANCE WITH ALL APPLICABLE LOCAL AND NATIONAL CODES.
2. CONNECT INCOMING POWER LEADS FROM POWER SUPPLY TO L1 AND L3 IN COMPRESSOR CONTACTOR (L1 AND L2 IF TWO POLE CONTACTOR) OR TO L1 AND L3 IN DISCONNECT SWITCH (IF PROVIDED). USE COPPER CONDUCTORS ONLY. (EMPLOYER DES CONDUCTEURS DE CUIVER SEULEMENT.) PROVIDE EQUIPMENT GROUNDING CONDUCTOR, USE 75° C (MIN.) WIRING.
3. PLACE JUMPER ACROSS P1 AND P2 IN TERMINAL BOARD IF NO OTHER CONTROLLING DEVICE IS INSTALLED.
4. DEFROST HEATERS LOADS SHOULD NOT BE HIGHER THEN THE MAXIMUM HEATERS LOAD INDICATED ON THE UNIT LABEL.
5. DEFROST TIMER IS INTERMATIC DTAV40 OR PARAGON B145-00.
6. IF DEFROST TIMER, LLS & T*STAT ARE LOCATED IN EVAPORATOR, THEN SUPPLY POWER FROM P2 & P4 FROM THE TERMINAL BOARD.

GENERAL NOTES:

- A. CONTACTOR COIL CIRCUIT IS FACTORY CONNECTED TO 230 V SOURCE IN PANEL AS SHOWN
- B. WITH ANY T.P.Co. APPROVED START RELAY USED, CONNECT LEADS TO SAME NUMBERED TERMINALS REGARDLESS OF LOCATION
- C. COMPRESSOR EQUIPPED WITH AN INTERNAL OVERLOAD PROTECTOR. ALLOW TIME FOR RESET.

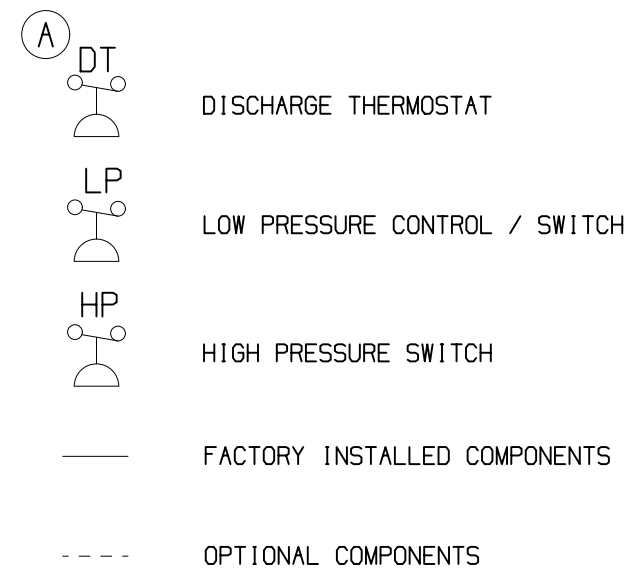

CONDENSING UNIT WIRING


NOTES:

1. REDUCE WHEN PRINTING WITH BORDER LINE OF APPROX. 7.75 x 10.75
2. MATERIAL: Z-ULTIMATE 3000 WHITE.
3. PRINTING TO BE IN COLOR WITH HEAVY ENOUGH PEN WEIGHT AND UL APPROVED INK.
4. MUST COMPLY WITH T.P.Co. GLOBAL SPEC 08.
5. SEE SHEET 2 FOR PRODUCTION PRINTABLE VERSION

B	24JUN21	PART NO.
REVISION		91311

UNIT

3D,VNX10

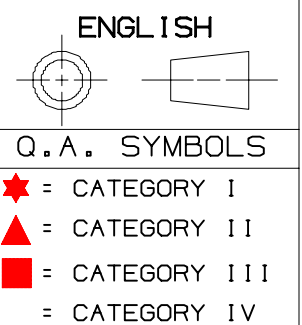

WIRING DIAGRAM STICKER

TECUMSEH PRODUCTS CO.
ANN ARBOR, MICHIGAN

NOTED


THIS PRINT SUPERSEDES ALL PRINTS PRIOR TO

DRAWING NO.

91311

Ⓑ

COMPRESSOR EQUIPPED WITH AN EXTERNAL OF INTERNAL
OVERLOAD PROTECTOR. ALLOW TIME FOR RESET.
USE COPPER CONDUCTORS ONLY.
(EMPLOYER DES CONDUCTEURS DE CUIVER SEULEMENT.)

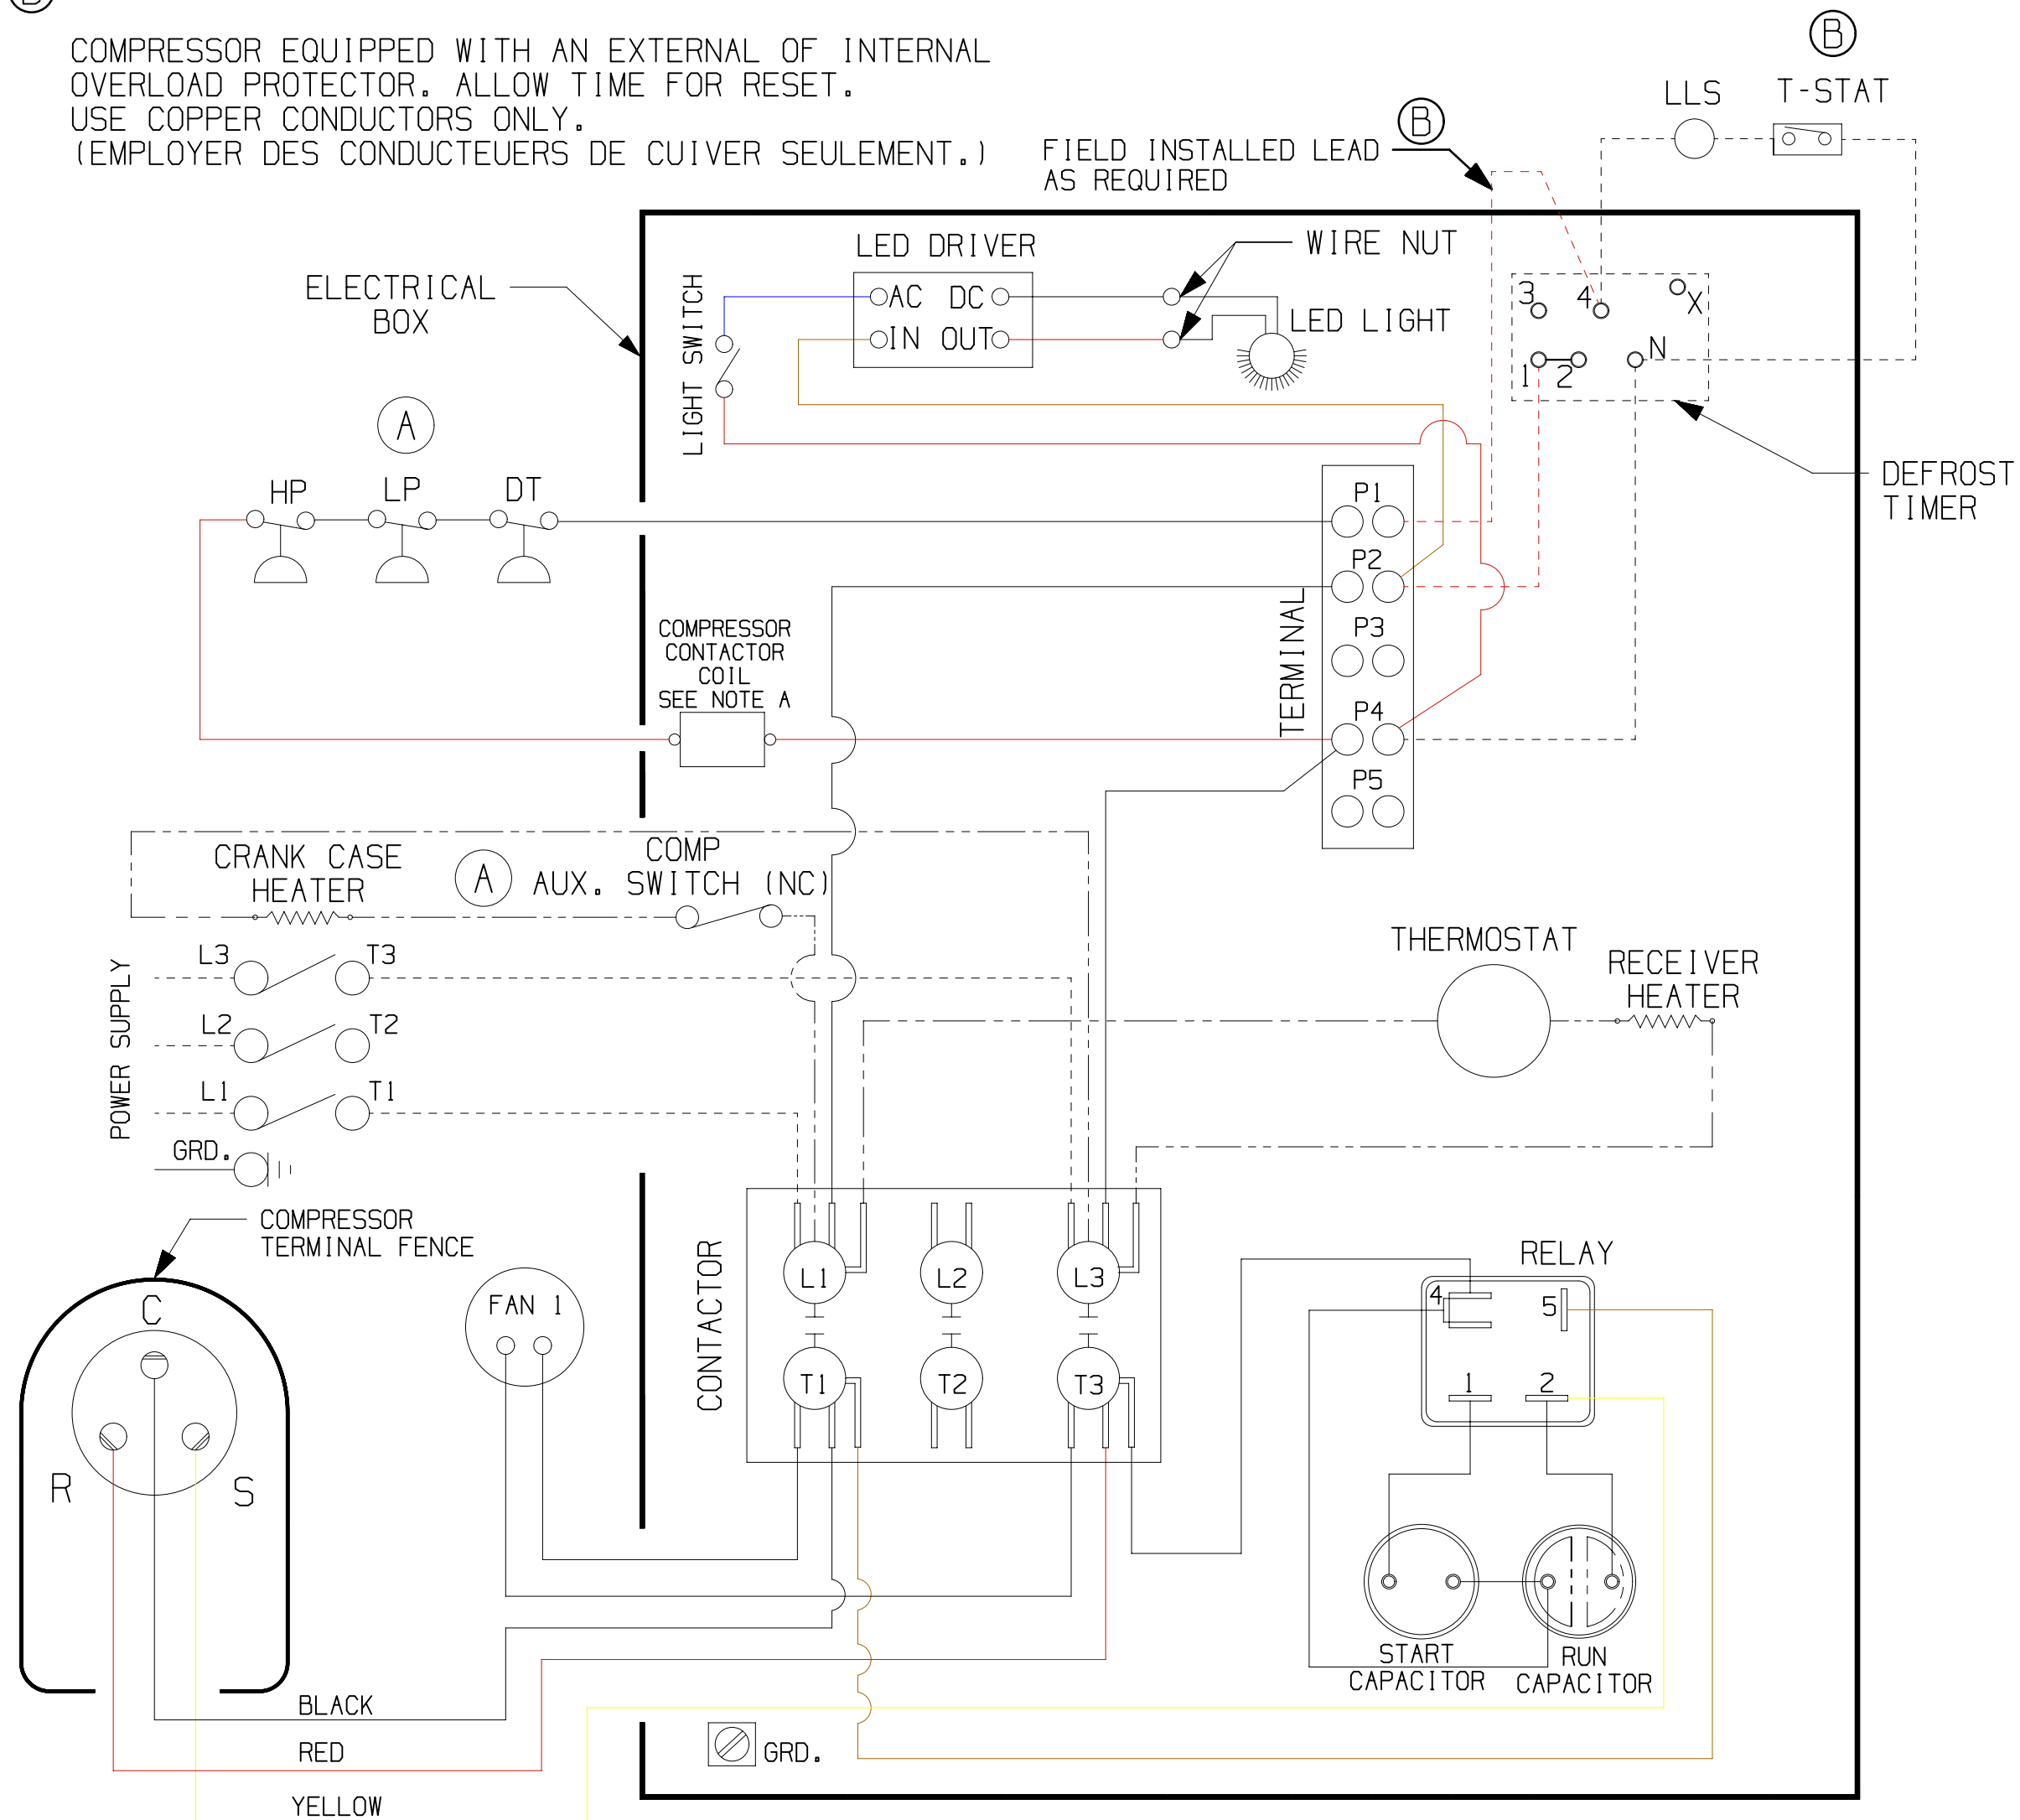


NOTES

FIELD WIRING NOTES

1. ALL FIELD WIRING MUST BE DONE IN COMPLIANCE WITH ALL APPLICABLE LOCAL AND NATIONAL CODES.
2. CONNECT INCOMING POWER LEADS FROM POWER SUPPLY TO L1 AND L3 IN COMPRESSOR CONTACTOR (L1 AND L2 IF TWO POLE CONTACTOR) OR TO L1 AND L3 IN DISCONNECT SWITCH (IF PROVIDED). USE COOPER CONDUCTORS ONLY. (EMPLOYER DES CONDUCTEURS DE CUIVRE SEULEMENT.) PROVIDE EQUIPMENT GROUNDING CONDUCTOR. USE 75° C (MIN.) WIRING
3. PLACE JUMPER ACROSS P1 AND P2 IN TERMINAL BOARD IF NO OTHER CONTROLLING DEVICE IS INSTALLED.
4. DEFROST HEATERS LOADS SHOULD NOT BE HIGHER THEN THE MAXIMUM HEATERS LOAD INDICATED ON THE UNIT LABEL.
- ⑤ 5. DEFROST TIMER IS INTERMATIC DTAV40 OR PARAGON 8145-00.
6. IF DEFROST TIMER, LLS & T'STAT ARE LOCATED IN EVAPORATOR, THEN SUPPLY POWER FROM P2 & P4 FROM THE TERMINAL BOARD.

GENERAL NOTES:

- A. CONTACTOR COIL CIRCUIT IS FACTORY CONNECTED TO 230 V SOURCE IN PANEL AS SHOWN
- B. WITH ANY T.P.Co. APPROVED START RELAY USED, CONNECT LEADS TO SAME NUMBERED TERMINALS REGARDLESS OF LOCATION
- C. COMPRESSOR EQUIPPED WITH AN INTERNAL OVERLOAD PROTECTOR. ALLOW TIME FOR RESET.

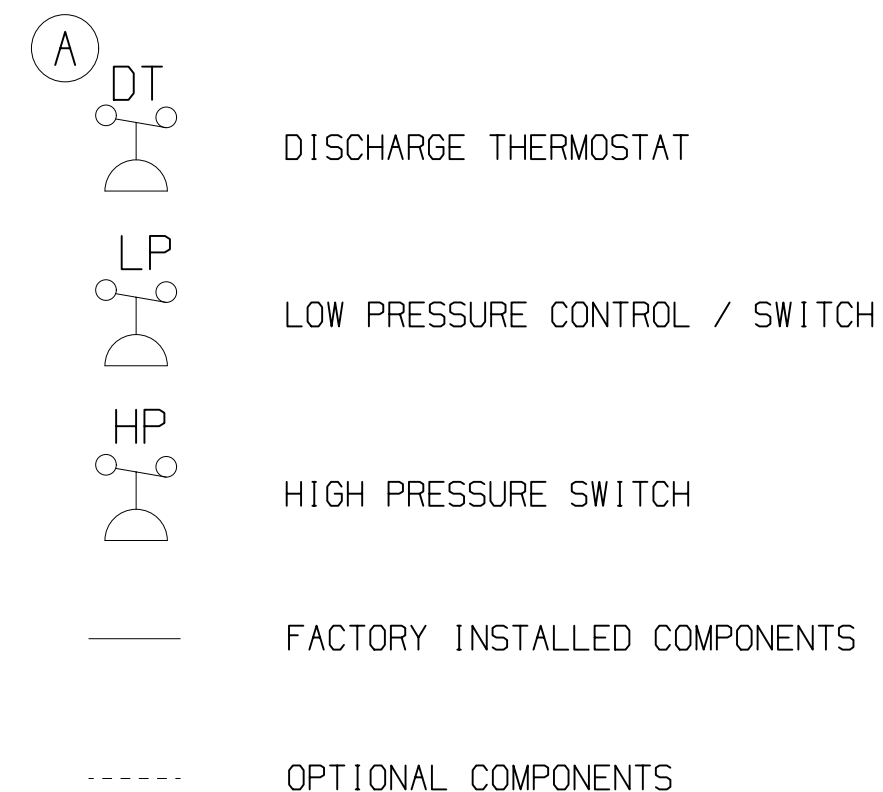

CONDENSING UNIT WIRING

B	24 JUN 21	PART NO.
REVISION		91311