

EASY-TO-INSTALL EXPLAINER



1. Start with a clean, flat substrate and seal it with a suitable primer and leave it to dry.



2. Take the Retile Attractive Panels, which are supplied in an easy-to-handle rolls sizes or bespoke cut to size sheets.



3. Peel back the release liner a little way and start to apply to the sealed substrate. Use the Retile Application Roll to apply pressure to the panel, ensuring no air bulbs.



4. Take your chosen tile and ensure the back is free from dust and loose debris.



5. The Retile Magnetic Panels are supplied pre-cut to your specified size. Peel back the release liner to expose the special high bond adhesive.



6. Position the Retile Magnetic Panel over the tile back and press down.



7. Start with a clean, flat substrate and seal it with a suitable primer and leave it to dry.




8. Using a spirit level to level up and place your tile with magnet on to the wall, and away you go.



9. The Retile System is suitable for large tiles to borders.



10. Once you have set your line and got started, the tiles will go up in literally minutes.

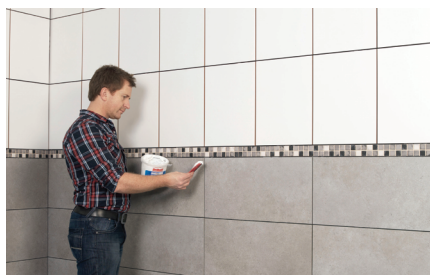

11. When you have tiled your area, it is immediately ready for grouting.



12. When the time comes to look at newer designs, the tiles can be removed easily and once the wall is cleared of old grout, then the next tiles can go up.