


Coat Loop Installation Instructions

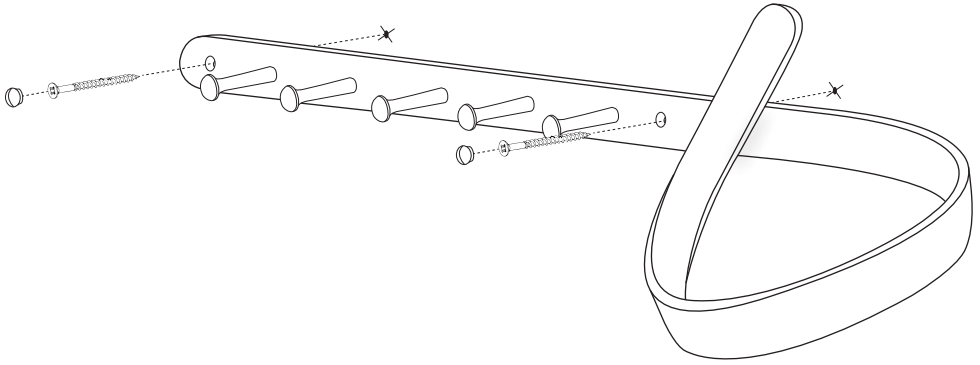

1. Identify if there are any hidden pipes or electrical cables in the wall to avoid causing damage or risk of electrical shock during installation. Determine the fixing method appropriate to the wall structure (e.g. plaster board plugs). We would always recommend finding joists if possible.
2. Using a Pozidriv screwdriver, carefully screw the screws provided into the holes of the Coat Loop so they partially protrude out of the back by approximately 2-3mm.
3. Align the Coat Loop on the wall using a spirit level and press firmly into the wall surface so that the screws leave small marks showing where to fix to.
4. Using the screws provided and if necessary, a fixing method appropriate to the wall structure, (e.g. plaster board plugs) fix the Coat Loop to the wall. The back of the Coat Loop should be flush against the wall.
5. Gently tap in the wooden plugs provided conceal the screws to complete the installation.