

retrospec

Roo Rev XL

Running Boards



OWNER'S MANUAL


Oh, hey!

Welcome to the **retrospec** family! We're so happy to have you along for the ride. Your new e-bike accessory comes with everything you need to hit the ground rolling.

These running boards provide a stable footrest for passengers and extra support for cargo bags. Maximum load capacity is **30 lbs (13.6 kg) per side**. Always install securely before use.

What's in the Box

- ✓ 1× Left Running Board
- ✓ 1× Right Running Board
- ✓ 4× M5 Bolts
- ✓ 4× Washers
- ✓ 4× Lock Nuts

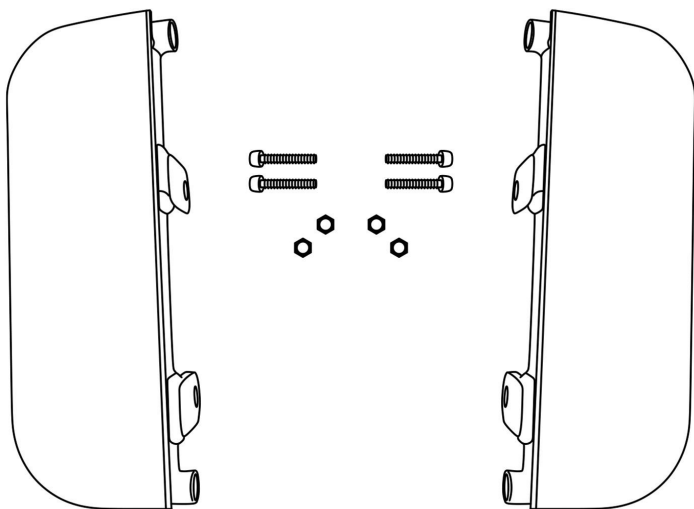

Tools Required

- 13 mm box wrench
- 6 mm hex wrench
- Torque wrench capable of 10 Nm

⚠ Safety First:

Before beginning installation, turn off your bike and remove the battery. This prevents accidental activation of the motor or electrical components while working on the bike.


Installation Steps

1. Position the Running Board

- Identify the **left** and **right** boards.
- Align each board with the mounting points on the lower side of the frame.

2. Insert the Bolts

- Place a **washer** on each bolt.
- Insert bolts through the board's mounting holes and frame mounts.

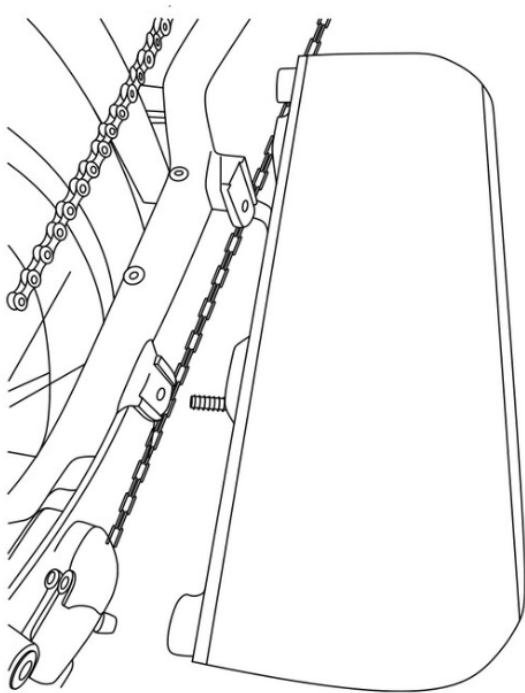


3. Attach the Nuts

- On the inside of the frame, place a **washer** and then a **lock nut** on each bolt.

4. Tighten Securely to Torque Spec

- Hold the nut with the **8 mm box wrench**.
 - Tighten the bolt with the **5 mm hex wrench** to **10 Nm** using a torque wrench.
 - Do not overtighten to avoid damaging the frame or threads.
-

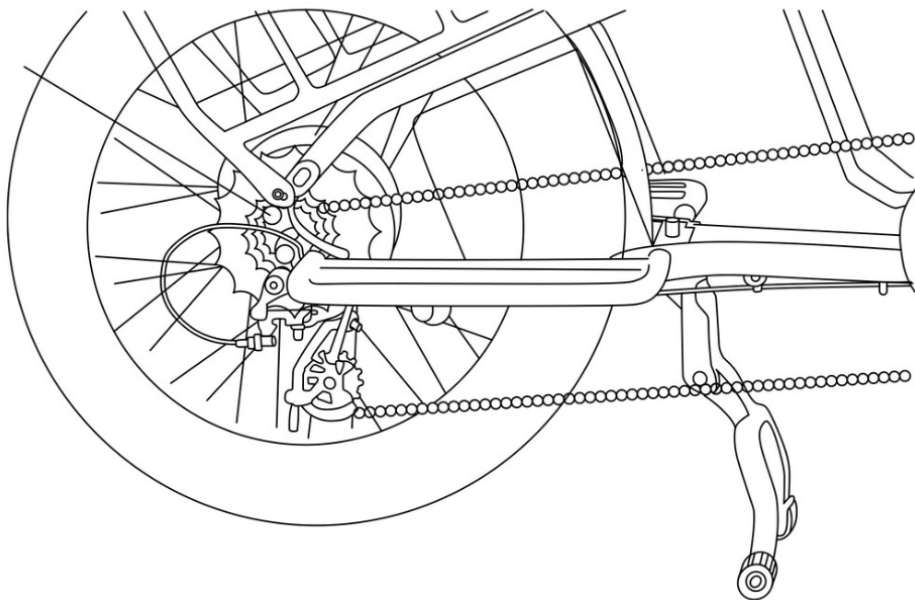

5. Repeat for Opposite Side

- Install the second running board using the same method.

Safety Notes

- Do not exceed **30 lbs (13.6 kg)** per running board.
- Check bolt tightness regularly, especially after the first few rides.
- Ensure passengers keep feet on the running boards and away from moving parts.
- Do not use running boards as a step to mount the bike.

Maintenance

- Wipe clean with a damp cloth.
- Check for loose bolts monthly.
- Replace any damaged hardware immediately.

Warranty

All **retrospec** products are backed by a limited warranty. Scan the QR code to the right or visit retrospec.com/pages/warranty-policy for full details.




Aperçu

Ces repose-pieds offrent un appui stable pour les passagers et un soutien supplémentaire pour les sacs de chargement. La capacité de charge maximale est de **30 lb (13,6 kg) par côté**. Toujours installer solidement avant utilisation.

Pièces incluses

- 1× Repose-pied gauche
- 1× Repose-pied droit
- 4× Boulons M5
- 4× Rondelles
- 4× Écrous de blocage

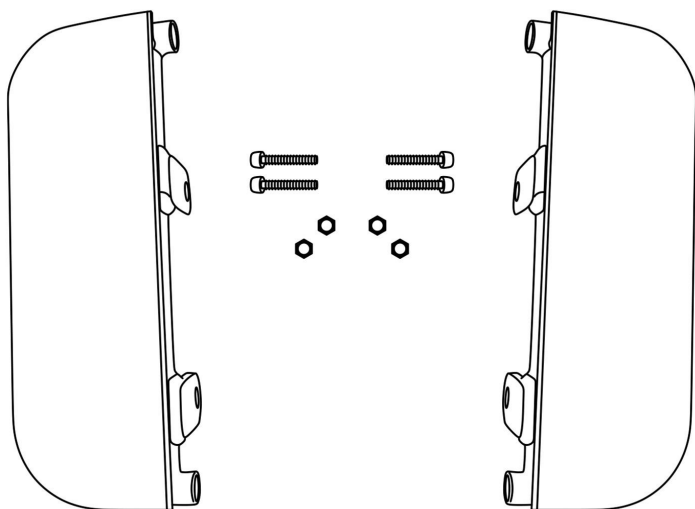

Outils requis

- Clé à douille de 8 mm
- Clé hexagonale de 5 mm
- Clé dynamométrique réglée à **10 Nm**

⚠ Sécurité avant tout :

Avant de commencer l'installation, éteignez votre vélo et retirez la batterie. Cela évite toute activation accidentelle du moteur ou des composants électriques pendant que vous travaillez sur le vélo.


Étapes d'installation

1. Positionner le repose-pied

- Identifier les repose-pieds gauche et droit.
- Aligner chaque repose-pied avec les points de fixation situés au bas du cadre.

2. Insérer les boulons

- Placer une rondelle sur chaque boulon.
- Insérer les boulons dans les trous de fixation du repose-pied et dans les supports du cadre.

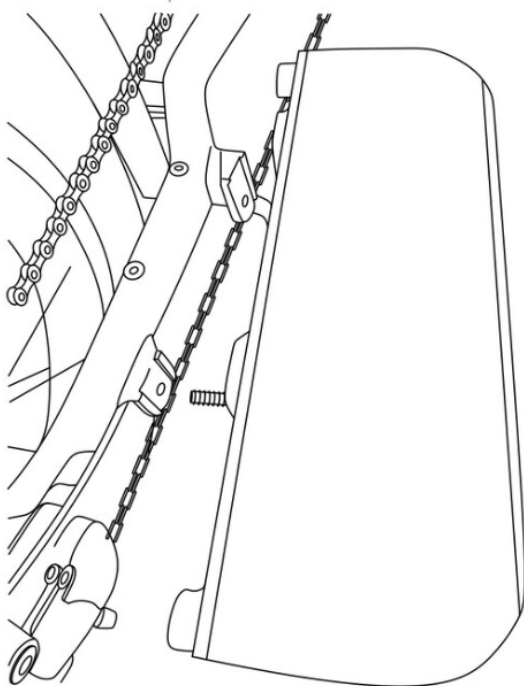


3. Fixer les écrous

- Insérer les boulons dans les trous de fixation du repose-pied et dans les supports du cadre.

4. Serrer au couple recommandé

- Maintenir l'écrou avec la clé à douille de 8 mm.
- Serrer le boulon avec la clé hexagonale de 5 mm à **10 Nm** à l'aide d'une clé dynamométrique.

- Ne pas trop serrer afin d'éviter d'endommager le cadre ou le filetage.

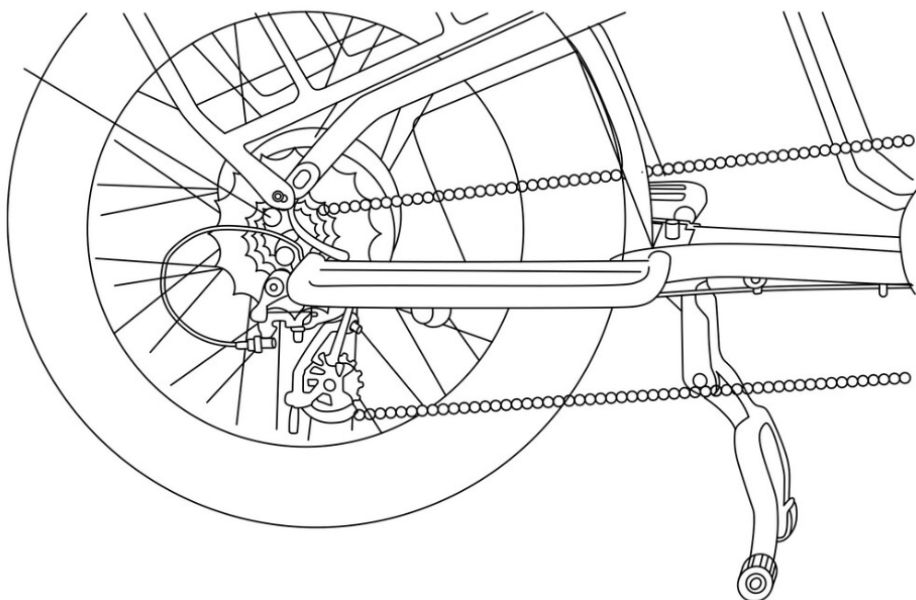

5. Répéter pour le côté opposé

- Installer le second repose-pied de la même façon.

Consignes de sécurité

- Ne pas dépasser **30 lb (13,6 kg)** par repose-pied.
- Vérifier régulièrement le serrage des boulons, surtout après les premières sorties.
- S'assurer que les passagers gardent les pieds sur les repose-pieds et loin des pièces en mouvement.
- Ne pas utiliser les repose-pieds comme marche pour monter sur le vélo.

Entretien

- Nettoyer avec un chiffon humide.
- Vérifier chaque mois si les boulons sont bien serrés.
- Remplacer immédiatement toute pièce endommagée.

retrospec

Contact Us

Need some help with your new gear? Just want to say “hey” and talk to someone on our team? We’re here for that too.



Give us a follow, while you're at it:

@retrospec

#retrospec

#readytooutdoor