

## Overshelf Kit HS-5228, HS-5229, HS-5230, HS-5231 For Use with Hoshizaki Commercial Series Pizza Prep Table Models

Check to ensure that all parts are included:

Index				Single Shelf Kit	Double Shelf Kit
No.	Description	HS-Kit	Part Number	Qty	Qty
	HS-Kit	HS-5229 (CPT46)		1	-
	(includes items 1 through 12)	HS-5229 (CPT93)		2	-
		HS-5228 (CPT46)	]	-	1
		HS-5228 (CPT93)		-	2
		HS-5231 (CPT67)		1	-
		HS-5230 (CPT67)		-	1
1	Overshelf	HS-5229	2A7365-06	1	-
		HS-5228		-	2
		HS-5231	2A7365-05	1	-
		HS-5230		-	2
2	Square Tube		4A5733-01	2	2
3	Square Tube Cap		4A5862-01	2	2
4	Square Tube Bracket		4A5958-01	2	2
5	Square Tube Support		4A5998-01	4	4
6	Hex Head Bolt - (6×12 mm)		7B02-0612	2	2
7	Hex Head Bolt - (6×50 mm)	All HS Kits	7B02-0650	4	8
8	Hex Head Bolt - (6×60 mm)		7B02-0660	4	4
9	Flat Washer (28 mm)		4A0198-03	14	14
10	Lock Washer		7L22-0600	10	14
11	Hex Nut		7N12-0600	4	8
12	Flat Washer (M6)		7W22-0600	4	8

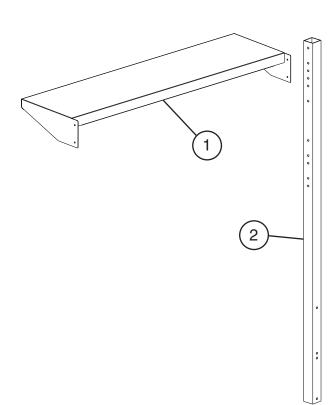

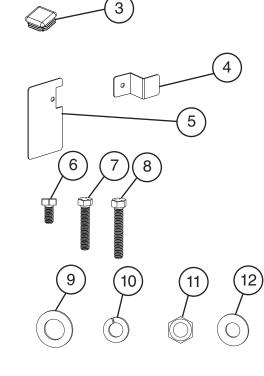


- This appliance should be repaired only by qualified service personnel to reduce the risk of death, electric shock, serious
- injury, or fire.
  No installation or service should be undertaken until the technician has thoroughly read these instructions. Failure to install this kit in accordance with these instructions will adversely affect safety, performance, component life, and warranty coverage.
- To reduce the risk of electric shock, do not touch the plug with damp hands.
- Before servicing; empty the appliance, then unplug the appliance from the electrical outlet.
- Maximum load per shelf:


Total Maximum Weight Per Shelf			
CPT46/CPT93	CPT67		
120 lb. (54 kg)	180 lb. (82 kg)		

- Use care when stacking product on the shelves to prevent items from falling.
- Do not climb, stand, or hang on the appliance, drawers, or shelves. Death or serious injury could occur or the appliance could be damaged.

## Installation Instructions

- 1) Remove all items from the appliance, then unplug the appliance from the electrical outlet. Access the rear of the appliance.
- 2) Using 6×60 hex head bolts (8), lock washers (10), and flat washers (9), secure square tubes (2) to the rear panel. See Fig. 1. Do not tighten at this time. Note: Leave enough room to install square tube supports (5) in step 3.
- 3) Using 6×12 hex head bolts (6), lock washers (10), and flat washers (9), place and secure square tube supports (5) and square tube brackets (4) to the rear panel and tighten.
- 4) Snug all hardware installed in steps 2 and 3.
- 5) Insert square tube caps (3) into the top of square tube (2).

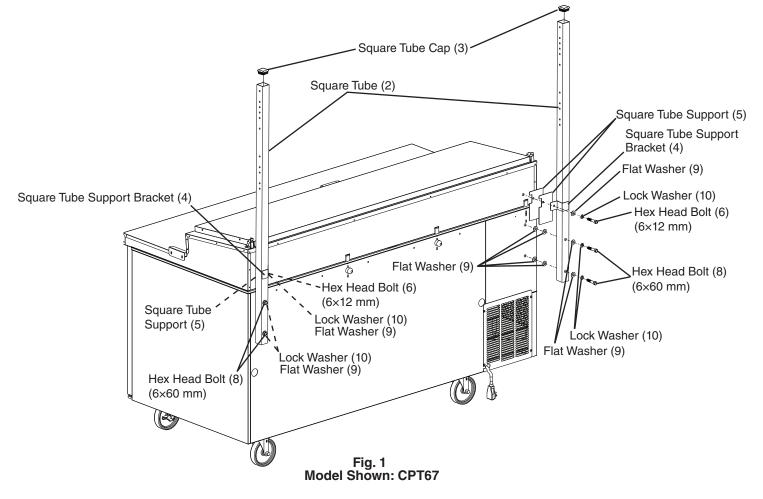

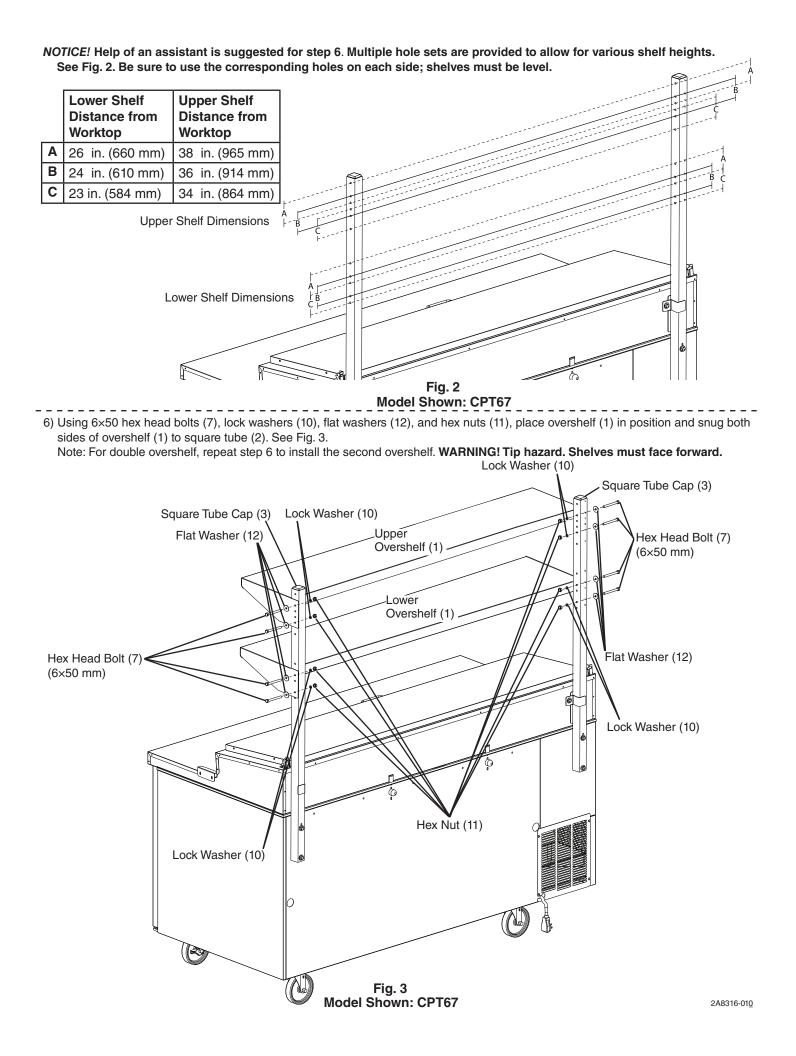

7) Tightened all hardware.

- 8) Place the appliance back in its original position, then plug the appliance back into the electrical outlet.
- 9) Allow the appliance to cool down prior to loading it with items.