



# My SpotClean™ Turbo is not spraying | Support

- Fill clean water tank with water and solution according to instructions on tank

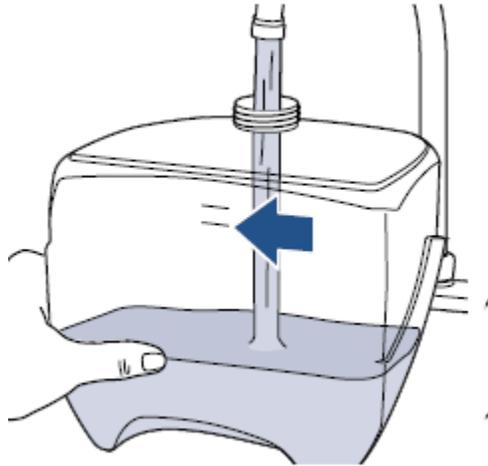

- Seat the tanks correctly on machine with no gaps
- Check the auto-load gasket is on tank correctly
- If gasket is missing, remove clean water tank and check body of machine for gasket
  - Gasket can be removed with a flathead screwdriver by gently wiggling it out of the hole
- With water in tank, hold over sink and press on the x-valve located in the middle of the red auto-load gasket
  - If the tank releases water, continue troubleshooting
  - If tank does not release water, a new cap and insert needs to be ordered
- Turn machine on

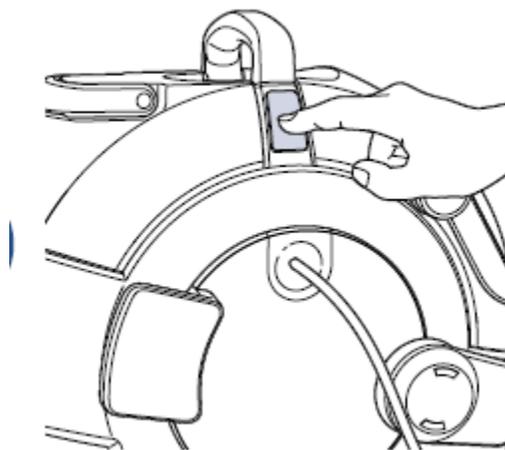

- With clean water tank full, test for spray through hose
  - If there is spray, the pump is working properly

- If there is no spray, remove the tool on the end of the hose
- To remove tool, push "button" and slide off
- If there is spray with the attachment off, then the tool may be clogged
- Clean out the spray tip with a paperclip
- If still no spray, a new tool will need to be ordered
- Stretch hose out and give it a few light tugs and try machine again
- If still no spray through hose please contact us