SSMK-Bosca DSMK-Bosca

Megamaster Kit for Bosca

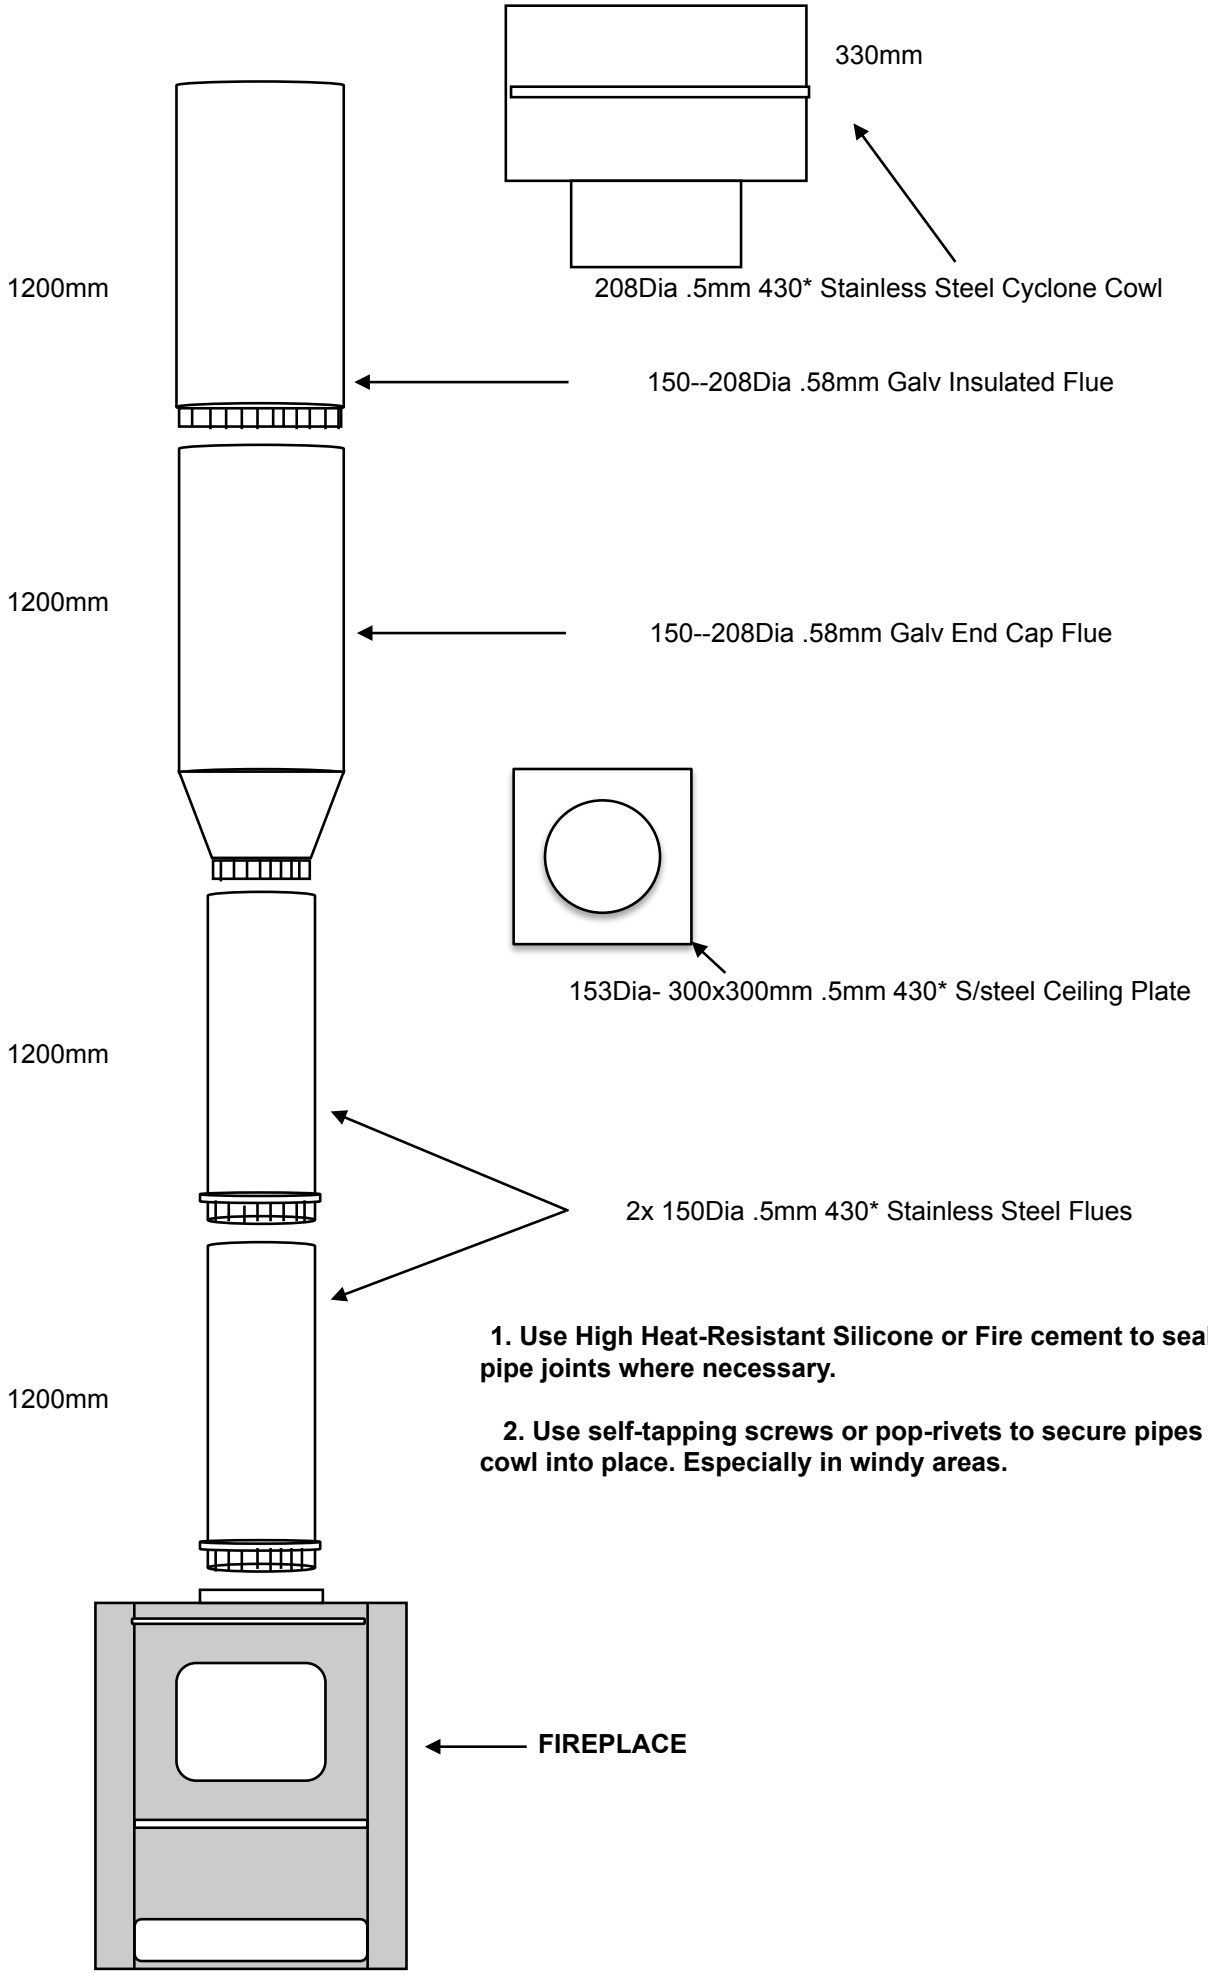

1. Use High Heat-Resistant Silicone or Fire cement to seal flue pipe joints where necessary.

2. Use self-tapping screws or pop-rivets to secure pipes and cowl into place. Especially in windy areas.