

your beyerdynamic

For more information download the manual at: www.beyerdynamic.com/pro-x

beyerdynamic GmbH & Co. KG Theresienstraße 8 · 74072 Heilbronn / Germany Tel. ÷49 7131 617-300 · info@beyerdynamic.com









www.beyerdynamic.com/pro-x

• The lockable connecting cable is fitted with a 3-pin mini XLR cable connector to the headphones. For correct assembly, the small release button of the cable must face to the outter site of the headphones. When connecting the cable, make sure that the cable connector locks in place of the ear cup.

1 To pull of the earpad please

between housing and ear

pads using your fingertips

5 To pull of the headband pad,

please carefully pull on the

silicon strap until all hooks


of the headband pad are

released from the headband.

or a narrow blunt object.

carefully pull apart the gap



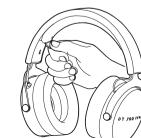

2 When you want to change the cable. please press the small button for release and simultaneously pull off the cable connector from the headphones.



4 To put on the earpad please make sure that the snap-in nose of the ear pad sits in the right place. Then press gently with the palm of your hand against the ear pads until the ring snaps into place

band pad please make sure that the snap-in nose on the right side sits in the right place. Then press gently the pad into the headband until the

6 To put on the headhooks snap into place.