

ASSEMBLY INSTRUCTIONS
KINNEY MIXTE

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE USE & REFERENCE. DO NOT DISCARD.

⚠ WARNING: Serious injuries and even death can occur if the proper safety precautions are not followed.


Always wear a helmet when riding.

TOOLS NEEDED
(Included)



x3


4,5,6 mm Hex Wrench

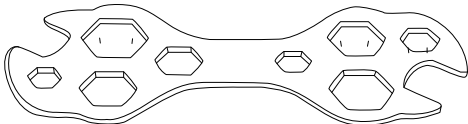

x1


10-function multi-tool

TOOLS NEEDED
(Not Included)



x1

Phillips Screwdriver

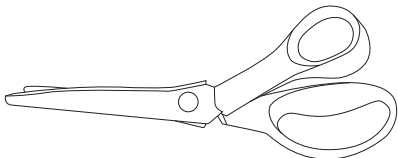


x1

Scissors

UNPACK YOUR BIKE

- 1 - Cut the shipping straps on the outside of the box.
- 2 - Remove the box staples as these are sharp and can cut you as you access the bike. Lift bike out by frame and rear wheel.
- 3 - Rotate the fork so that it is facing forward of the bike (Figure 1). Place the bike on the ground, so it's standing upright on the fork dropouts and rear tire.
- 4 - Cut all of the packing zip ties.
- 5 - Separate the front wheel from the bike by carefully slipping it away from the crank arm, which is resting within the spokes.
- 6 - Remove the accessory box and set it aside.
- 7 - Examine your new bike for any visible damage that may have occurred during shipping.
- 8 - Special Note: For tightening all fasteners, please refer to Appendix D in the back of your owner's manual for all fastener torque specifications.

IMPORTANT: Make sure the fork is facing forward in the direction of travel. As you would when you sit on the bike when riding, make sure the 'arrow sticker' on the fork legs are pointing forward in the direction of travel.

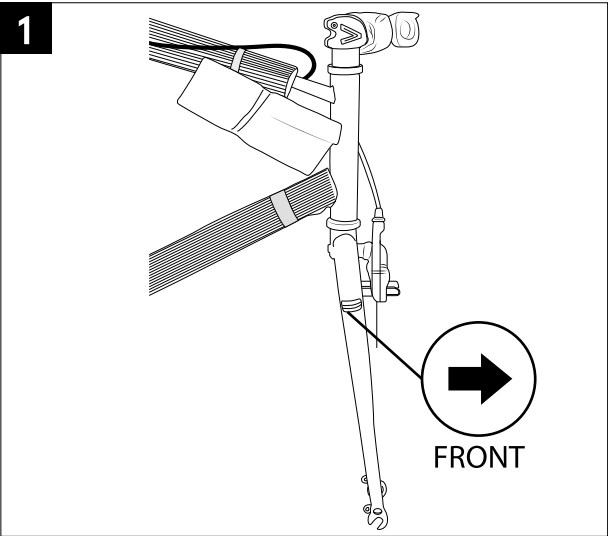


⚠ WARNING Using the bike with the minimum insertion line on the lower portion of the seat post showing above the frame could result in a failure of the seat post and/or the frame causing a loss of control with potential injury to rider. Such failures are not covered by warranty as it is improper use of the product.

SADDLE

- 1 - Remove the plastic shipping plug from the top of the seat tube (Figure 2).
- 2 - Use the included Hex wrench to loosen the seatpost clamp at the top of the seat tube.
- 3 - RECOMMENDED; Apply a thin layer of grease to the inside of the frame seat tube.
- 4 - Insert the seat with the seat post into the seat tube of the frame to at least the minimum insertion line on the shaft of the seat post.


⚠ WARNING! The minimum insertion line must NOT show above the seat tube (Figure 3).

- 5 - Using the Hex wrench, tighten the seatpost clamp once it is at the correct height.
Note: You can make the final adjustment to the height of the seat as needed after the bike is assembled.

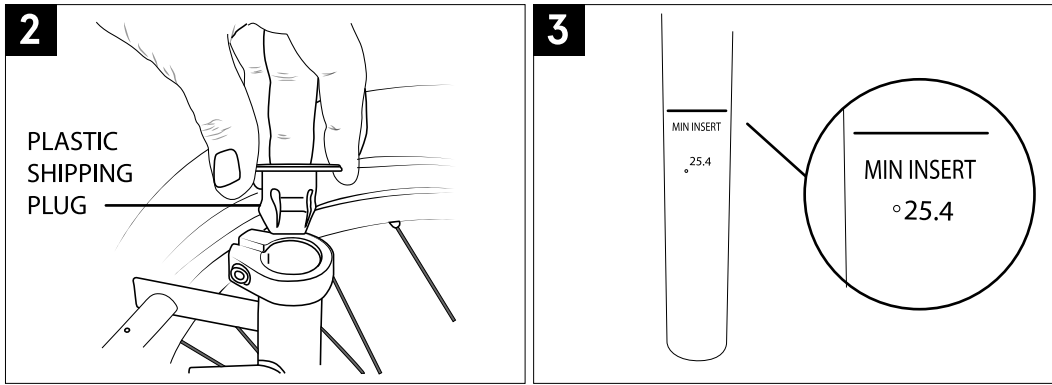

HANDLEBAR/STEM



- 1 - Loosen the stem bolt at the top of the stem one turn and remove the plastic packing cap from the bottom of the stem (Figure 4). RECOMMENDED; apply a thin layer of grease to the end of the stem shaft by the wedge.
- 2 - Untwist the handlebars and control cables and insert the quill end of the stem into the fork steer tube. You may have to loosen the bolt and wedge a small amount to allow the quill to fit into the steer tube (Figure 5).
- 3 - Make sure that the fork is facing forward and the handlebars are lined up with the fork dropouts.
- 4 - Adjust the height of the stem to your desired level and tighten the stem bolt using a 6mm wrench. You can make final adjustments to the height of the stem after the bike is assembled (Figure 6). NOTE: Be sure that the minimum insertion mark on the shaft of the stem is inside the frame, it must not be visible outside of the frame (Figure 7).

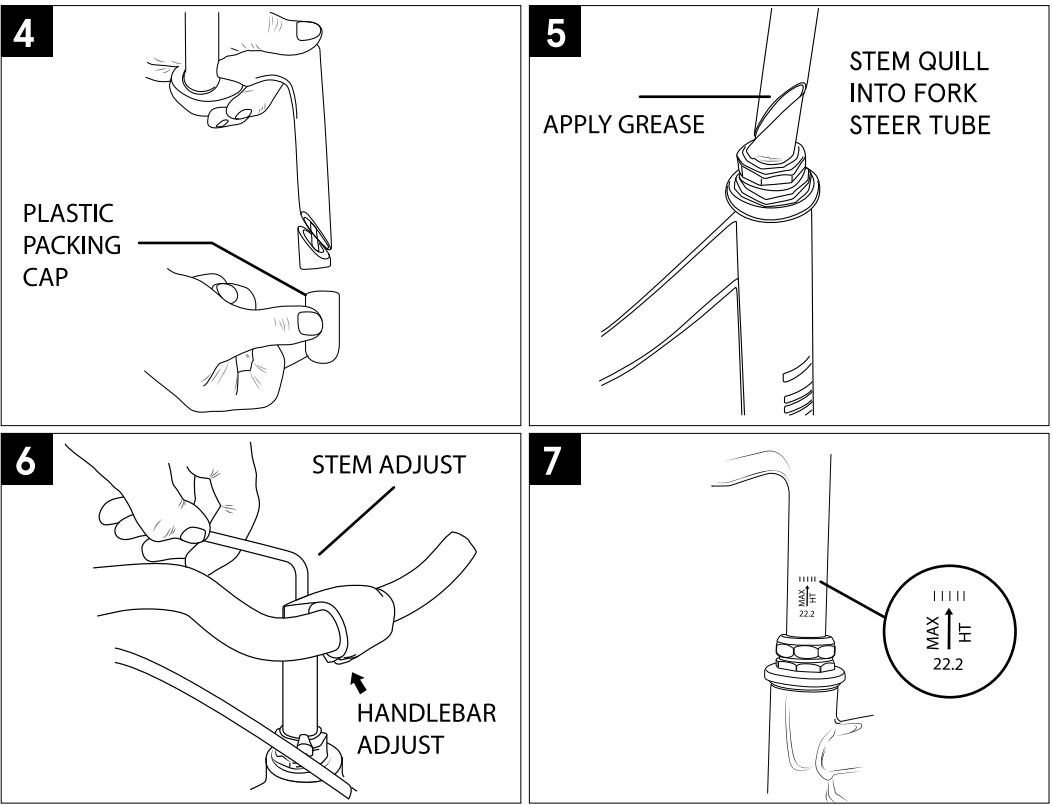

⚠ WARNING Installing the stem with the minimum insertion mark showing outside of the frame could create a dangerous condition allowing the stem to break causing the rider to lose control resulting in serious injuries to the rider (Figure 7).

FRONT WHEEL

- 1 - Flip the bike over so it's resting on the saddle and handlebars.
- 2 - Remove the small black plastic protector from the fork dropouts.
- 3 - Loosen the axle nuts on the front wheel and insert the front wheel into the fork dropouts. Insert the tab of the safety washers into the small holes on the outside of the fork dropouts. (Figure 8).
- 4 - Inspect the wheel to make sure it is centered in the fork (Figure 9). Tighten each axle nut a little at a time with a 15mm wrench, alternating between sides, until each axle nut is properly tightened.
- 5 - Return the bike onto its wheels and align the handlebar stem to the front wheel. Once the stem is aligned to the front wheel, tighten the stem bolt located at the top of the stem (Figure 10).

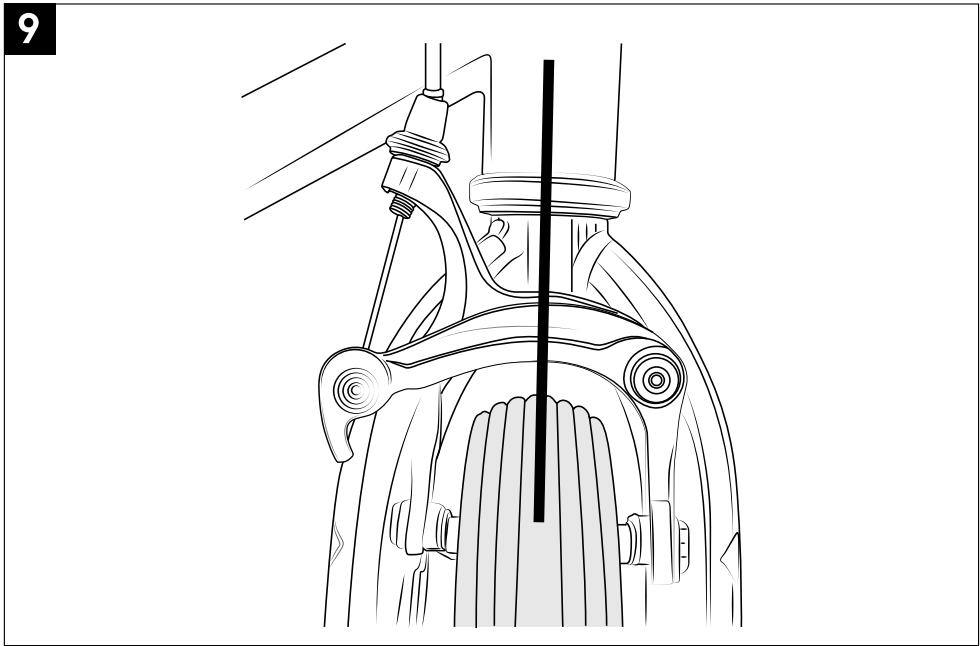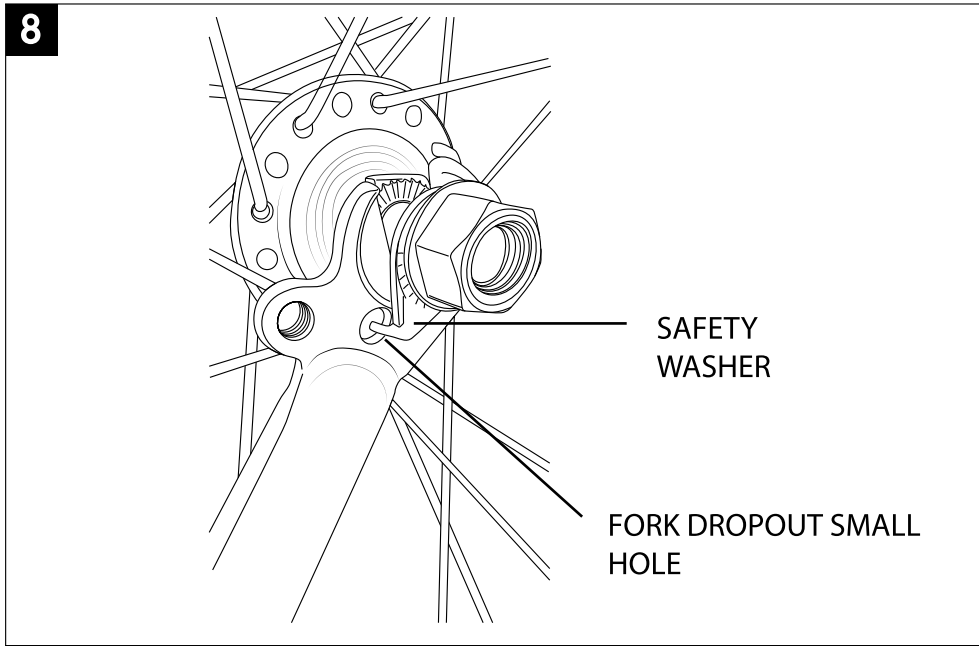

PEDALS




Right Pedal

- 1 - Locate the pedal stamped "R" on the end of the spindle (this is the RIGHT pedal) (Figure 10).
- 2 - RECOMMENDED; Apply a thin layer of grease to the pedal threads prior to installation.
Carefully insert the Right pedal into the Right side crank arm (the side with the chain) and thread it Clockwise (Figure 11). You should be able to thread the pedal in part of the way by hand with minor resistance. If it seems difficult and binds, stop, remove the pedal, realign the threads and try again. Be sure you are turning the right pedal axle in a clockwise direction!
- 3 - Tighten the pedal with a 15mm or adjustable wrench until the pedal is securely attached to the crank arm. The pedals need to be tightened with a considerable amount of force so that they do not come lose.

Left Pedal

- Locate the pedal stamped "L" on the end of the spindle (this is the LEFT pedal) (Figure 10).
- 4 - RECOMMENDED; apply a thin layer of grease to the pedal threads and insert your Left pedal into the Left side crank arm.
- 5 - Thread it Counterclockwise and tighten with a 15mm or adjustable wrench following the instructions in step #3 above (Figure 12).




NOTE: Be sure to tighten both pedals with an adjustable wrench or 15mm open end wrench to the recommended torque specification otherwise they will unscrew while riding causing an unsafe condition for the rider and damaging the threads in the crank.

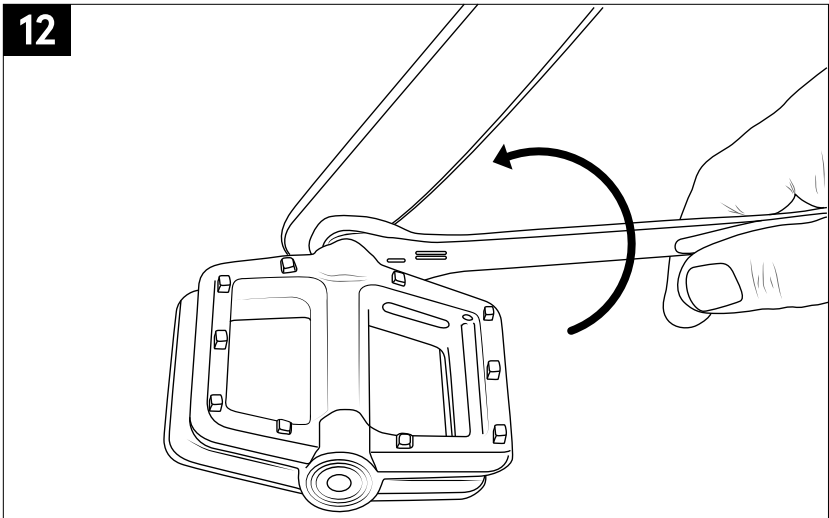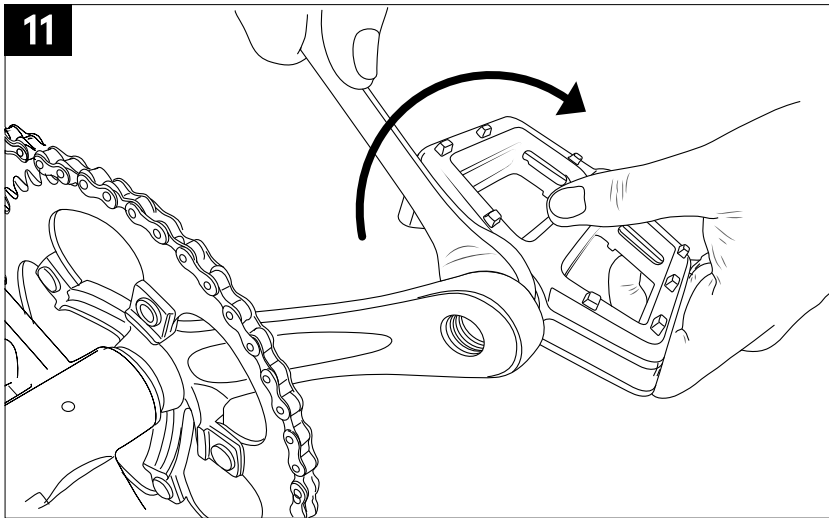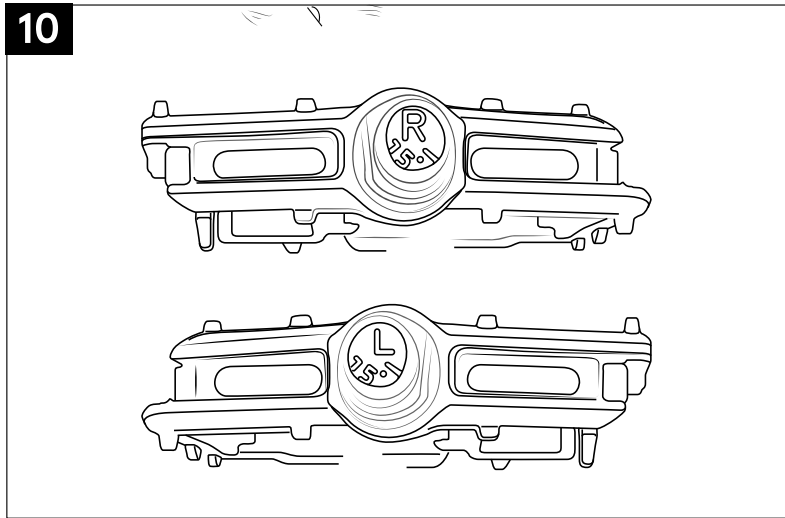

REFLECTORS

Front & rear reflectors should be mounted from the factory. However, some adjustment for correct position may be necessary.


Using your Philips screwdriver, position the Front reflector horizontally (Fig 13), and the rear reflector centered (left-to-right) (Fig 14).

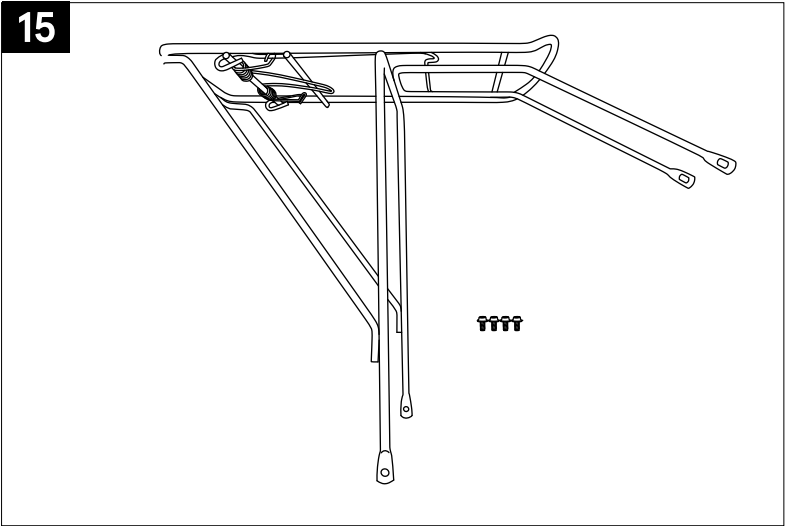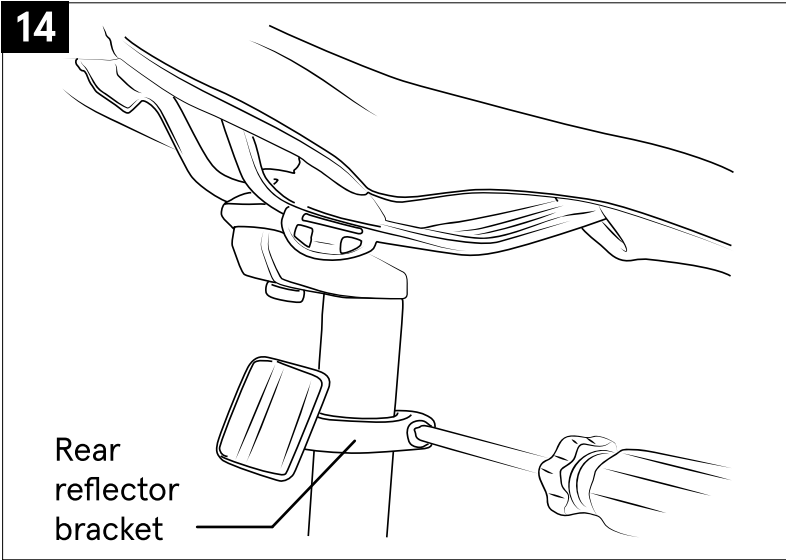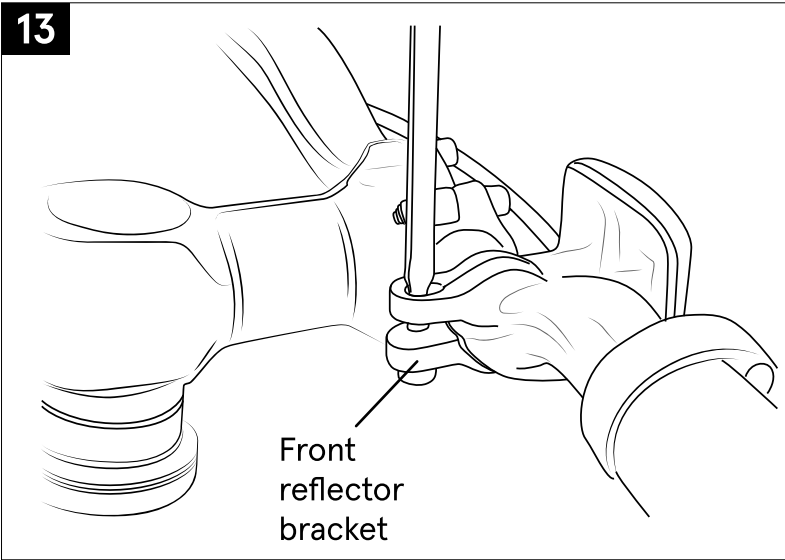


REAR CARRIER (Optional)

Your rear carrier may or may not be installed from our factory. If installed, please disregard the following. If your rear carrier is not installed from the factory, you will find it inside your bike box. It is wrapped to protect it during shipping and may blend in with the other packaging, so watch that you do not accidentally discard it.

- 1 - Unwrap your rear carrier. There is a small plastic bag with the installation bolts attached to the carrier - make sure you do not accidentally discard it. Ready the rack and four bolts (Fig. 15)
- 2 - There are four attachment points (Fig. 15):
 - a. 2 small bolts for the upper attachment points at the top of the seat stays - Top mounting points.
 - b. 2 larger bolts for the lower attachment points at the rear dropouts - Lower mounting points.
- 3 - Attach the two Top bolts first. Install the bolts but do not tighten completely - finger tight. (Fig. 17)
- 4 - Do the same as Step 3 with the two Lower mounting bolts on both dropouts. (Fig. 18)
- 5 - With all four bolts loosely installed, then tighten one-by-one until all four bolts are tight.

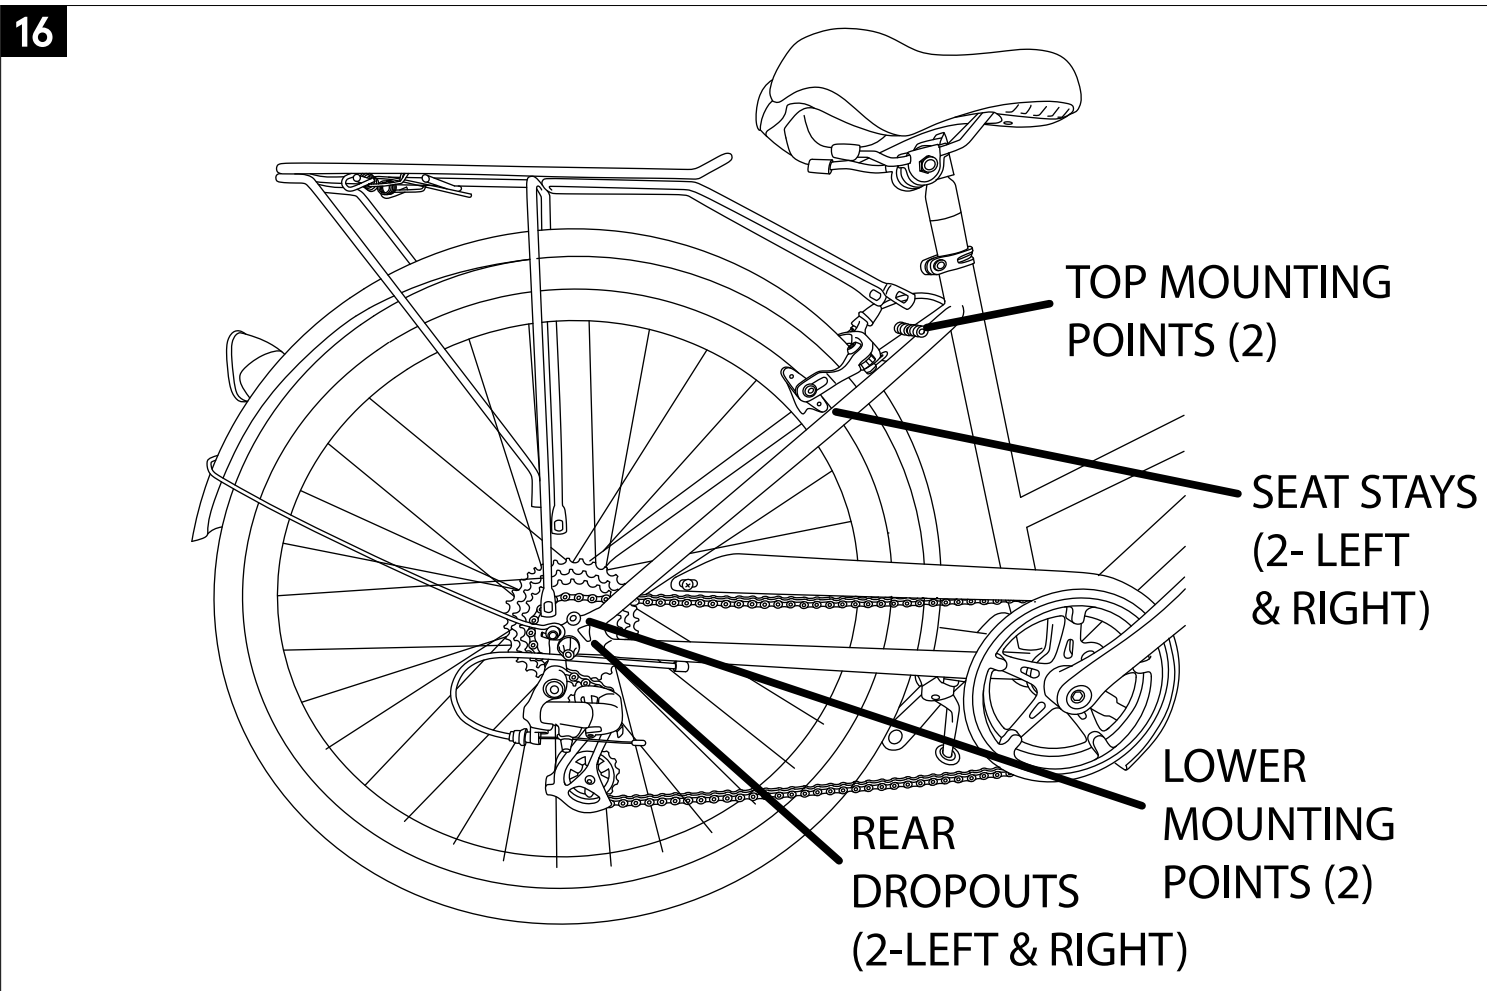

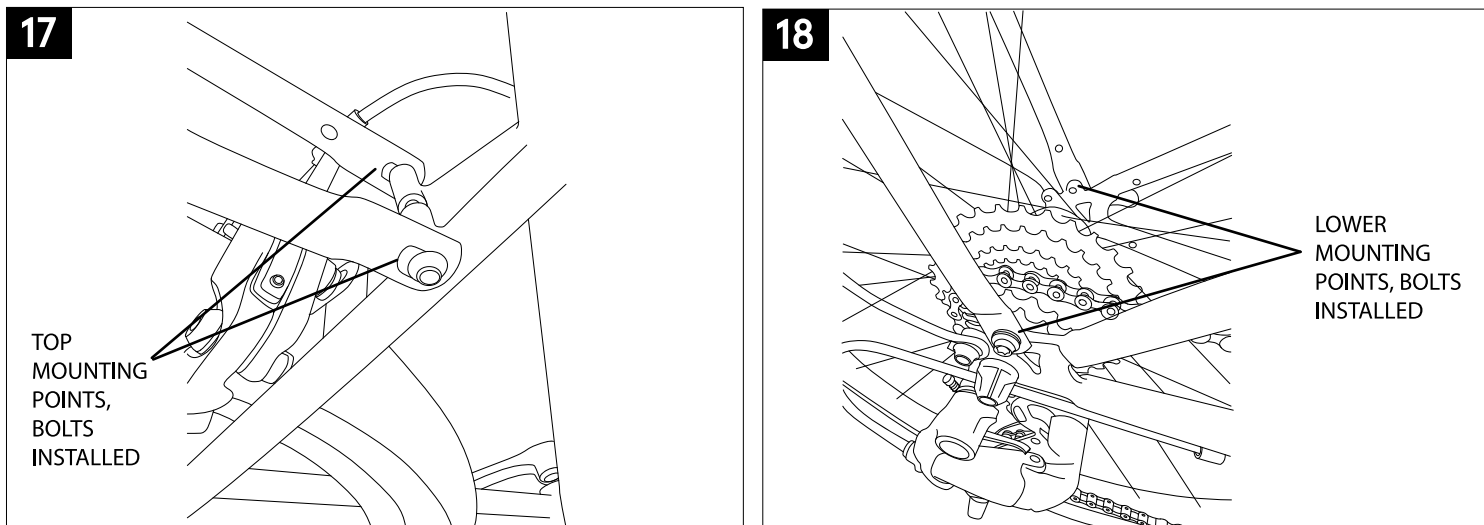




BRAKES AND GEARS

IMPORTANT: We highly recommend taking your bike to a local bike shop and having your brakes and gears (if equipped) set-up by a professional mechanic.

BRAKES

Your 7-speed bicycle is equipped with front and rear linear-pull brakes (also known as “V-brakes”).

- 1 - Be sure that the brake pads are aligned with the curve of the rim and that they contact the rim surface flat and evenly. The brake shoe angle and height can be adjusted by loosening the Hex bolt attaching the brake shoe to the brake arm. Notice that the brake shoe can articulate a certain amount up and down and side to side. (Figure 19)
- 2 - Loosen the brake cable anchor bolt on the brake arm held by a Hex bolt allowing the brake cable to freely glide through its anchor.
- 3 - Squeeze the brake arms together until the brake shoes contact the rim surface. Pull the cable taught through its anchor and tighten the cable anchor bolt. Make sure the brake cable housing is seated properly at the cable stop ferrules before tightening the anchor bolt. (Figure 20)
- 4 - Squeeze the brake lever hard several times to stretch the cable and make sure that it does not slip through its anchor. If the cable tension is too tight to allow the brake shoes to retract and clear the rim surface, loosen the anchor bolt and give the cable some slack. If the cable has too much slack and you cannot apply enough stopping force to the rim, repeat procedure “2” and take the slack out of the cable
- 5 - Be sure that the brake arms are evenly spaced from the wheel and there is some clearance between the brake pads and the rim surface. If the arms are not evenly spaced from the wheel, you can balance the spacing by tightening or loosening the spring tension using the small screw located at the lower side of each brake arm. (Figure 21)

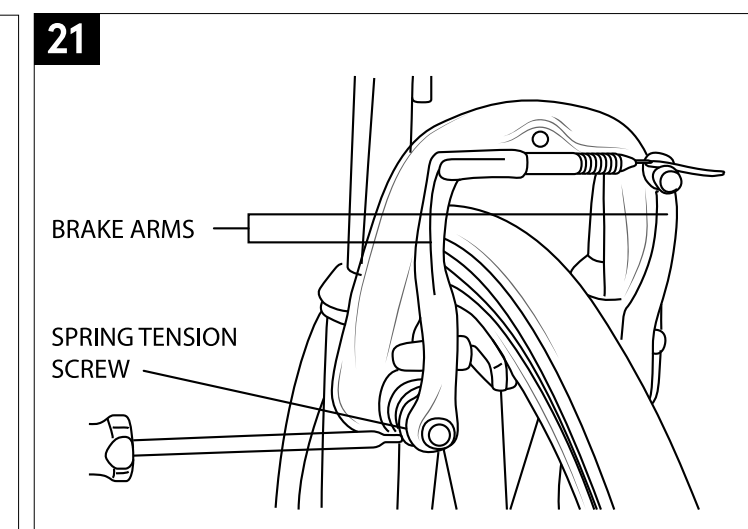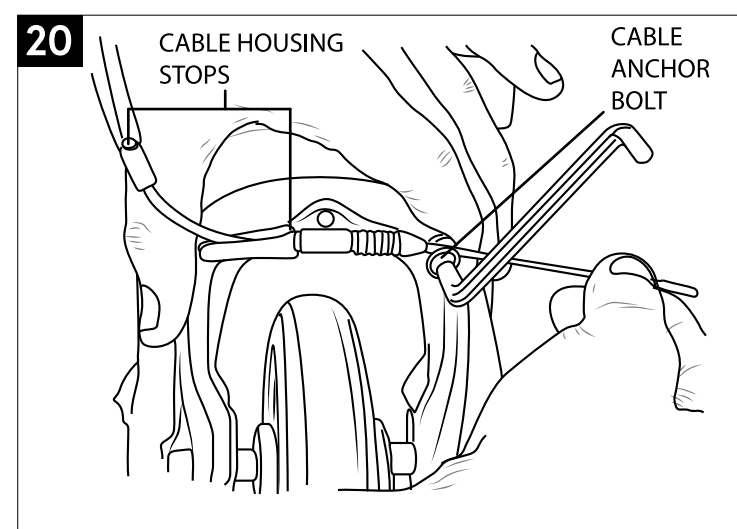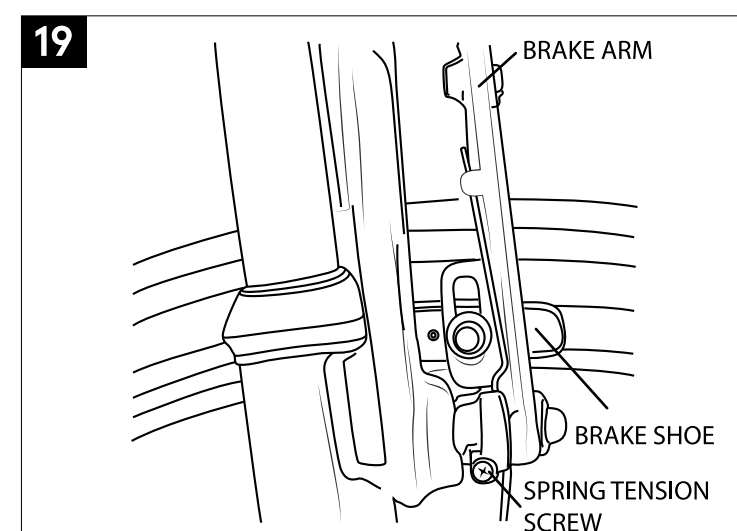

IMPORTANT: 7-Speed models: The gears in this model comes adjusted from the factory. If the gears need adjustment, please have this done by a professional bike shop.

When Shifting Gears: You must be pedaling with light pedal pressure while shifting to allow the chain to shift from one gear to another. For best results shift one gear at a time.


TIRES

- * Locate the tire manufacturer’s recommended inflation pressure found on the tire sidewall (listed as “PSI”).
- * Using a hand or floor pump with a gauge, begin to inflate the tire to half its recommended inflation pressure and check to see that the tire is properly seated on the rim. Be sure to inspect both sides of the tire for proper fit.
- * If the tire is seated unevenly or bulges out along the rim, let some air out of the tire and reposition the tire by hand so that it sits evenly on the rim.
- * Continue to inflate the tire to the manufacturer’s recommended pressure.
- * Do not exceed the recommended pressure as this will cause an unsafe condition potentially causing the tire to unexpectedly explode.
- * Do not use a compressed air device to inflate your tires as the rapid inflation of the tire can cause it to blow off the rim.
- * Tires and tubes are not warranted against damage caused by over-inflation or punctures from road hazards.

BEFORE YOUR FIRST RIDE

We strongly recommend you take your bike to a professional bike shop and have them check your work and fine tune the bike to ensure your bike is safe to ride.

22

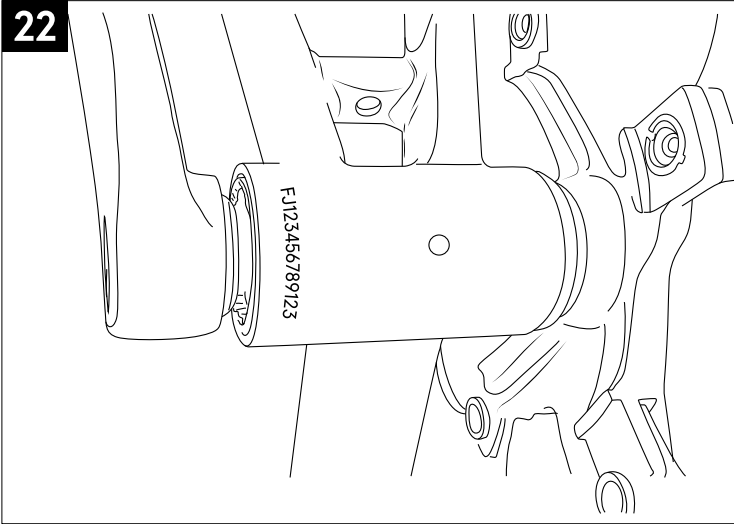

SERIAL NUMBER

It is important that you locate and record the serial number of your bicycle in case of a recall or if the bicycle is stolen. The serial number can be found under the crank bottom bracket stamped into the frame (Figure 22).