Gemma Sconce, Small *Assembly Guide* 



Thank you for choosing In Common With. Please confirm that you received all of the components pictured in this guide, and reach out to us if anything is missing. It's rare, but it happens. We hope you enjoy your fixture. With proper care, it should last a lifetime.

Have questions? Please contact us at support@incommonwith.com.




### **CAUTION!**


Electrical shock risk. Turn off electrical power at the main fuse box or circuit panel before beginning installation, servicing the light, or installing accessories. We recommend working with a qualified electrician familiar with the type of work you'd like done.

#### ATTENTION!

Risque de choc électrique. Coupez l'alimentation électrique au niveau de la boîte à fusibles principale ou du panneau de circuits avant de commencer l'installation, l'entretien de la lumière ou l'installation d'accessoires. Nous vous recommandons de travailler avec un électricien qualifié familier avec le type de travail que vous souhaitez effectuer.


# Gemma Sconce, Mud-ring Components Mounting Bracket Backplate Mud Ring Mesh Tape Set Screw Mounting Screw, Falt Head (2) Hardware Pack L Base G9 Lightbulb, 4.5W Gemma Shade Diffuser Tool + Washer

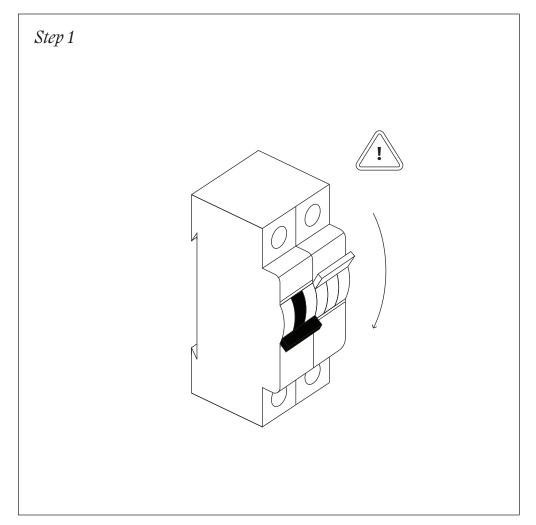


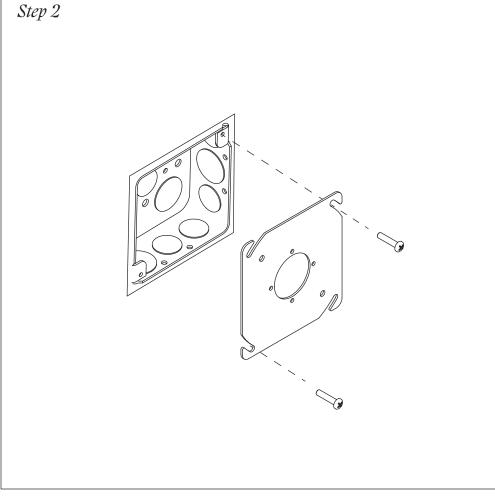

Turn off electrical power at the main fuse box or circuit panel before beginning installation.


Mount the backplate to the junction box using a phillips head screwdriver to tighten two mounting screws. Make sure the wires from the junction box are still accessible.

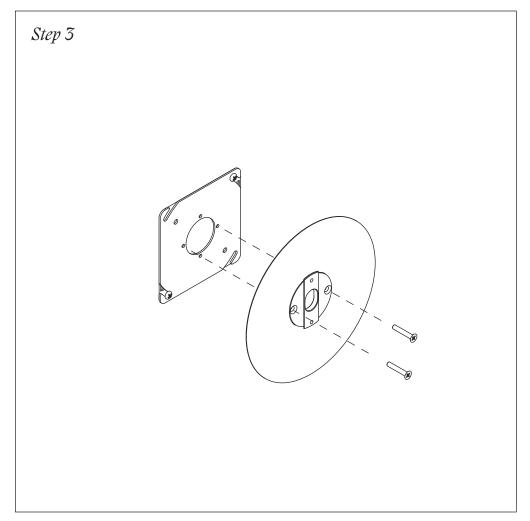


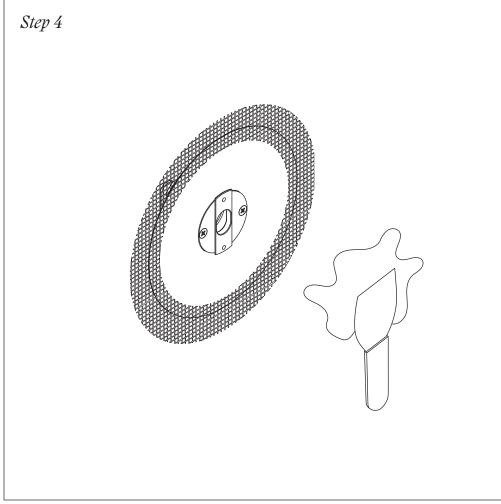

Mount the Mud-ring to the junction box using a phillips head screwdriver to tighten two mounting screws. Make sure the wires from the junction box are still accessible.


Apply drywall mesh tape, overlapping the perimeter of the mud ring and the wall. Plaster over drywall mesh-tape, mudring, and wall. We recommend applying three coats of plaster, allowing time for the plaster to dry and sanding between coats. Ensure this area painted before proceeding to the next steps.

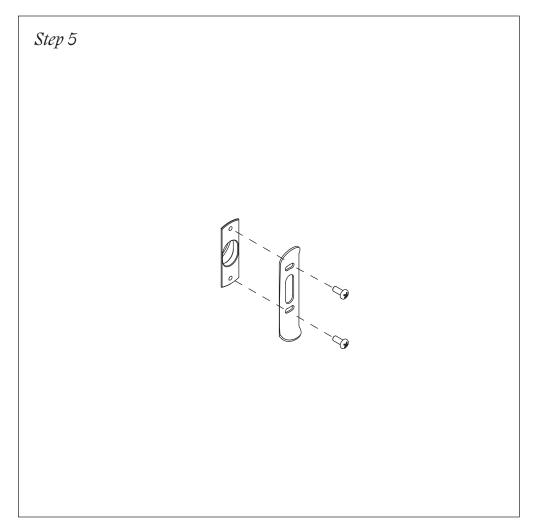


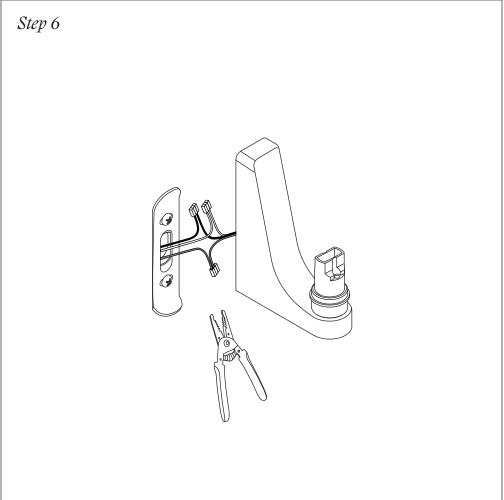

Attach the mounting bracket to the exposed part of the mudring using the additional mounting screws.


Use the wago clips to connect the fixture's wires to the corresponding wires from the junction box in the wall or ceiling. White is neutral; Black is live; Green/ Yellow is ground. One ground wire will be attached to the backplate, the other ground wire should come from the junction box. If needed use a wire stripper to remove 3/8" of the insulation from each wire before inserting them into the corresponding wago clip.

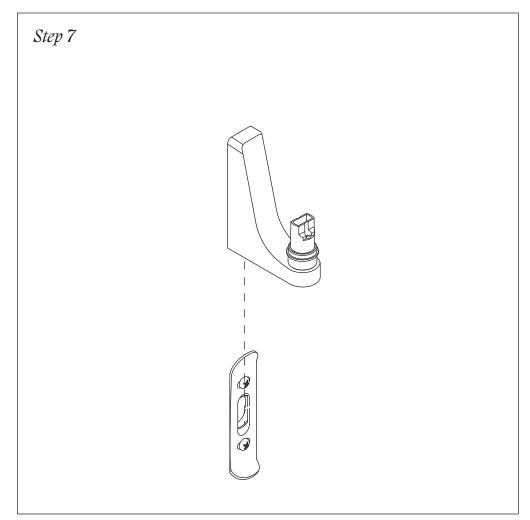


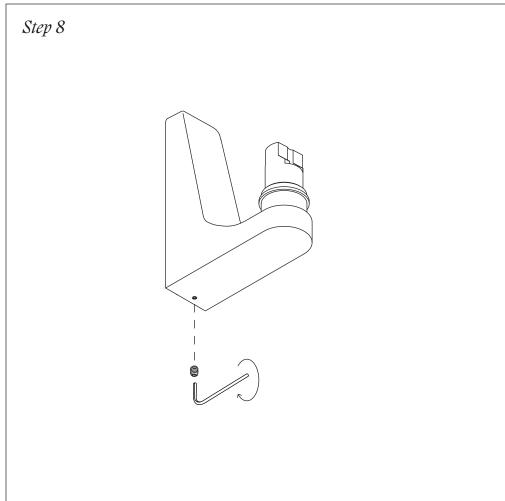

Slide the L base over the mounting bracket.


Secure using the provided base screws.

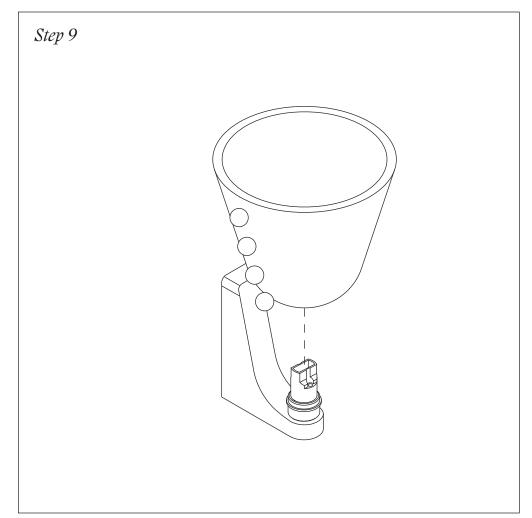


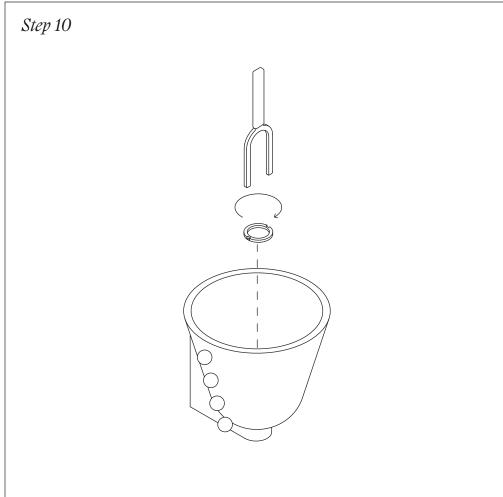

Carefully slide the Gemma shade over the socket.


Secure the shade Into place using the washer and provided tool.

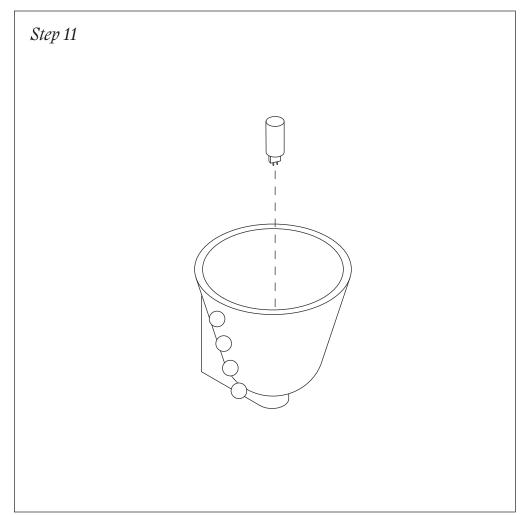

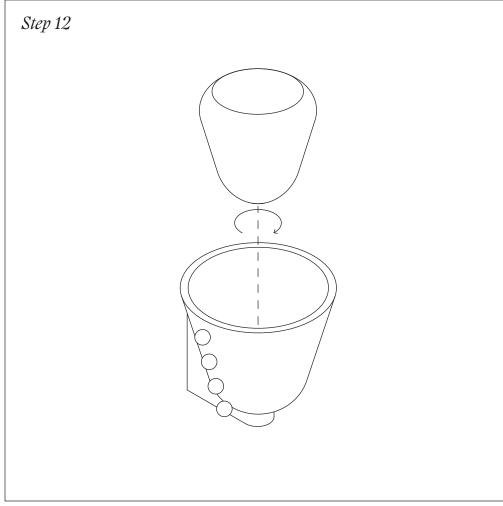



Push included bulb into socket.


Thread the diffuser over the bulb. Turn the power back on at the main fuse box or circuit panel you disabled before installation.

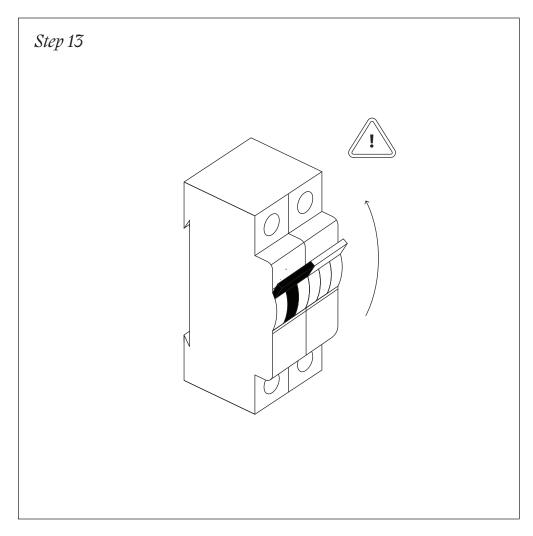

Turn the power back on at the main fuse box or circuit panel you disabled before installation. Turn on the light:)

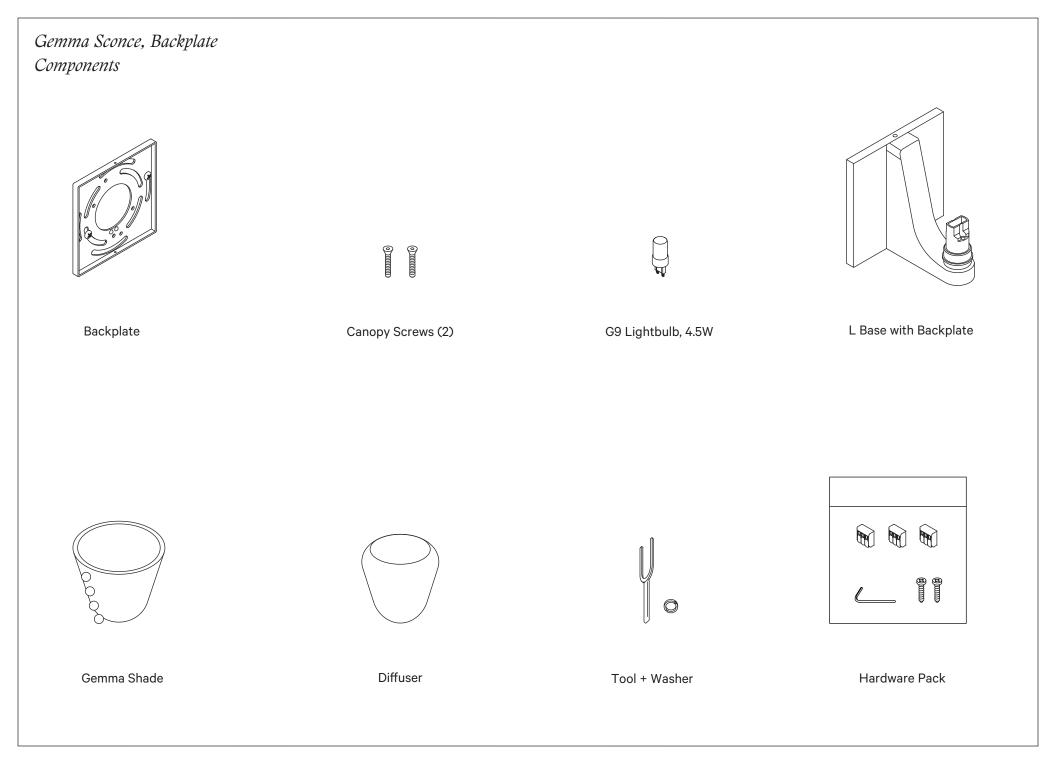


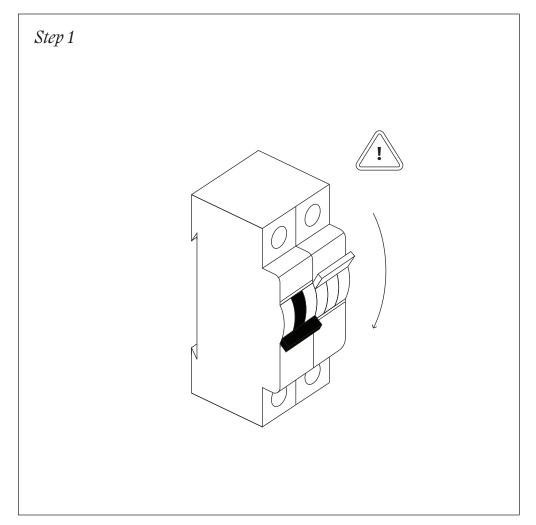


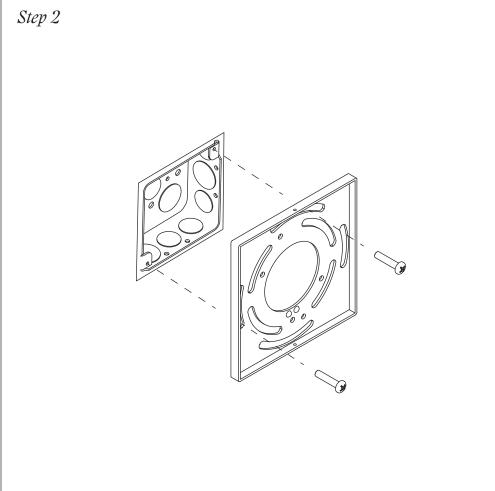

Turn off electrical power at the main fuse box or circuit panel before beginning installation.


Mount the backplate to the junction box using a phillips head screwdriver to tighten two mounting screws. Make sure the wires from the junction box are still accessible.

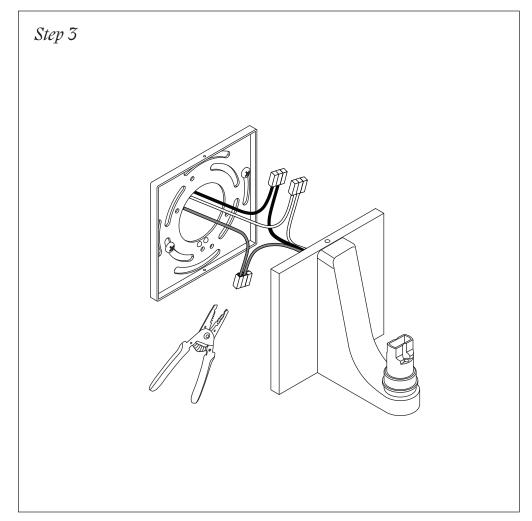


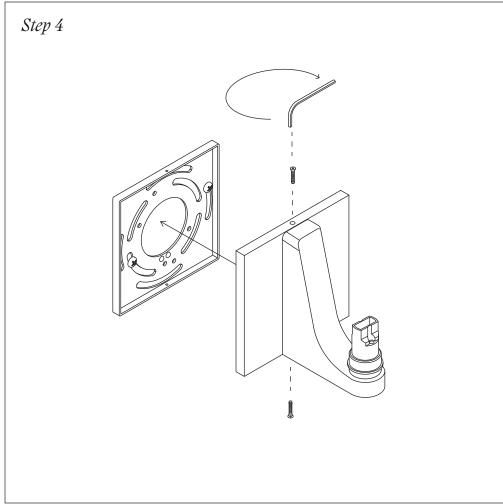

Use the wago clips to connect the fixture's wires to the corresponding wires from the junction box in the wall or ceiling. White is neutral; Black is live; Green/ Yellow is ground. One ground wire will be attached to the backplate, the other ground wire should come from the junction box. If needed use a wire stripper to remove 3/8" of the insulation from each wire before inserting them into the corresponding wago clip.


Align the holes of the backplate with the holes of the canopy cover. Secure them in place with hex key.

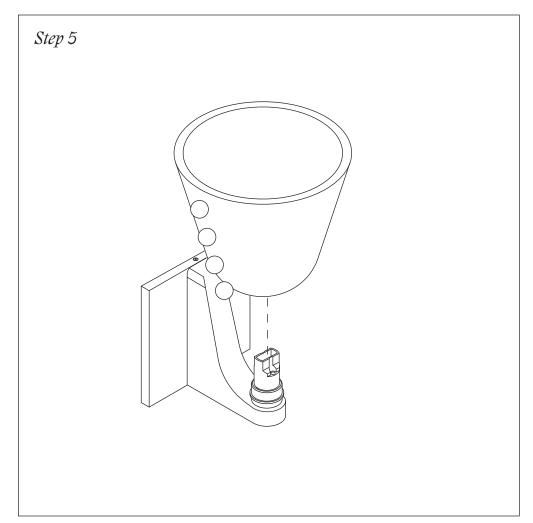


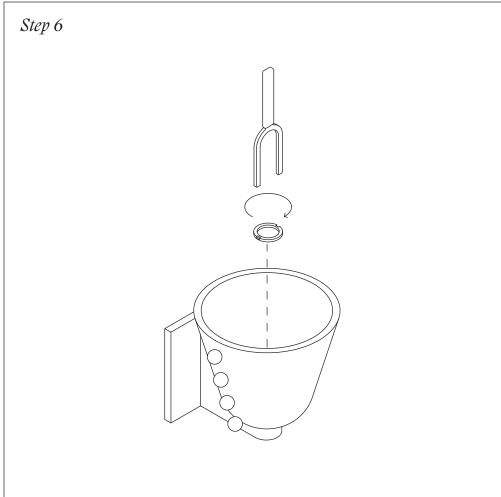

Carefully slide the Gemma shade over the socket.


Secure the shade into place using the washer and provided tool.

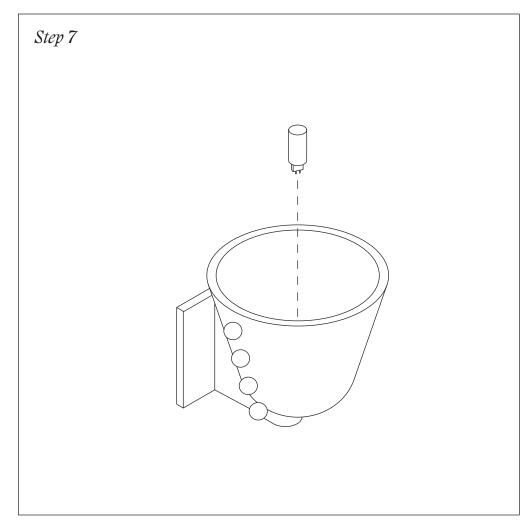

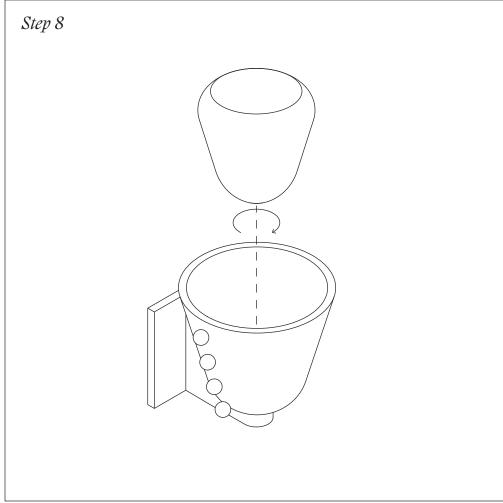

Push included bulb into socket.

Thread the diffuser over the bulb. Turn the power back on at the main fuse box or circuit panel you disabled before installation.

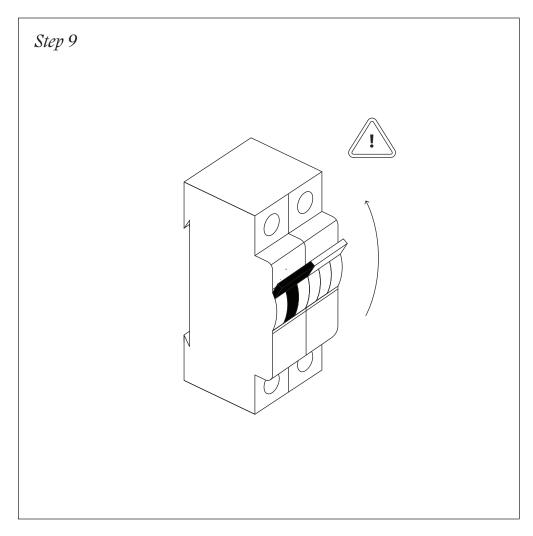

## Care Instructions

Never use scouring pads or abrasive cleaning solutions. If it comes in a bottle, its bad for your fixture. Instead, we recommend using soft microfiber cloths, which are gentler on our products and the planet.

For Metal: Wipe with a damp or dry microfiber cloth. Please note that our brass is unlaquered, and will darken naturally over time.

For Glass: Wipe clear or colored glass with a damp microfiber cloth. For sandblasted or etched glass, use a dry microfiber cloth. Removable glass shades can be washed carefully in a sink using warm or hot water.

For Ceramic: Wipe with a damp microfiber cloth. Do not submerge in water.

## Return Policy

We accept returns for store credit only, minus a 15% restocking fee. We do not accept returns on pieces from the Handmade, Disc, Terra, or Flora series, or on items that are not in their original condition. Custom and Rush orders are final sale. Please note that shipping charges are non-refundable.

To request a return, email sales@incommonwith. com within ten days of recieving your order. Requests must be approved before a return can be processed. Requests made after ten days will not be accepted.

All products that come in their own box, including but not limited to light bulbs and accessories, must be returned in their original, undamaged box as this is considered part of the product.

We deserve the right to reject any returned items that do not meet the above requirements. If your return is rejected you will be notified via email.