

Use, Maintenance and Assembly Instructions



Freestyle Fivesquare Trampoline (Art.-No. 40000 / 40001)

General data	1
Maintenance recommendations	1
Parts list	2
Installation draf Freestyle Fivesquare Trampoline	3
Assembling the frame	4
Jumping bed assembly	6
Attaching the banners	7
Frame padding installation	8
Freestyle Fivesquare disassembly	8

General data

Art.-No. 40000: Freestyle Fivesquare Trampoline

- Frame dimensions: 556 x 556 x 150 cm
- Total weight: 595 kg
- Frame pad colour black

Art.-No. 40001: Freestyle Fivesquare Trampoline

- Frame dimensions: 556 x 556 x 150 cm
- Total weight: 595 kg
- Frame pad colour grey

Number of users

The Freestyle Fivesquare may only be used by one person at a time. Other persons should therefore not remain on the trampoline. The exceptions to this rule are coaches or assistants providing support to the gymnast when performing exercises. **Use of the Freestyle Fivesquare trampoline is only permitted under supervision.**

Safety room

Make sure that the trampoline is only used in a safe environment covered by at least 2 m wide gym mats framing the trampoline.

Installation details

The trampoline is demounted when it is delivered. It will be installed on-site ready for use by a qualified staff ordered by the dealer. There should be sufficient people who help to get the trampoline down off the truck and carry it to the final location.

Maintenance recommendations

Not foreseen for outdoor use!

The trampoline must always be examined for possible damages before use. Particularly make sure that pads, the jumping bed, springs and frame parts do not display any damages. Damages must be addressed immediately. In case of any doubt about whether the apparatus is functional, a specialist advice should be sought (e.g., from the manufacturer)

Check the following regularly:

- Padding
- Jumping bed
- Springs / Rubber cables

Check the apparatus before use and replace all defective or missing parts. Pay particular attention to the following:

- No damages to the jumping bed;
- jumping bed suspension in perfect condition;
- frame does not display any cracks or other damages;
- springs / rubber cables are not damaged or over-extended;
- full frame padding cover is attached properly;
- over-extended and tired springs / rubber cables are to be replaced;
- the important thing is that the springs are always hooked in with the eyelet pointing downwards.

Parts list (scope of delivery)


Freestyle Fivesquare Trampolin	Quantity
Frame part	4
Leg 150 cm high	4
Leg brace	8
Steel cables	4
Grub screws M12x20	16
Jumping bed made of polyester fabric, 412 x 412 cm	1
Steel springs	164
Anchor bars	160
Rope loop 3 mm	160
Frame pad	8
PVC straps	4
Velcro roll	2
Spring clip	16
Mounting tool	2

All spare parts available from Eurotramp upon request.



The very highest demands are placed on this high-end-product. For safety reasons, only use original replacement parts! The use of non-original replacement parts can result in considerable risk to the user (danger of accidents, technical defects, loss of the manufacturer's liability, loss of warranty etc.).

Installation draft Freestyle Fivesquare Trampoline

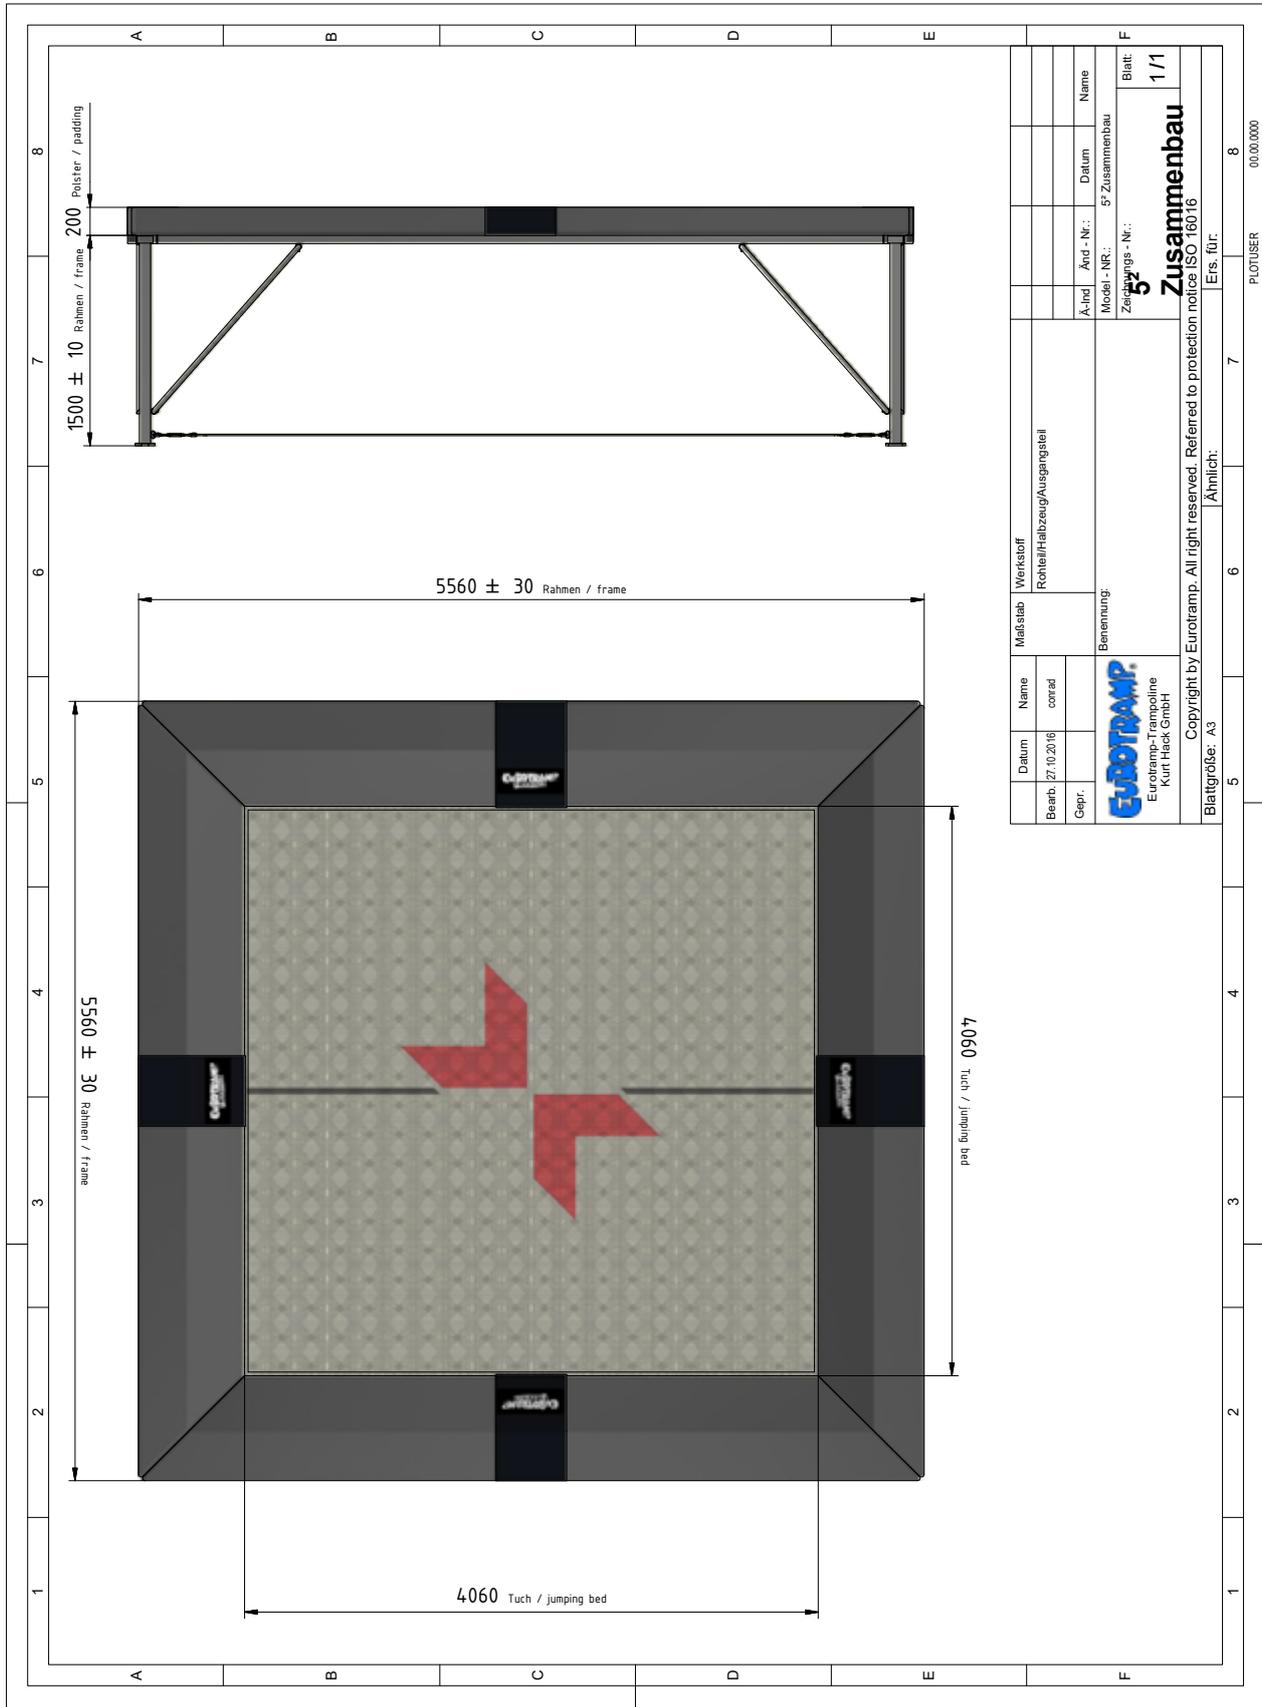


Assembling the frame

The assembly should preferably be done by 3 persons.



Required material

- Safety gloves (not in scope of delivery)
- Put the legs of the frame 5.5 m apart from each other on the ground as shown.
- The hooks should face the inside of the square whereas the two round sleeves face downward.

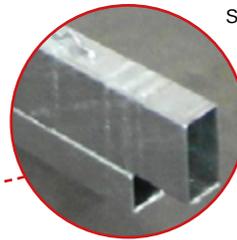

- Slide two legs into one lying side frame part, lift the premounted side frame part and use a safe support to prevent from falling.



- Slide another side frame part into one of the upright legs and support it with the third leg.




- To mount the remaining part you need to pull apart the frame by a little. It might be helpful not to slide any of the frame parts all the way in at first.




- Mount the steel cables to the chain links on the legs.
- Do not tight the steel cables yet!



- Mount the legbraces to the round sleeves.
- Tight the screws.

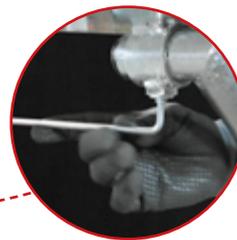


- Tighten the steel cables „hand-tight“ with the turnbuckle and tighten the lock nuts.

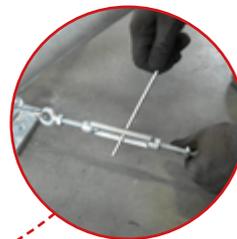

Jumping bed assembly (with the graphics side facing up)

The jumping bed should preferably be attached by 2 persons.

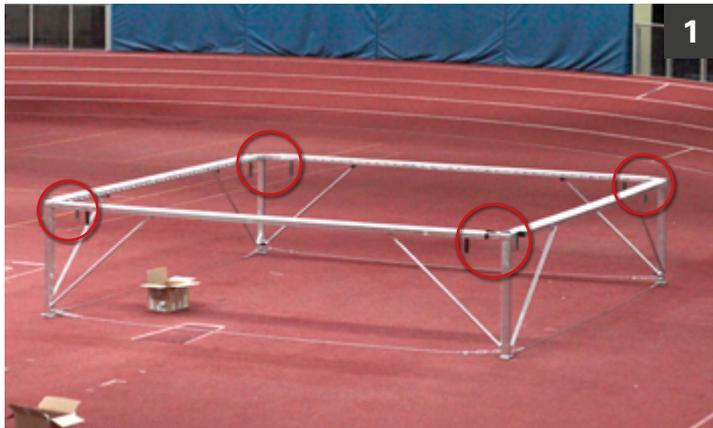

1

Required material

- Mounting tool
 - Safety gloves (not in scope of delivery)
-
- Hang in 2 steel springs per corner first of all to fix the jumping bed.




2

- Install the jumping bed with two springs on each corner. The graphics of the bed should face upward.



3


- Install the hooks to the jumping bed and always put a rope loop in the middle of each hook. Put three webs on each side of the hook. Only in the corners there will be 4 webs on one side of each last hook. If the loop of the very last web is too small it can be neglected.

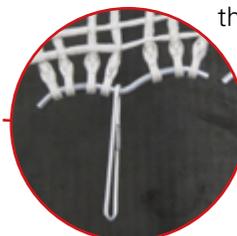



4

- Hook the springs onto the jumping bed.

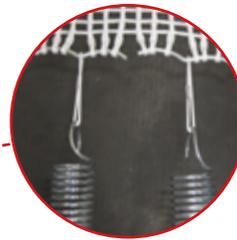


⚠ Attention: the spring ears should point downwards! ⚠



5

- Then hook the springs - parallel side - with the mounting tool onto the frame first.
- Always hook the springs on opposite sides in at the same time to prevent unnecessary excess tension on the springs.

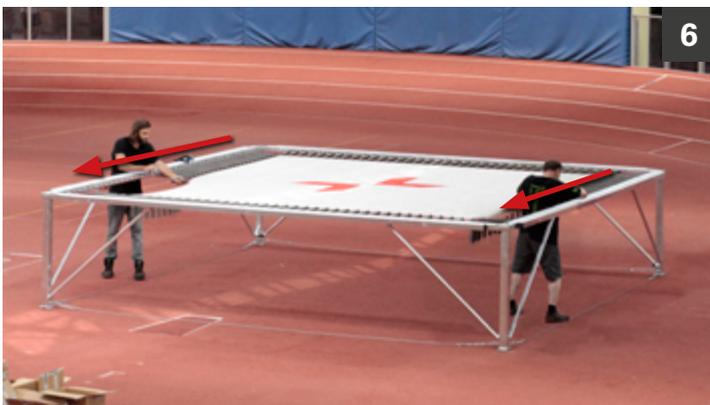

6

- Attach the remaining springs.
- Here also hook the springs on opposite sides in at the same time to prevent unnecessary excess tension on the springs.

Attaching the banners

Attention: the purchase of the banner is optional.



1

- Remove the foil on the supplied Velcro and attach on the flat surface on each side of the frame (close to the outer edge) and fix the banner on the Velcro.




- Put the round steel bars into both sides of the hemstich in the lower side of the banner.

Frame padding installation



- Install the pad lifter springs to the marked hooks (8 on each side). In certain cases it can be helpful to unmount the spring before installing the pad lifter.

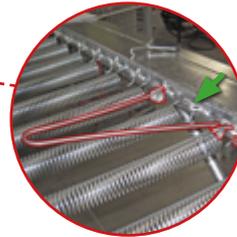


Always leave a spring between the spring clip leg.




- Place the pad on one corner and apply light pressure to fix it to the frame.

⚠ Attention: never connect the padding to the jumping bed. ⚠

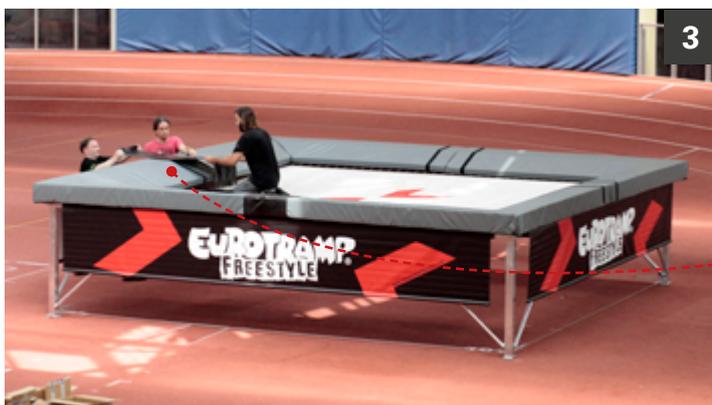

- Cover the abutting ends with the black PVC straps.

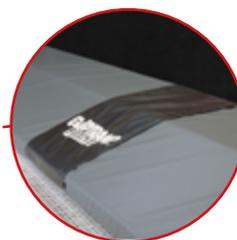

✔ **Done!**



Assembly video

www.eurotramp.com/utilityfilms.d/9/

Freestyle Fivesquare disassembly

- The complete disassembly of the Fivesquare is to be made in reverse order of the assembly.

If you have any questions, contact us any time:

Eurotramp Trampoline - Kurt Hack GmbH
Zeller Str. 17/1 | 73235 Weilheim
+49 (0)7023 - 9495-0
welcome@eurotramp.com
www.eurotramp.com