



AQUATru[®]

BY IDEAL LIVING

On-Wall Bottle Filling Station

Owner's Manual

Please Read and Save these Instructions



Product ATW-1-FAC have been certified by IAPMO R&T to NSF/ANSI 42, 53, 372, 401, CSA B4831, 61 for the reduction claims specified in the performance data sheet and substantiated by test data at IAPMO.org.



Control Number
802177



Table of Contents

READ BEFORE USE - Warnings and Safety Information	2
System Specifications	5
System Dimensions	6
Main Parts	7
Packing List	9
Tools and Supplies	10
Installation Guide	11
Filter Replacement Instructions	15
Control Panel	17
Service	18
Service: Wiring Diagram	19
Error Codes	19
Warranty Information	20
Arbitration Agreement	21
Main Parts - SKU Listing	23



Read Before Use

WARNING:

Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before the system.

To avoid product or property damage, personal injury, or even possible death, carefully read, understand, and follow all the instructions in this installation and User Manual before installing this product. Save this manual.

The system is to be supplied only with cold water.

Improper installation of this product could cause a dangerous situation that results in injury or death.

Manufacturer highly recommends a licensed plumber perform installation of product to avoid risk of damages not covered by the warranty.

Do not operate power tools unless you read and understand the instructions and warnings in this and all other applicable labels or manuals. Proper use of tools and the products described in this guide is your responsibility.

Failure to follow these instructions could result in personal injuries, water damage, and other damage to floors, pipes, walls, and other portions of your building or home.

Any and all refrigeration system components found inside this device must be serviced by authorized personnel only.

Take care when moving or handling this device. Damage to this system can cause refrigerant to leak.

Disclaimer:

The information contained in this Installation and User Manual is given free of charge. It is based upon technical data which we believe to be reliable and is intended for use by persons having knowledge of this technical area at their own discretion and risk. AquaTru assumes no responsibility for results obtained or damage incurred from the use of this material either in whole or in part by the buyer.

Read Before Use

WARNING:

You must read and understand the contents of this manual before installing or operating your drinking system. These warnings indicate a potentially hazardous situation which, if not avoided, could result in serious injury or death. Follow all instructions related to the installation and/or maintenance of this product (unit).

- Always consult with local plumbing and building regulations for installation.
- This device uses only 120V 60hz AC Power.
- Keep all ventilation clear of obstructions.
- Use only with an outlet protected by a ground fault interrupt device.
- Do not use a power strip or extension cord
- Service should be completed only by a certified technician.
- Do not use the device in conditions outside of the listed operational parameters.

Personal Protection

Be sure to use all personal protective equipment, such as sturdy safety glasses, work shoes, hearing protection, and gloves, whenever necessary, to ensure your own safety while installing the water cooler.



To avoid eye injury, always wear protective glasses with side shields when using power tools. Also, make sure no one else can be injured by flying particles when using power tools.



To prevent possible damage to your hearing, always wear ear protection, such as earmuffs or earplugs when using power tools.



This product is heavy and can cause bodily injury due to its weight or if the unit is dropped. Use two people to lift the product when unpacking the unit or installing it onto the hanger brackets. Wear protective gloves during installation to protect against sharp edges from sheet metal components.



Lifting Hazard

To avoid personal injury, always use these proper lifting techniques and use two people to move heavy cartons.



Use appropriate lifting devices to move the load.

Always use two people when lifting heavy or bulky cartons.



DO NOT attempt to lift objects that are too heavy.

Power Tool Hazard

To prevent personal injury or possible death, always follow the electrical safety recommendations of the power tool's manufacturer.



Do not use power tools in an unsafe manner.

Power tools should only be connected to a circuit protected by a ground-fault circuit interrupter (GFCI).

If an extension cord is required, always use an OSHA approved extension cord.

Read Before Use

Shock and Electrocution Hazards



Failure to follow these instructions could result in severe burns, significant injuries, and even death. Water will conduct electric current to create a short circuit, resulting in injury or death. If the electrical cord is damaged, it must be replaced by the manufacturer, its service agents, or a similarly qualified person to avoid hazard.

- Never use electric power tools around water or wet floors/surfaces.
- Keep all liquids away from electrical cords and power tools.
- If an extension cord is required, always use an OSHA approved cord.



DO NOT create a short circuit between a source of electricity and a liquid by being in contact with both simultaneously. Contacting live electrical wiring with power tools or hand tools can cause serious injury or death.



- Prior to installation, make sure all related circuit breakers are turned OFF.



Test for live circuits or wiring inside any wall where installation of the product requires cutting into a wall.

Prior to any maintenance, make sure the unit is unplugged and circuit breakers are turned OFF.



Prior to installation, test for live circuits or wiring inside the wall before cutting or drilling into the wall.

Flammable Refrigerant



This device uses flammable refrigerant. To reduce the risk of fire or explosion, only dispose of in accordance to Federal and Local Regulations.

- To avoid either damaging the refrigerant tubing or increased risk of a leak, always take care and follow Local and Federal regulations while handling or moving the device.
- To minimize the risk of possible ignition due to incorrect parts or improper service, the components parts of the water cooler shall be replaced with like components and servicing shall be done by factory authorized personnel

CAUTION:

These cautions indicate a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

- Follow all instructions related to installation and/or maintenance of this product.

Tripping Hazard



Personal injury can result from tripping over power cords, tools, or other installation items.

- DO NOT leave items lying around the work area.

Cutting Hazard



The installation of this product may require using power tools.

- Keep hands away from the cutting edge of any tool used in the installation of this product.
- Placing fingers in or around the cutting blades could result in serious personal injury.

Spent adsorption media will not be regenerated and used. If adsorption media is affected by chlorine, influent will be treated to remove chlorine.

System Specifications

This system and its installation must comply with State and Local Regulations. Check with your Local Public Works Department for plumbing and sanitation codes. Local codes should be followed in the event the codes conflict with any content in this manual.

Product Name	AquaTru On-Wall Bottle Filler with Chlorine Filter
Model #	ATW-1-FAC
Operating Pressure	20 - 100 PSI
Operating Temperature	40 - 100 °F
Rated Flow Rate	1 GPM
Rated Capacity	3000 gallons
Electrical Source	120V/60Hz AC
Max Rated Current	6.5A
Refrigerant	R290
Refrigerant Weight	50g
Refrigerant LFL	0.038kg/m ³
Dimensions	18.5" W × 9.5" D × 39.4" H
Number of Stations Served	1
Installation Location	Indoors or outdoors if fully covered
Filter Component	ATW1-F1 (SKU:10AT02CF01)


System Dimensions



Main Parts

- | | |
|---|--|
| 1 Control Panel | 34 Fan |
| 2 Display Guide | 35 Fan Cowling |
| 3 Light Cover | 36 Right Frame |
| 4 Screen PCB | 37 Right Cover |
| 5 Elbow Connector 1/4" to 3/8" | 38 Big O-ring |
| 6 Solenoid Valve | 39 Filter Sump |
| 7 Dispenser Insert | 40 Small O-ring |
| 8 Dispensing Tube | 41 Carbon Top Cap |
| 9 Dispenser Tube Cover | 42 Carbon Block |
| 10 Sensor Lens | 43 Carbon End Cap |
| 11 Bottle Sensor | 44 Filter End Cap |
| 12 Dispenser Top | 45 Filter Manifold |
| 13 Bottle Dispenser | 46 Valve Stem |
| 14 Bottle Dispenser | 47 Spring |
| 15 Drip Tray Gasket | 48 Flow Wiper |
| 16 Drip Tray | 49 Flow Wiper Cover |
| 17 Drain Basin | 50 NFC Reader |
| 18 Drain Tube Gasket | 51 NFC Reader Mounting Plate |
| 19 29mm x 11 TPI Threaded Insert for Drain | 52 Manifold Mounting Plate |
| 20 Drain Tube | 53 Control Board Mounting Plate |
| 21 Left Frame | 54 Control Board |
| 22 Left Cover | 55 Control Board Cover |
| 23 3/8" PE Pipe | 56 Compressor |
| 24 Front Cover Panel | 57 1/4" PE Pipe |
| 25 Bottle Counter Reset Switch | 58 Pressure Wiper |
| 26 Front Frame Brace | 59 Copper Pipe |
| 27 Evaporator (Water) Tank | 60 Refrigerant Filter and Capillary Tube |
| 28 Flow Meter | 61 Elbow Connector 3/8" to 3/8" |
| 29 Thermostat | 62 Elbow Connector 1/4" to 1/4" |
| 30 Thermostat Mount | 63 Elbow Connector 1/4" Male to 3/8" Female |
| 31 Mounting Bracket | 64 Elbow Connector 5/16" to 3/8" |
| 32 Back Cover | 65 5/16" to 3/8" Elbow Connector |
| 33 Condenser | |

Main Parts

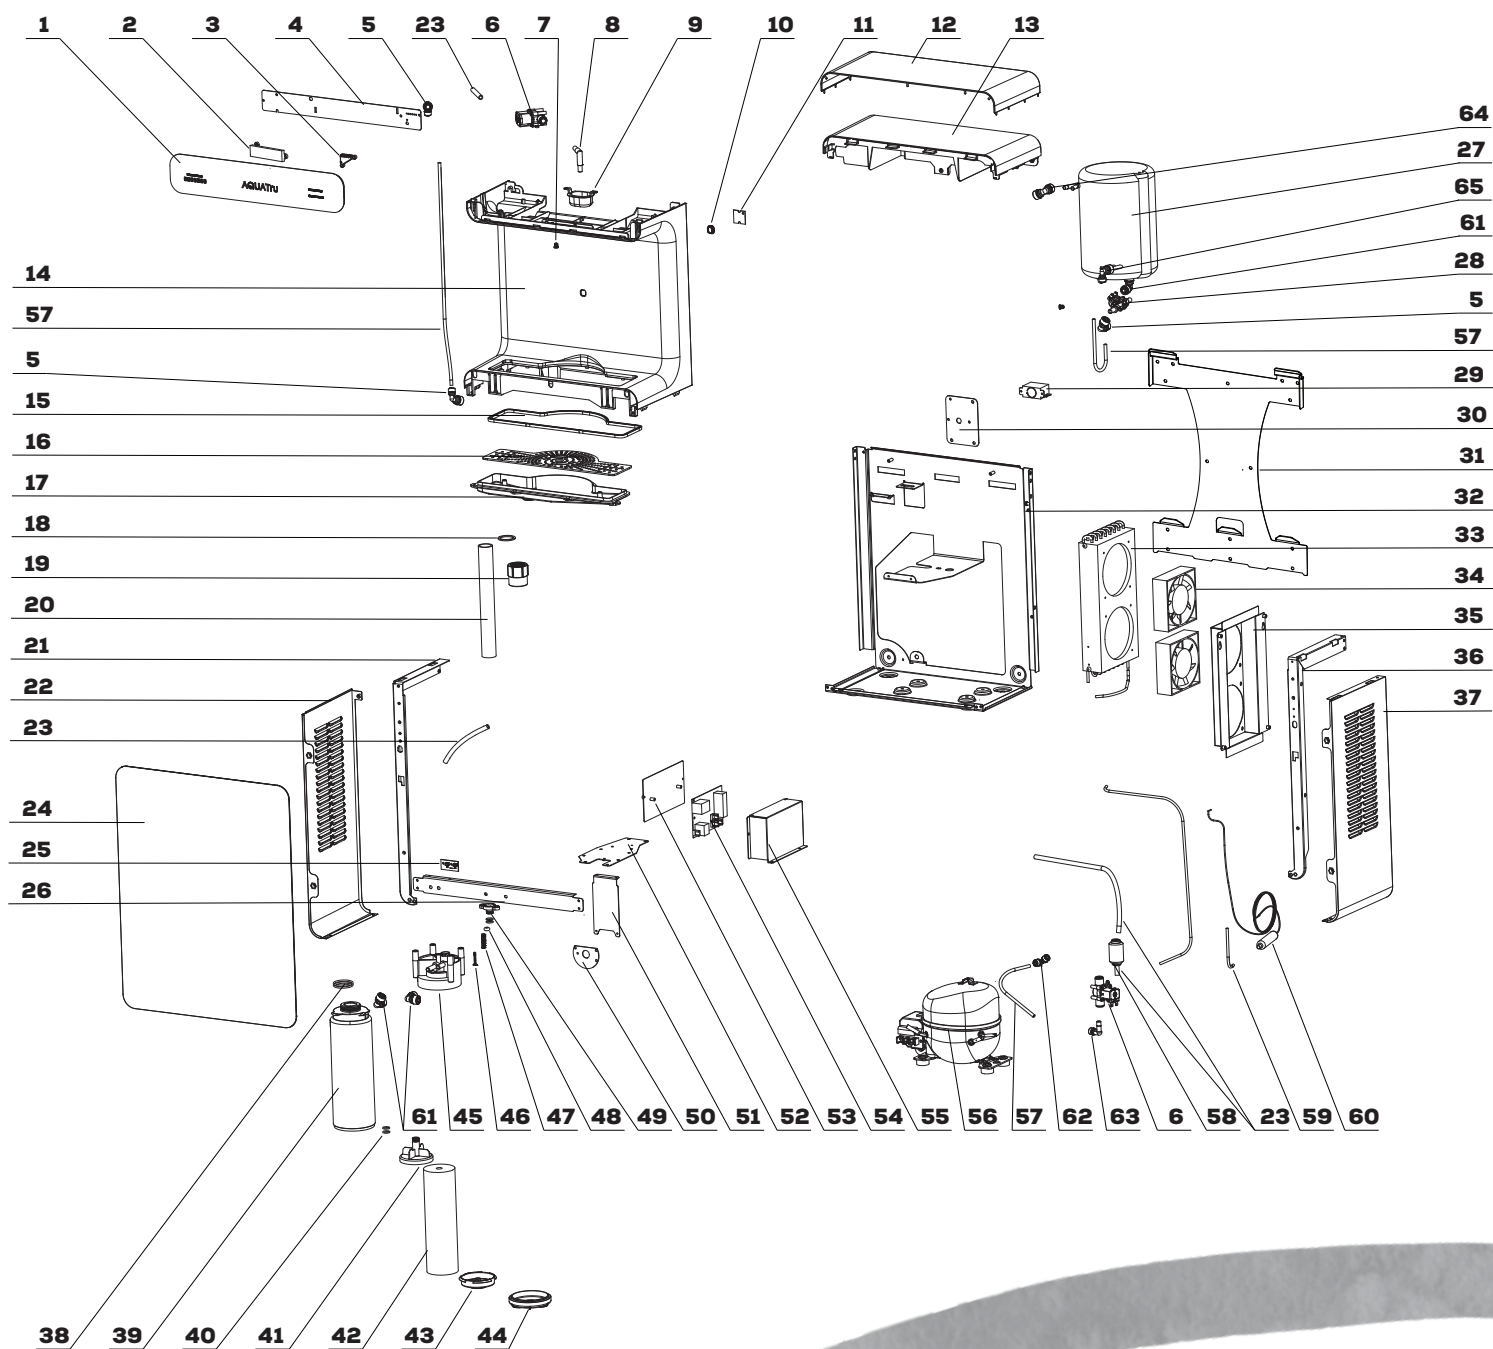

Packing List





Inspect the **AquaTru On Wall Filtered Bottle Filling Station** for any shipping damage.

Handle all components of the system with care. Do not drop, drag, or turn unit upside down. Doing so can result in refrigerant leaks or other product damage and may result in unsafe operating conditions.

The manufacturer is not responsible for damages in transit. Small parts, needed to install the drinking system, are in a parts box. To avoid losing the small parts, keep them in the parts box until they are needed for installation.

Package Contents:

1. Main Body with Chiller Cabinet
2. Bottle Filler
3. Manual
4. Filter
5. Drain Tube - Check the box for this part.
6. Mounting Bracket
7. Machine Screws - Check the box for these parts.

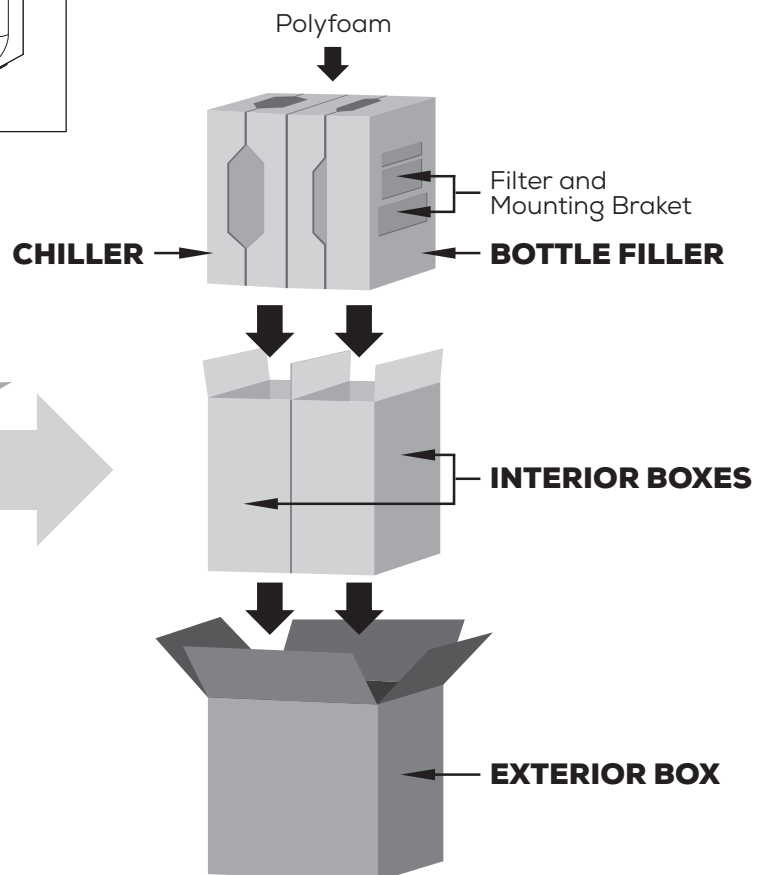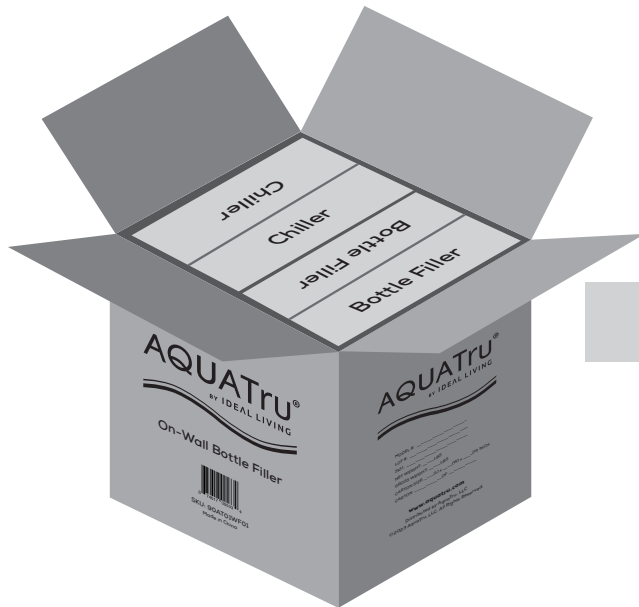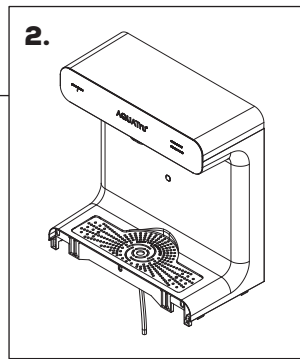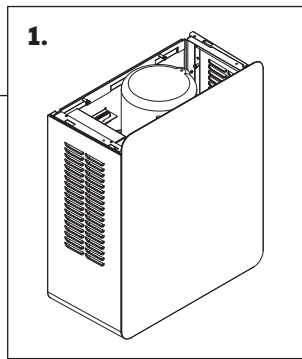

Tools and Supplies

Before Installation

- Check the accessories in the packing box and confirm everything is present.
- Shut off the water supply.
- Prepare the below list of tools and equipment needed for the installation.
- Shut Off the Electrical Breaker.

Summary of Installation

1. Select system installation location.
2. Install filters.
3. Install T-adapter valve on water supply.
4. Install drain saddle and connect tubing.
5. Plug in the unit and open the water supply valve.
6. Flush Filters and tanks.

Tools Needed for Installation


1. Tape Measure
2. Level
3. Drill and Drill Bit Sized for Appropriate Wall Anchors
4. Adjustable Pliers
5. Adjustable Wrench
6. Hacksaw
7. Screwdriver Extension
8. T20 Driver
9. Tubing Cutters

Components Required for Installation Not Included in the Box

1. Lag Screws and Wall Anchors appropriate for the location (Recommend 15 x 1/4" Diameter and 2 X 7/16" Diameter. Screws should be long enough to engage with at least 2" of the support structure)
2. Flat Washers
3. P-Trap with 1-1/4" inlet
4. Quarter Turn Shut-off Valve with angled 3/8" outlet
5. Flexible 3/8" tubing and 3/8" tubing Unions and Elbow Connectors

CAUTION: THE 3/8" PUSH-FIT FITTING ON THE INLET SOLENOID IS INTENDED FOR USE WITH THE LLDPE (LINEAR LOW-DENSITY POLYETHYLENE) TUBING ONLY.

Installation Guide

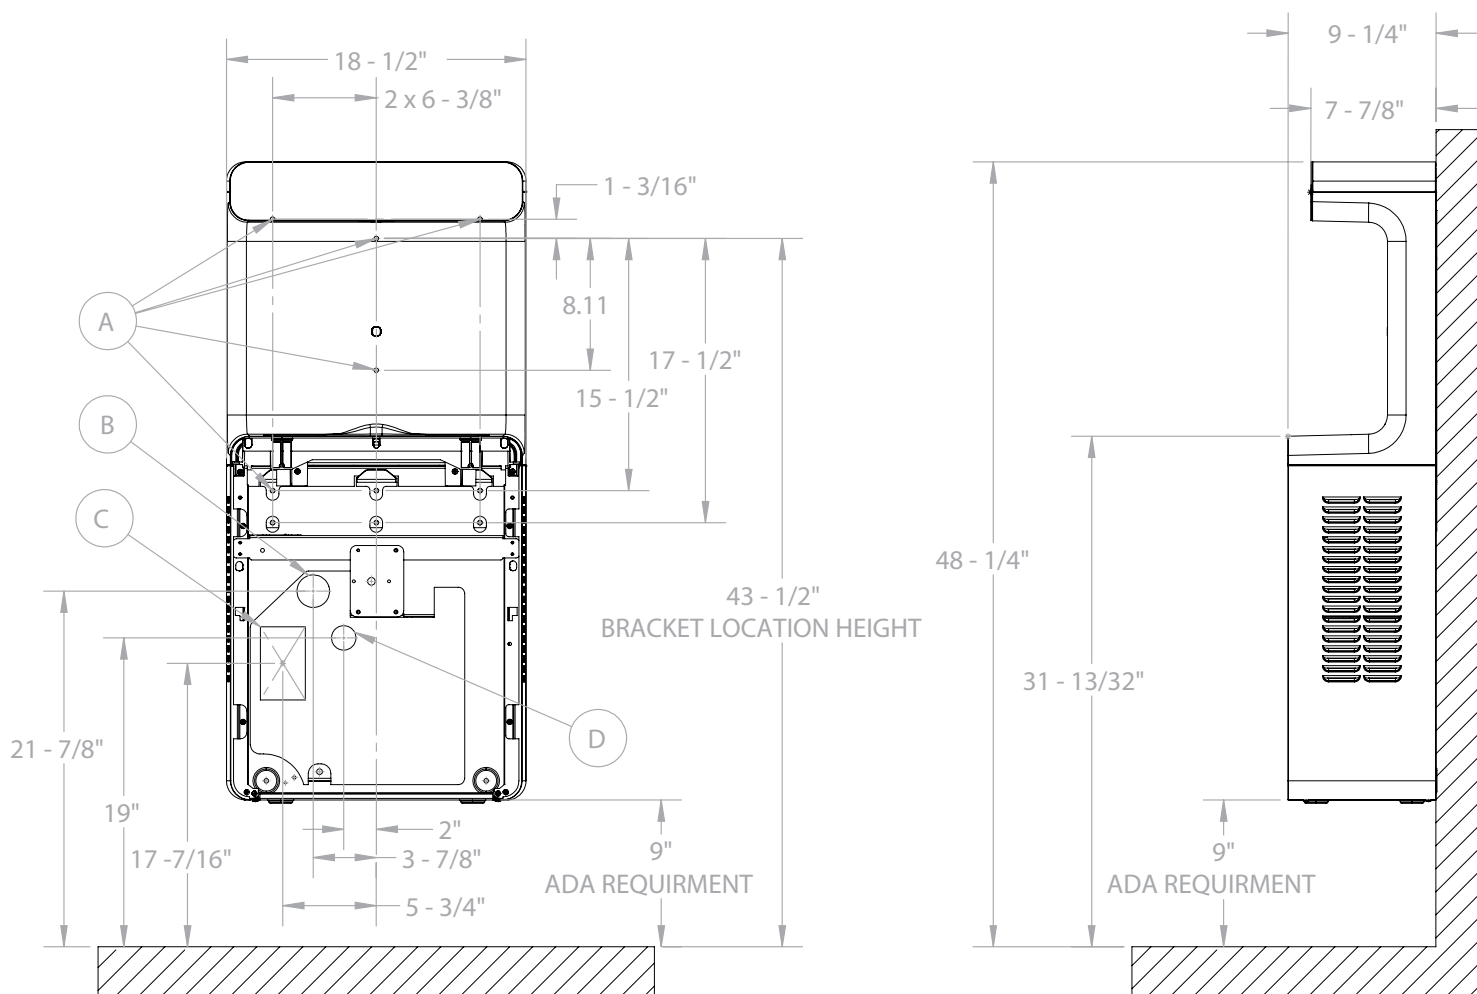

- A. MOUNTING BRACKET BOLT HOLES
- B. RECOMMENDED DRAIN LINE PLACEMENT
- C. RECOMMENDED ELECTRICAL SOCKET PLACEMENT
- D. RECOMMENDED WATER SUPPLY PLACEMENT

NOTE: TO INSTALL DEVICE ACCORDING TO ADA REQUIREMENTS, DO THE FOLLOWING

1. LOCATE THE CENTER LINE OF THE INTENDED INSTALLTION LOCATION
2. MEASURE UP $26 - 1/8"$ FROM THE FLOOR AND SCRIBE A LINE. THIS LINE MARKS THE HEIGHT OF THE LOWER BOLT HOLES FOR THE HANGER BRACKET

MANUFACTURER HIGHLY RECOMMENDS A LICENSED PLUMBER PERFORM INSTALLATION OF PRODUCT TO AVOID RISK OF DAMAGES NOT COVERED BY THE WARRANTY.

**STEP
1**

Installation of Hanging Bracket

- 1.1** Remove both halves of the Bottle Filler Unit from their boxes and organize your parts.
- 1.2** Determine the location you want to install the unit using the Installation Guide Drawing on the opposite page as a guide.
- 1.3** Based on the measurements in the installation guide find the center line of your installation and measure 43 - 1/2" up from the floor and make a marking. (This height is for ADA compliance; if you wish to mount the unit higher adjust this height.) (Refer to Fig 1A)
- 1.4** Attach one of your wall anchors. Pre-drill if needed for the material you are mounting on.
- 1.5** Hang the bracket on the anchor point you just installed. Level the bracket, then tighten the bolt to hold the bracket in place.
- 1.6** Being careful not to move the bracket out of level, mark all other mounting holes.
- 1.7** Remove the bracket from the wall and prepare the other anchor points in the method required for your mounting location and wall material.
- 1.8** Reinstall the bracket and install all needed fasteners. (Refer to Fig 1B)

Installation Video



Fig 1A


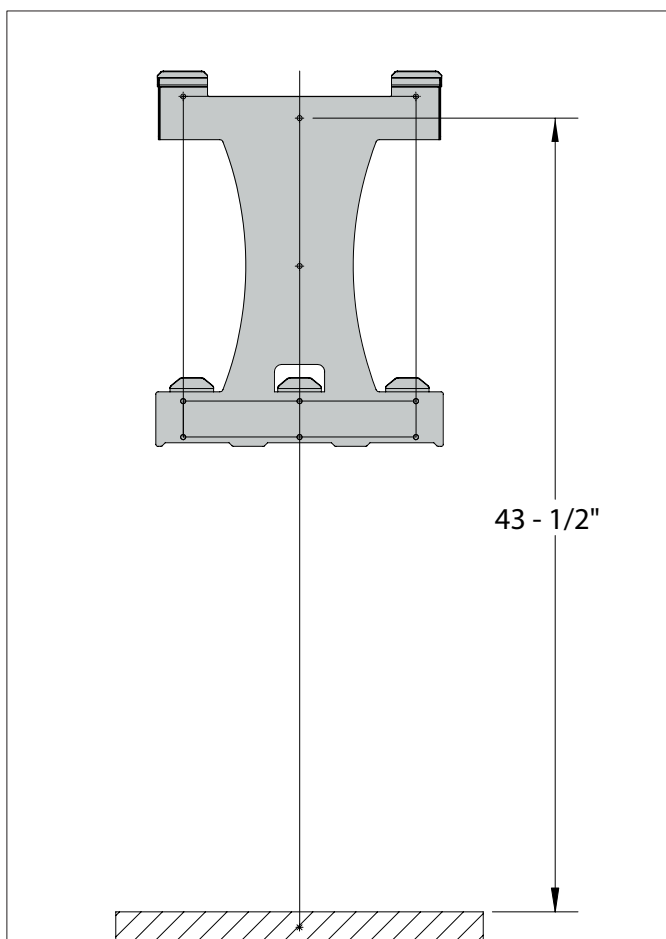


Fig 1B

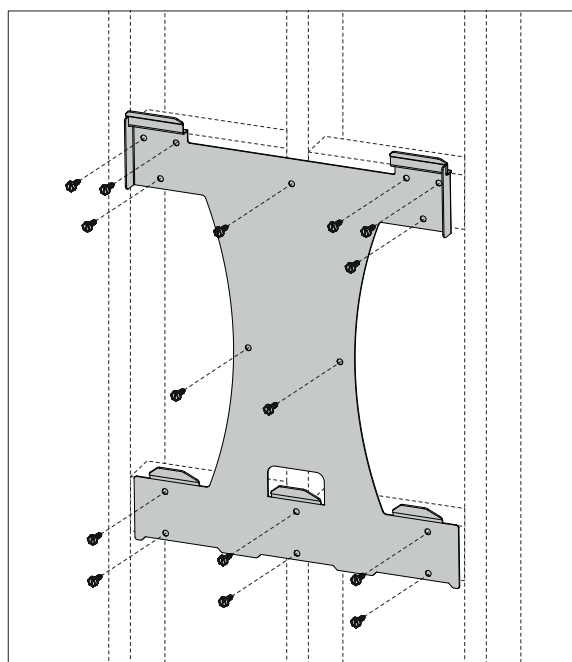

Installation Guide

STEP
2

Installation of Cooler

- 2.1** Hang the cooler unit on the bracket as shown in Fig 2A.
- 2.2** Remove the front panel by undoing the two T20 screws located just under the front panel. (Fig 2B)
- 2.3** Use the 2 wall anchor holes indicated in Fig 2C to securely attach the Chiller Cabinet to the wall.
- 2.4** Connect the water supply to the inlet solenoid. (Fig 2D)

CAUTION: THE 3/8" PUSH-FIT FITTING ON THE INLET SOLENOID IS INTENDED FOR USE WITH THE LLDPE (LINEAR LOW-DENSITY POLYETHYLENE) TUBING ONLY.

Fig 2A

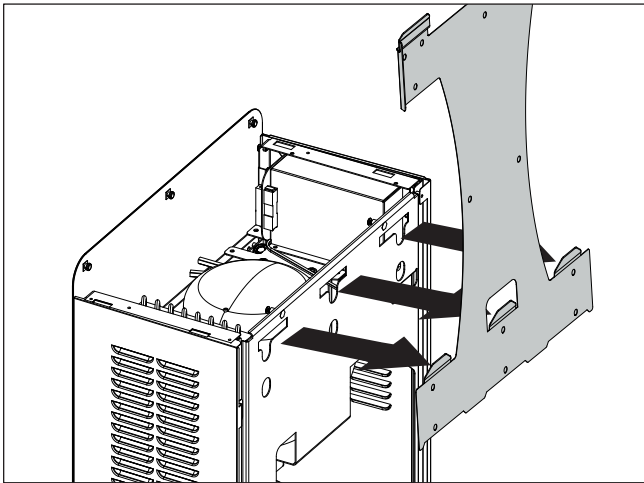


Fig 2B

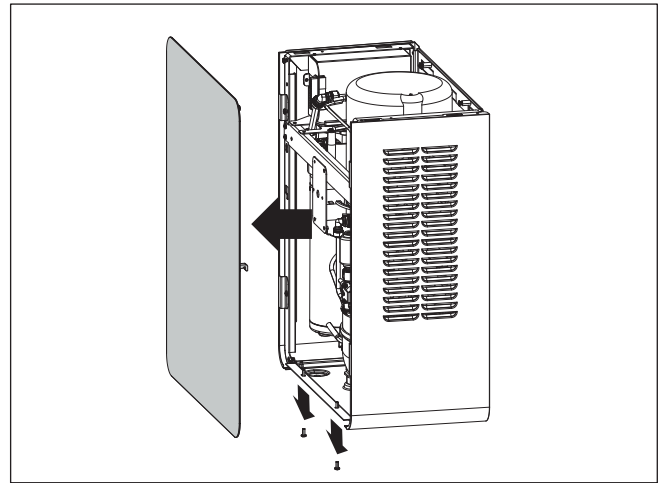


Fig 2C


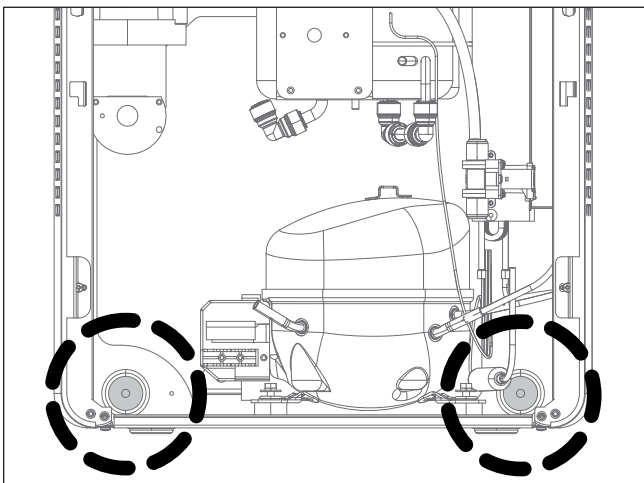


Fig 2D

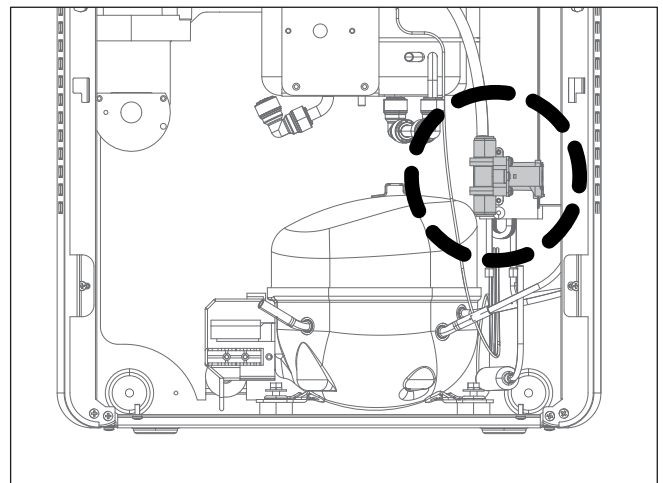

STEP
3

Bottle Filler Installation

- 3.1** Place the Bottle Filler on top of the Cooler Cabinet, making sure the installation tabs line up with their respective holes and carefully route any electrical connectors and tubing through the Cooler Cabinet. (Refer to Fig 3A)
- 3.2** Remove the white plastic plug from the quick connect elbow and the clear silicone plug from the tank outlet. Then firmly press the elbow onto the tank outlet until it can't move anymore. (Fig 3B)
- 3.3** Make the electrical connection by plugging the two cable harness connectors together. (Shown in Fig 3C)
- 3.4** Bolt the Bottle Filler portion to the Chiller Cabinet. The attachment points are shown in Fig 3D. Two screws can be found on the front of the device and two can be found along the back wall of the Chiller Cabinet.
- 3.5** Locate the 12" long Drain Tube included in the box and screw it onto the threaded connector shown in Fig 3E.
- 3.6** Install your P-Trap. (This may require you to trim the Drain Tube to length.)
- 3.7** Remove the filter from its protective wrapping and quarter turn it into position. (Fig 3F)
- 3.8** Turn on the water supply and check for leaks.
- 3.9** Now Dispense water until the bottle counter reads 40. After you've done this, check again for leaks.
- 3.10** After you've flushed the filter and double checked there are no leaks in the system, reinstall the Front Panel and bolt it into place using the two screws on the bottom.

Fig 3A

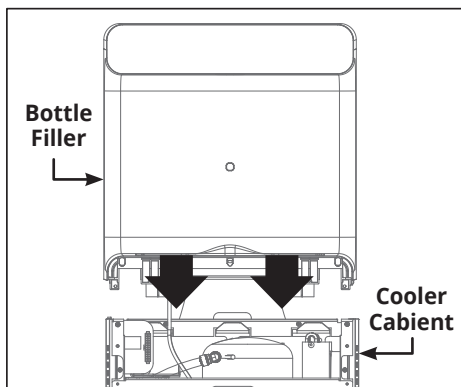


Fig 3B

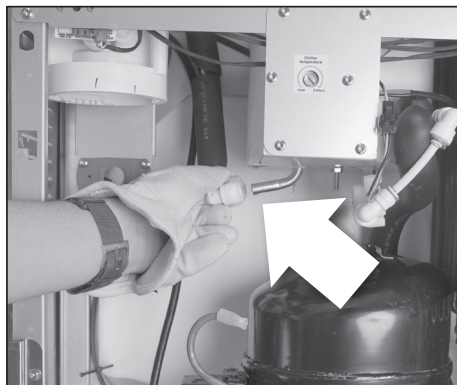


Fig 3C



Fig 3D

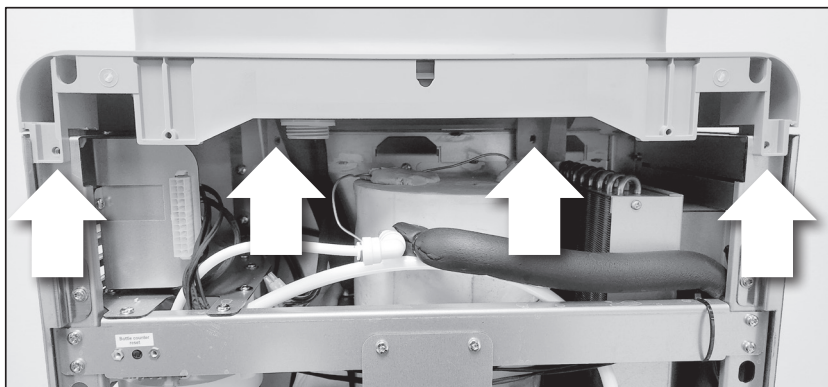


Fig 3E

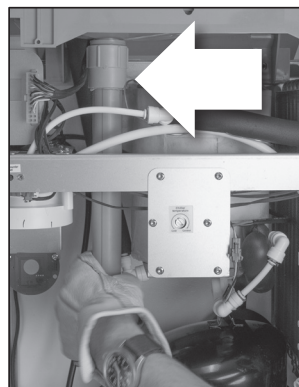


Fig 3F



Filter Replacement Instructions

Filter Replacement

1. Remove the Front Panel by undoing the two screws located under the leading bottom edge of the unit. Slide the panel up and then out. (Fig 1)
2. Remove the filter currently in the unit by unscrewing it from the manifold. (Fig 2)
3. Install a new filter. (The Filter Life Counter will be reset automatically.) (Fig 3)
4. Dispense water until the counter has increased by 40
5. Replace the Front Cover. (Fig 4)

REPLACEMENT FILTER PART NUMBER: ATW1-F1

Fig 1


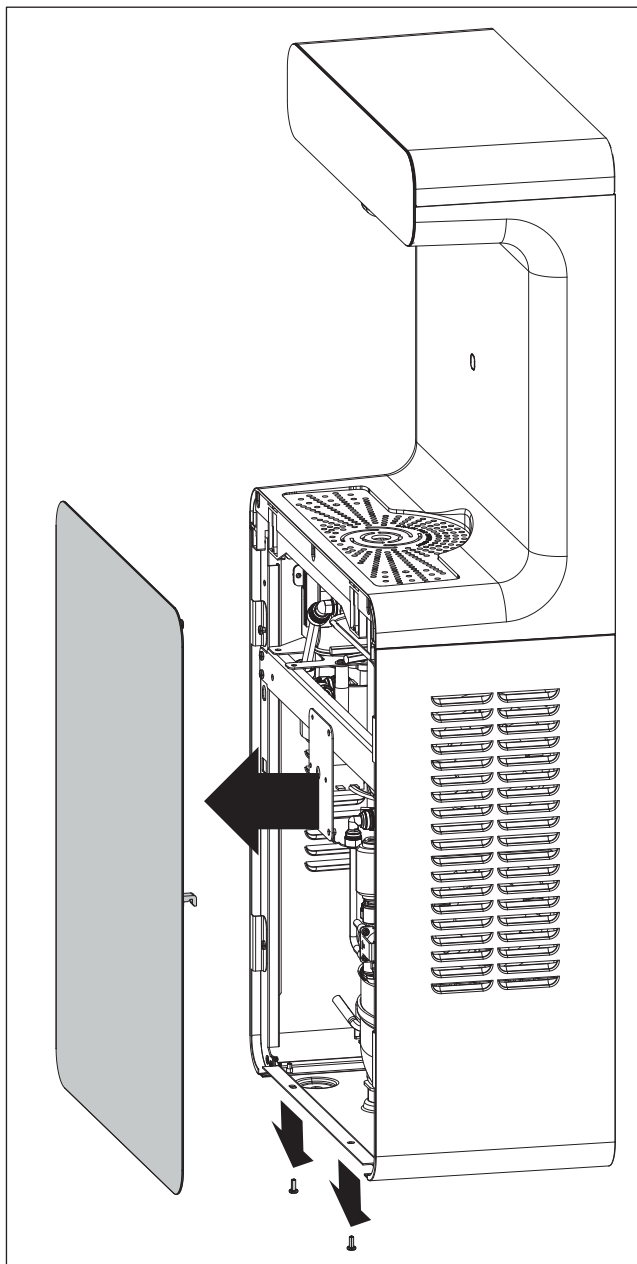


Fig 2

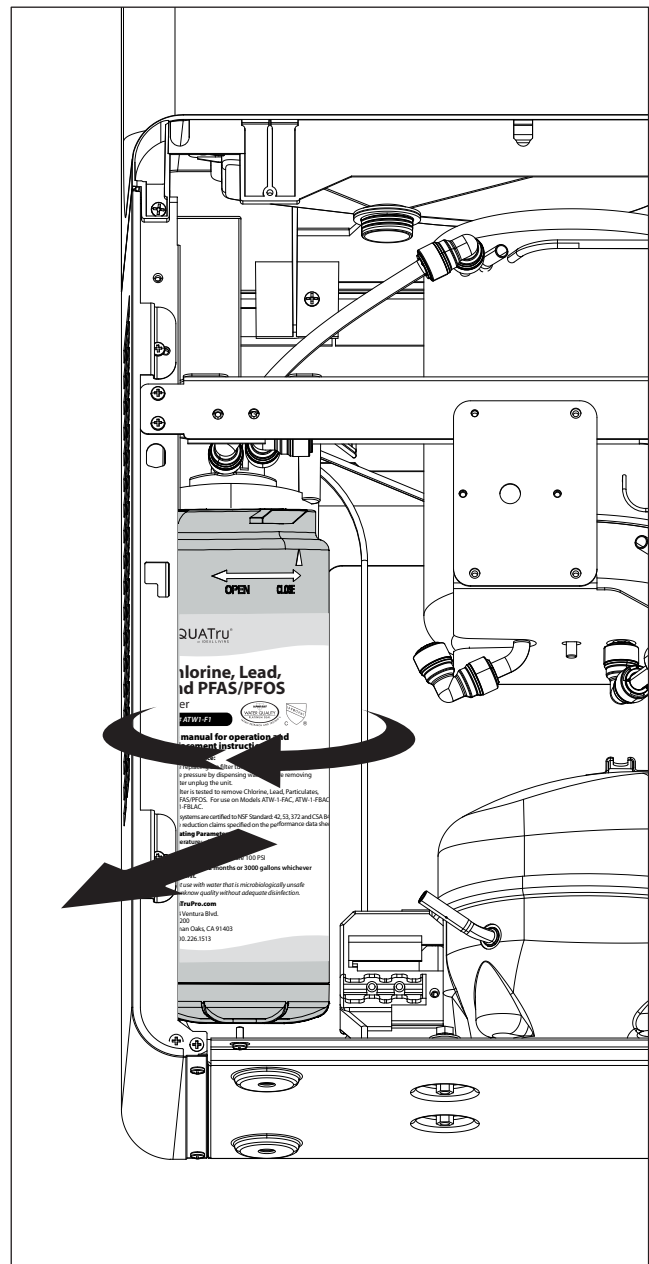

Filter Replacement Instructions

Fig 3


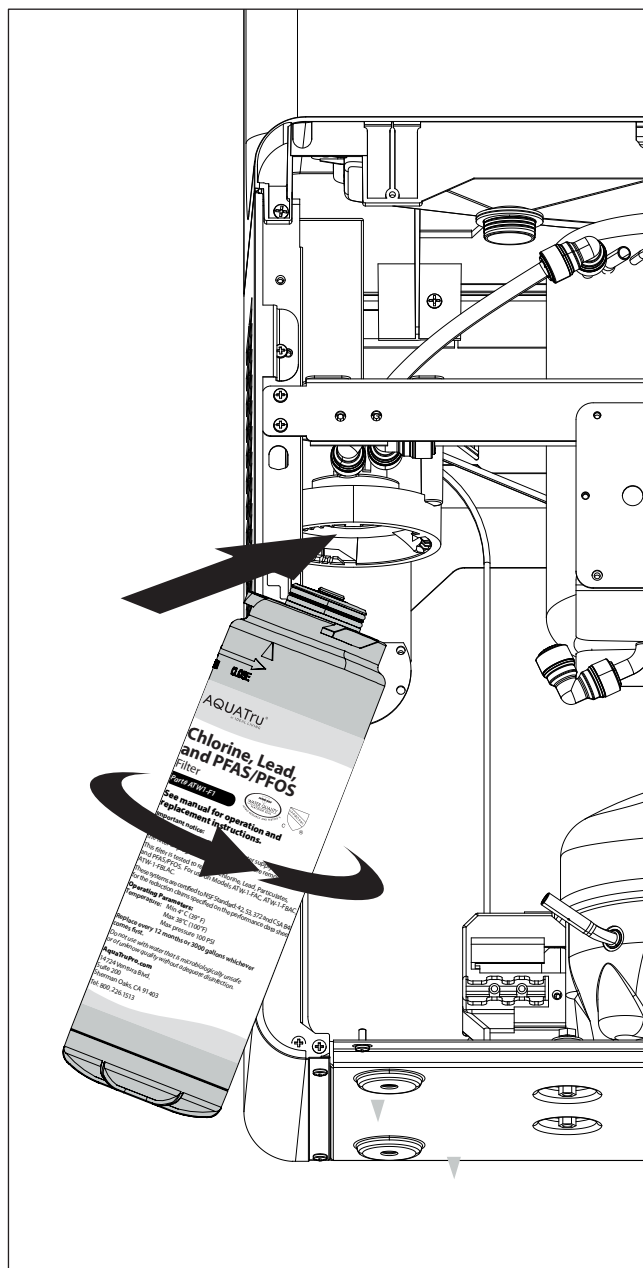


Fig 4

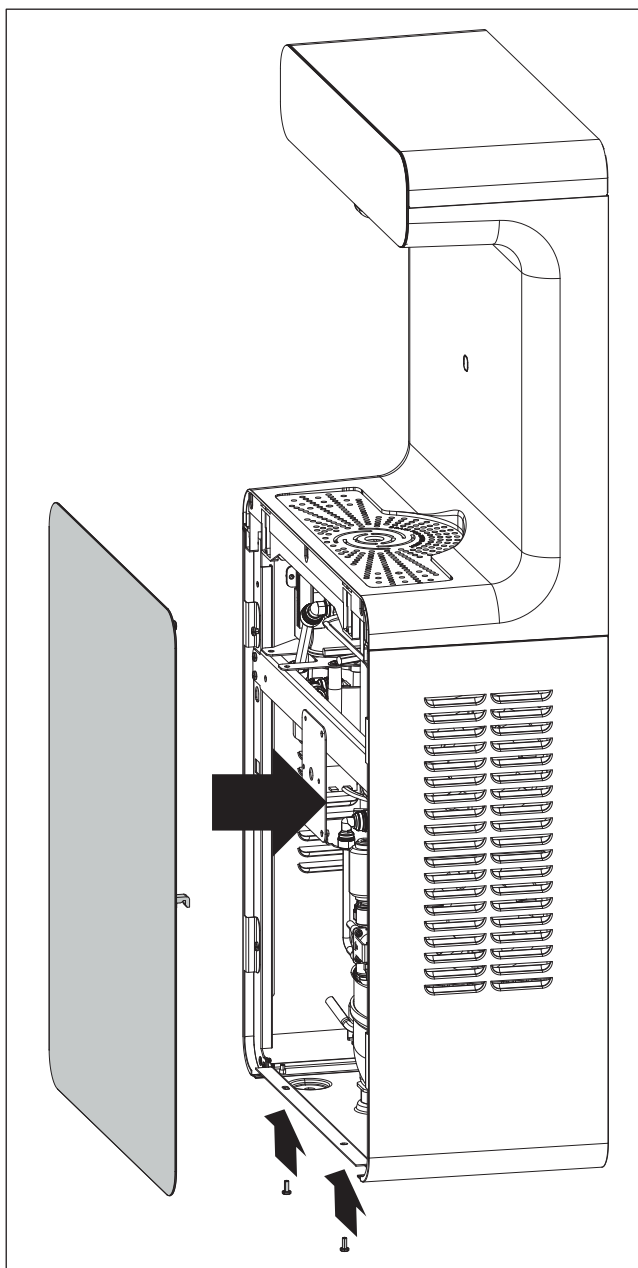

Control Panel

Display

1. Bottles Saved Counter:


Counts the number of 16oz Bottles that this device has prevented from entering a land fill.

2. Filter Life Indicator:

These six LEDs show the remaining capacity of the filter. The more lights that are illuminated, the more time and volume you have remaining in your filter. When the filter life nears capacity the lights will turn orange. At this time, we recommend reordering filters if you do not have replacements.

3. Change Filter Indicator:

Once the filter capacity is completely used up, the words "CHANGE FILTER" will illuminate in red.

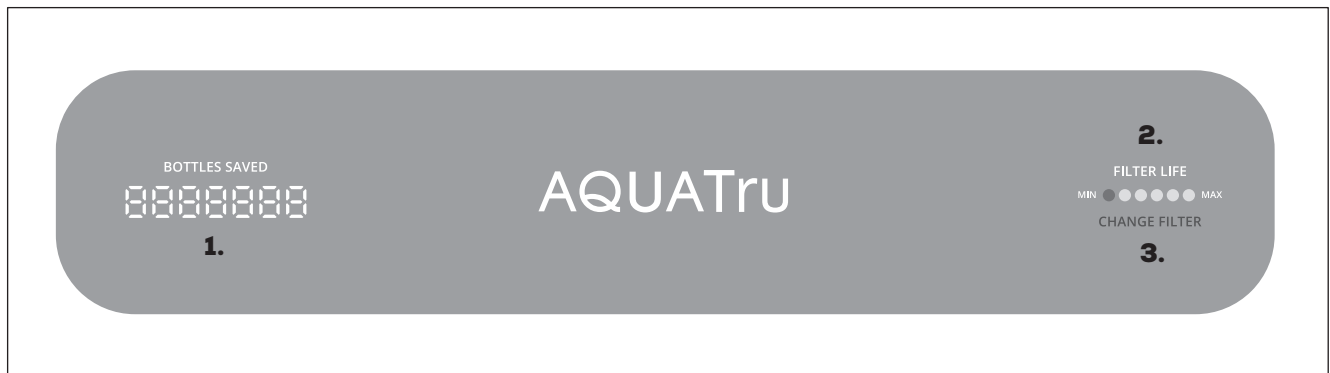

Cleaning

1. Stainless

General Cleaning: Use an ordinary mild detergent and a soft cloth. Rinse and towel dry when finished.
DO NOT USE BLEACH OR PRODUCTS THAT CONTAIN BLEACH ON STAINLESS STEEL, IT CAN AFFECT THE CORROSION RESISTANCE.

Light scratches are normal.



2. Plastic

General Cleaning: Use an ordinary mild detergent and a soft cloth. Rinse and towel dry when finished.
Wiping the surfaces will not hurt anti-microbial properties.


Temperature Control

The factory sets the thermostat to 50 +/- 5 °F under normal conditions. To adjust the temperature, refer to the sticker found next to the Temperature Control Valve located near the Compressor and Cold Tank.

If the water that your AquaTru Produces isn't cold, please turn the thermostat toward the COLDEST setting. Always make sure that you are operating the device with in its operational range. This includes making sure the ambient temperature is below 100 °F.

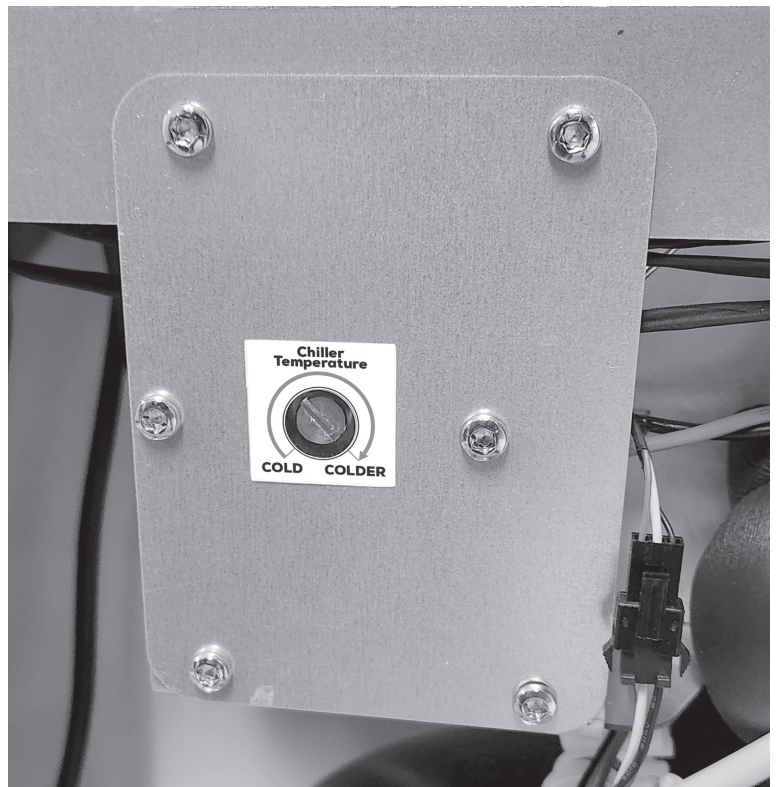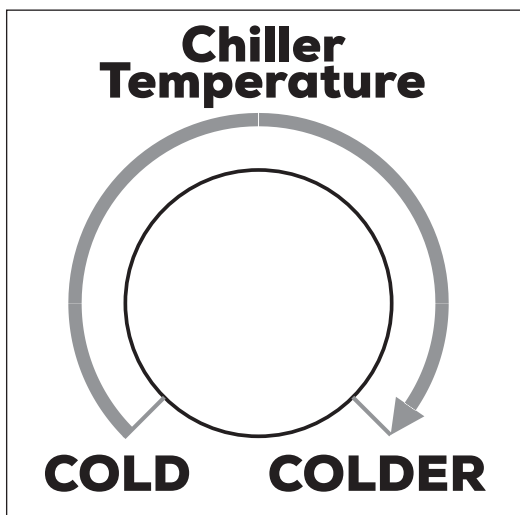

Service: Wiring Diagram

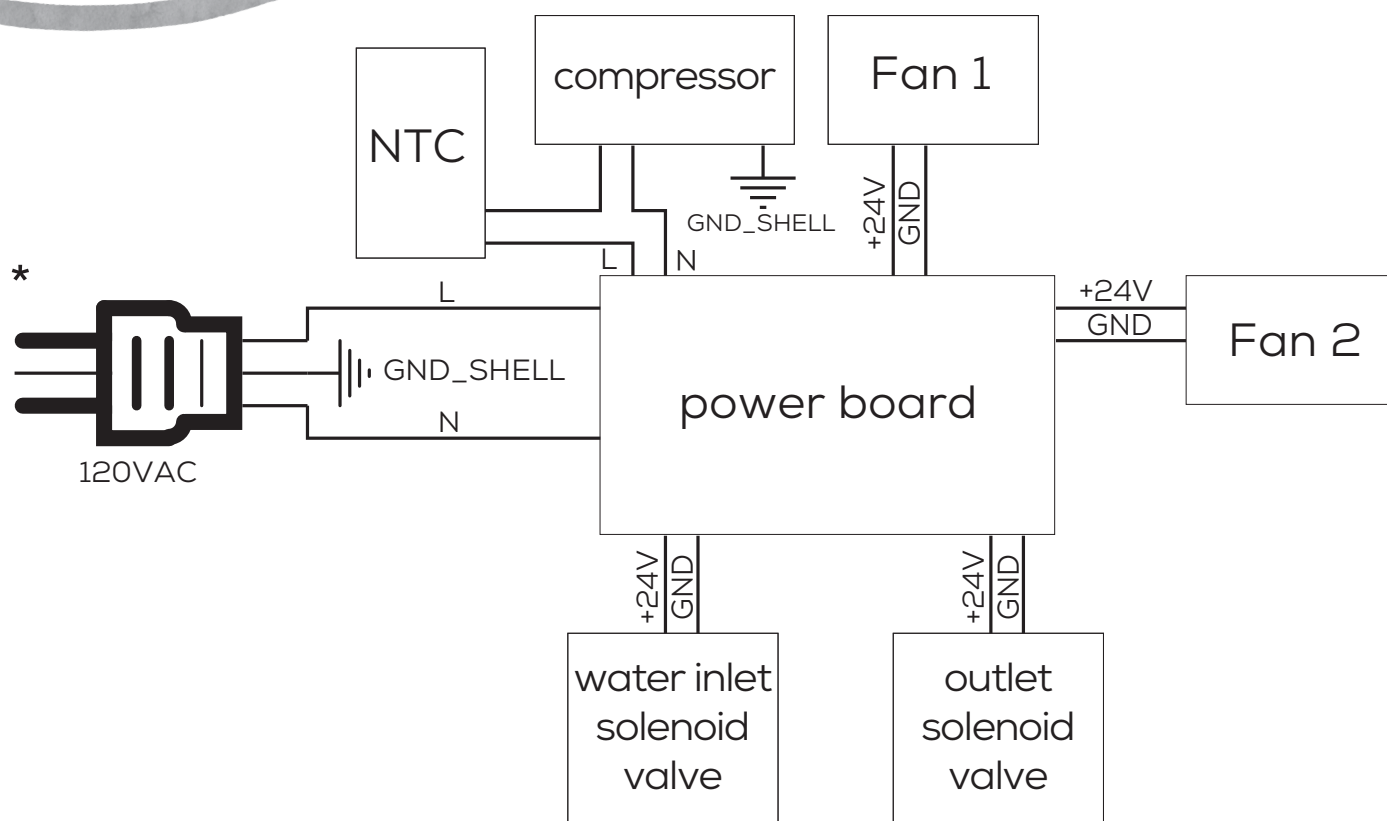

Error Codes

ERROR CODE	ERROR	CAUSE	SOLUTION
A00	Filter Error	The system does not detect a genuine AquaTru Filter.	1. Make sure that a genuine AquaTru Filter is installed. 2. Make sure that the filter is fully inserted into the filter manifold. 3. Make sure that the filter is installed in the correct orientation. 4. The Filter Scanner may have shifted during transportation. Gently pull on it (located behind the filter, Fig 1) to move it closer to the filter.
A02	Refrigeration failure.	The compressor has not activated more than 3 times in a 3-hour window or there is no signal from the cooling system.	1. Check that the filter is installed correctly. 2. Unplug the system. 3. Check to make sure there is a voltage from the temperature sensor. 4. Plug the system back in. 5. Wait 5 minutes to make sure the fan is turning on. If the fan turns on the system is good to go. If the fan does not turn on or you experience this issue repeatedly reach out to customer support.

Fig 1



Warranty Information

Limited Warranty for AquaTru On-Wall Filling Station

Your AquaTru On-Wall Filling Station is warranted to be free from defects in materials and workmanship for one year from the original purchase date or eighteen (18) months from the date of shipment from the factory, whichever occurs first. Should the product have a defect in materials or workmanship, we will repair or replace parts without charge to you (a shipping and processing fee will apply). The warranty **does not include filters**. For the Warranty to apply the unit must be installed by a certified plumber and operated in accordance with the Manufacturer's written instructions included with each unit. To obtain service under warranty, simply call our customer service center toll-free at **800-919-7966** or **email at aqtservice@idealliving.com**.

This warranty does not cover damage caused by accident, misuse, or any use other than as intended and described in this product manual, or damage resulting from failure to maintain and clean this product as specified in this product manual. This warranty applies only to the original purchaser of the AquaTru On-Wall Filling Station.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD, AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THIS PERIOD.

SECOND THROUGH FIFTH YEARS WARRANTY FOR AQUATRU ON-WALL FILLING STATION - Manufacturer warrants the compressor and related cooling or heating parts including cooling coils or tank assembly when part of the refrigeration system, to be free from defects in material and workmanship under normal use for an additional four (4) years from the end of the one (1) year period described above.

Some states do not allow limitations on the duration of implied warranties, so the above limitation may not apply to you. While this warranty gives you specific legal rights, you may also have other rights, which may vary from state to state.

Contact Info for Warranty Service:

Ideal Living

P.O. Box 9169 | Van Nuys, CA | 91409-8291
800-919-7966 | enterprise.idealliving.com

Arbitration Agreement

PLEASE READ THIS AGREEMENT CAREFULLY. YOU ACCEPT THE TERMS OF THIS AGREEMENT BY RETAINING THE PRODUCT(S) SHIPPED IN CONNECTION WITH THIS AGREEMENT (THE "PRODUCTS") FOR MORE THAN THIRTY (30) DAYS AFTER RECEIPT. IF YOU DO NOT AGREE TO THE TERMS OF THIS AGREEMENT, YOU MAY RETURN THE PRODUCT TO THE COMPANY WITHIN THIRTY (30) DAYS OF RECEIPT FOR A FULL REFUND.

THIS ARBITRATION AGREEMENT ("AGREEMENT") AFFECTS YOUR LEGAL RIGHTS AND REMEDIES BY PROVIDING THE DISPUTES BETWEEN YOU AND THE MANUFACTURER, DISTRIBUTOR AND/OR SELLER OF THIS PRODUCT (COLLECTIVELY, "COMPANY"), MUST BE RESOLVED THROUGH BINDING ARBITRATION AND NOT IN COURT. IT ALSO PROVIDES THAT ANY DISPUTE CANNOT BE RESOLVED IN A CLASS ACTION OR OTHER PROCEEDING WHERE YOU REPRESENT OTHER PERSONS OR OTHER PERSONS REPRESENT YOU, AND THAT NO CLASS OR REPRESENTATIVE ARBITRATIONS ARE PERMITTED. PLEASE CAREFULLY READ ALL TERMS IN THIS AGREEMENT.

1. RESOLUTION OF CLAIMS OR DISPUTES.

Any claim or dispute between you and Company (or any of Company's subsidiaries or affiliates) arising out of or relating in any way to the Product or this Agreement shall be resolved through final, binding arbitration. This arbitration obligation is reciprocally binding on both you and the Company and applies regardless of whether the claim or dispute involves a tort, fraud, misrepresentation, product liability, negligence, violation of a statute, or any other legal theory. Both you and Company specifically acknowledge and agree that you waive your right to bring a lawsuit based on such claims or disputes and to have such lawsuit resolved by a judge or jury.

2. LIMITATION OF LEGAL REMEDIES.

All arbitrations under this Agreement shall be conducted on an individual (and not a class wide) basis, and an arbitrator shall have no authority to award class wide relief. You acknowledge and agree that this Agreement specifically prohibits you and the Company from commencing arbitration proceedings as a representative of others or joining in any arbitration proceedings brought by any other person. The parties agree that no class or representative actions of any type are permitted.

3. ARBITRATION PROCEDURES.

- a.** Before instituting an arbitration, if you have any dispute, we strongly encourage you to contact the Company to try to resolve the matter by calling 800-919-7966, although you are not required to do so.
- b.** The arbitration of any claim or dispute under this Agreement shall be conducted in accordance with the expedited procedures set forth in the JAMS Comprehensive Arbitration Rules and Procedures as those Rules exist on the date you receive the Product, including Rules 16.1 and 16.2 of those Rules. These rules and procedures are available by calling JAMS or by visiting its website at jamsadr.com. The arbitration of any claim or dispute under this Agreement shall be conducted by an arbitrator who has at least five years of experience conducting arbitrations.
- c.** The arbitration of any claim or dispute under this Agreement shall be conducted in the State of California or the location in which you received this Agreement. For claims of \$10,000 or less, you may choose whether the arbitration proceeds in person, by telephone, or based only on submissions.
- d.** The Company shall pay costs for the arbitration of claims, including any JAMS Case Management Fee and all professional fees for the arbitrator's services. The Company shall pay the fees and costs of its own counsel, experts and witnesses and shall not be able to recoup them from you even if you do not prevail in the arbitration. Unless otherwise provided by law, you acknowledge and agree that you shall pay the fees and costs of your own counsel, experts and witnesses.

4. CHOICE OF LAW.

The arbitration provisions of this Agreement and any arbitration conducted pursuant to the terms of this Agreement shall be governed by the Federal Arbitration Act (9 U.S.C. Secs. 1-16). In this respect, the parties acknowledge that this Agreement involves a transaction conducted in interstate commerce. Otherwise, this Agreement and the rights of the parties hereunder shall be governed by and construed in accordance with the laws of the State of California, exclusive of conflict or choice of law rules.

5. SEVERABILITY.

If any provision of this Agreement is declared or found to be unlawful, unenforceable or void, such provision will be ineffective only to the extent that it is found unlawful, unenforceable or void, and the remainder of the provision and all other provisions shall remain fully enforceable.

Acuerdo de Arbitraje

LEA ATENTAMENTE ESTE ACUERDO. USTED ACEPTA LOS TÉRMINOS DE ESTE ACUERDO AL CONSERVAR EL PRODUCTO (LOS PRODUCTOS) ENVIADOS BAJO A ESTE ACUERDO (LOS "PRODUCTOS") POR MÁS DE TREINTA (30) DÍAS DESPUÉS DE SU RECEPCIÓN. SI NO ESTÁ DE ACUERDO CON LOS TÉRMINOS DE ESTE ACUERDO, PUEDE DEVOLVER EL PRODUCTO A LA EMPRESA EN UN PLAZO DE TREINTA (30) DÍAS A PARTIR DE HABERLO RECIBIDO PARA OBTENER UN REEMBOLSO COMPLETO.

TESTE ACUERDO DE ARBITRAJE ("ACUERDO") AFECTA A SUS DERECHOS Y RECURSOS LEGALES AL ESTABLECER QUE LAS DISPUTAS ENTRE USTED Y EL FABRICANTE, DISTRIBUIDOR Y/O VENDEDOR DE ESTE PRODUCTO (COLECTIVAMENTE, "COMPAÑÍA"), DEBEN RESOLVERSE MEDIANTE ARBITRAJE VINCULANTE Y NO EN LOS TRIBUNALES. TAMBIÉN ESTABLECE QUE CUALQUIER DISPUTA NO PUEDE SER RESUELTA EN UNA ACCIÓN COLECTIVA U OTRO PROCEDIMIENTO EN EL QUE USTED REPRESENTA A OTRAS PERSONAS O QUE OTRAS PERSONAS LE REPRESENTEN A USTED, Y QUE NO SE PERMITEN ARBITRAJES COLECTIVOS O REPRESENTATIVOS. POR FAVOR LEA DETENIDAMENTE TODOS LOS TÉRMINOS DE ESTE ACUERDO.

1. RESOLUCIÓN DE RECLAMACIONES O DISPUTAS.

Cualquier reclamación o disputa entre usted y la Compañía (o cualquiera de las subsidiarias o filiales de la Compañía) que surja o esté relacionada de alguna manera con el Producto o este Acuerdo se resolverá mediante un arbitraje final y vinculante. Esta obligación de arbitraje es recíprocamente vinculante tanto para usted como para la Compañía y se aplica independientemente de si la reclamación o disputa implica un agravio, fraude, tergiversación, responsabilidad por el producto, negligencia, violación de una ley o cualquier otra teoría legal. Tanto usted como la Compañía reconocen y aceptan específicamente que renuncian a su derecho a presentar una demanda judicial basada en dichas reclamaciones o disputas y a que dicha demanda sea resuelta por un juez o un jurado.

2. LIMITACIÓN DE LOS RECURSOS LEGALES.

Todos los arbitrajes en virtud del presente Acuerdo se llevarán a cabo de forma individual (y no colectiva), y un árbitro no tendrá autoridad para conceder una reparación colectiva. Usted reconoce y acepta que este Acuerdo le prohíbe específicamente a usted y a la Compañía iniciar procedimientos de arbitraje como representante de otros o unirse a cualquier procedimiento de arbitraje presentado por cualquier otra persona. Las partes acuerdan que no se permiten acciones colectivas o representativas de ningún tipo.

3. PROCEDIMIENTOS DE ARBITRAJE.

- a.** Antes de iniciar un arbitraje, si tiene alguna disputa le recomendamos encarecidamente que se ponga en contacto con la Compañía para intentar resolver el asunto llamando al 800-919-7966, aunque no está obligado a hacerlo.
- b.** El arbitraje de cualquier reclamación o disputa en virtud de este Acuerdo se llevará a cabo de acuerdo con los procedimientos acelerados establecidos en las Normas y Procedimientos de Arbitraje Integrales de JAMS, tal y como existían en la fecha en que usted recibió el Producto, incluidas las Normas 16.1 y 16.2 de dichas Normas. Estas normas y procedimientos están disponibles llamando a JAMS o visitando su sitio web en www.jamsadr.com. El arbitraje de cualquier reclamación o disputa en virtud de este Acuerdo será llevado a cabo por un árbitro que tenga al menos cinco años de experiencia en la realización de arbitrajes.
- c.** El arbitraje de cualquier reclamación o disputa en virtud de este Acuerdo se llevará a cabo en el Estado de California o en el lugar en el que usted recibió este Acuerdo. En el caso de reclamaciones de \$10,000 o menos, usted podrá elegir si el arbitraje se lleva a cabo en persona, por teléfono o únicamente basado en la presentación de documentación.
- d.** La Compañía pagará los costes del arbitraje de las reclamaciones, incluyendo cualquier tasa de gestión de casos de JAMS y todos los honorarios profesionales por los servicios del árbitro. La Compañía pagará los honorarios y costes de sus propios abogados, peritos y testigos y no podrá recuperarlos de usted aunque no prevalezca en el arbitraje. A menos que la ley disponga lo contrario, usted reconoce y acepta que pagará los honorarios y costes de su propio abogado, peritos y testigos.

4. ELECCIÓN DE LA LEY.

Las disposiciones de arbitraje de este Acuerdo y cualquier arbitraje llevado a cabo de conformidad con los términos de este Acuerdo se regirán por la Ley Federal de Arbitraje (9 U.S.C. Artículos 1-16). A este respecto, las partes reconocen que este Acuerdo implica una transacción realizada en el comercio interestatal. Por lo demás, el presente Acuerdo y los derechos de las partes en virtud del mismo se regirán e interpretarán de acuerdo con las leyes del Estado de California, excluyendo las normas de conflicto o elección de la ley.

5. DISPOSICIONES INDEPENDIENTES.

Si alguna de las disposiciones del presente Acuerdo se declara o se considera ilegal, inaplicable o nula, dicha disposición será ineficaz sólo en la medida en que se considere ilegal, inaplicable o nula, y el resto de las disposiciones y todas las demás cláusulas seguirán siendo aplicables plenamente.

Main Parts - SKU Listing

DIAGRAM #	PART DESCRIPTION	SKU
1	Control Panel	10AT01WFP01
2	Display Guide	10AT01WFP02
3	Light Cover	10AT01WFP03
4	Screen PCB	10AT01WFP04
5	Elbow Connector 1/4" to 3/8"	10AT01WFP05
6	Solenoid	10AT01WFP06
7	Dispenser Insert	10AT01WFP07
8	Dispensing Tube	10AT01WFP08
9	Dispensing Tube Cover	10AT01WFP09
10	Sensor Lens	10AT01WFP10
11	Bottle Sensor	10AT01WFP11
12	Dispenser Top	10AT01WFP12
13	Bottle Dispenser Top	10AT01WFP13
14	Bottle Dispenser	10AT01WFP14
15	Drip tray Gasket	10AT01WFP15
16	Drip Tray	10AT01WFP16
17	Drain Basin	10AT01WFP17
18	Drain Tube Gasket	10AT01WFP18
19	Threaded Insert for Drain Tube	10AT01WFP19
20	Drain Tube	10AT01WFP20
21	Left Frame	10AT01WFP21
22	Left Cover	10AT01WFP22
23	3/8" PE Pipe	10AT01WFP23
24	Front Cover Panel	10AT01WFP24
25	Bottle Counter Reset Switch	10AT01WFP25
26	Front Frame Brace	10AT01WFP26
27	Evaporator (Water) Tank	10AT01WFP27
28	Flow Meter	10AT01WFP28
29	Thermostat	10AT01WFP29
30	Thermostat Mount	10AT01WFP30
31	Mounting Bracket	10AT01WFP31
32	Back Cover	10AT01WFP32
33	Condenser	10AT01WFP33
34	Fan	10AT01WFP34

DIAGRAM #	PART DESCRIPTION	SKU
35	Fan Cowling	10AT01WFP35
36	Right Frame	10AT01WFP36
37	Right Cover	10AT01WFP37
38	Big O-ring	10AT01WFP38
39	Filter Sump	10AT01WFP39
40	Small O-ring	10AT01WFP40
41	Carbon Top Cap	10AT01WFP41
42	Carbon Block	10AT01WFP42
43	Carbon End Cap	10AT01WFP43
44	Filter End Cap	10AT01WFP44
45	Filter Manifold	10AT01WFP45
46	Valve Stem	10AT01WFP46
47	Spring	10AT01WFP47
48	Flow Wiper	10AT01WFP48
49	Flow Wiper Cover	10AT01WFP49
50	NFC Reader	10AT01WFP50
51	NFC Reader Mounting Plate	10AT01WFP51
52	Manifold Mounting Plate	10AT01WFP52
53	Control Board Mounting Plate	10AT01WFP53
54	Control Board	10AT01WFP54
55	Control Board Cover	10AT01WFP55
56	Compressor	10AT01WFP56
57	1/4" PE Pipe	10AT01WFP57
58	Pressure Wiper	10AT01WFP58
59	Copper Pipe	10AT01WFP59
60	Refrigerant Filter and Capillary Tube	10AT01WFP60
61	Elbow Connector 3/8" to 3/8"	10AT01WFP61
62	Elbow Connector 1/4" to 1/4"	10AT01WFP62
63	Elbow Connector 1/4" Male to 3/8" Female	10AT01WFP63
64	Elbow Connector 5/16" to 3/8"	10AT01WFP64
65	1/4" to 5/16" Elbow Connector	10AT01WFP65
Not Shown	Compressor Overload	10AT01WFP96
Not Shown	Compressor Relay	10AT01WFP97
Not Shown	Power Cord	10AT01WFP98

AQUATru[®]
BY IDEAL LIVING







Enterprise.idealliving.com/water-solutions

©2026 AquaTru, LLC. All Rights Reserved. 06.26.R1