

retrospec

Roo Rev

Passenger Seat Pad



OWNER'S MANUAL

Oh, hey!

Welcome to the **retrospec** family! We're so happy to have you along for the ride. Your new e-bike accessory comes with everything you need to hit the ground rolling.

The **Roo Rev Passenger Seat Pad** adds a comfortable, secure seating surface for a rear passenger riding on your Roo Rev long-tail electric cargo bike. It mounts directly to the rear rack using four molded-in bolts, washers, and lock nuts.

⚠ **Important:** The Passenger Seat Pad is **not** a child safety seat. Always follow local regulations for carrying passengers, and ensure the passenger wears a helmet at all times.

What's in the Box?

If you're missing any of these items, please let us know as soon as possible!

- ✓ 2 Roo Passenger Seat Pad with
- ✓ 8 Washers
- ✓ 8 Nuts

Tools Required

10 mm wrench or adjustable wrench

Specifications & Safety

- Max passenger weight: As per Roo Rev's maximum rear rack/platform load rating (119 lbs total combined load)
- Always use with wheel guards and passenger running boards
- Not for use without an appropriate passenger safety accessory
- Inspect before each ride — do not use if damaged or loose

⚠ **Safety First:**

Before beginning installation, turn off your bike and remove the battery. This prevents accidental activation of the motor or electrical components while working on the bike.

Installation Instructions

1. Prepare the Bike

- Park on a stable, level surface.
- Remove any accessories from the rear rack that would interfere with the seat pad.
- Ensure the rack is clean and free of debris.

2. Position the Pad

- Place the Roo Passenger Seat Pad on top of the rear rack so the 4 molded-in bolts drop through the matching rack holes.

3. Install Washer on the First Screw

- From underneath the rack, place the screw onto seats threaded hole, then hand-tighten
- Installing one screw/washer at a time.

4. Repeat for the Remaining Screws

- Move to the next screw and repeat the washer-then-nut process until all screws are in place.

5. Final Tightening

- Using a 10 mm wrench, tighten each nut evenly until snug.
- **Do not overtighten** — excessive torque can damage the rack tubing or strip threads.

6. Safety Check

- Firmly shake the pad to ensure it's secure.
- Verify clearance between the passenger and all moving bike parts.

Maintenance & Care

- Inspect weekly for loose hardware or damage.
- Tighten hardware as needed.
- Clean with mild soap and water; avoid harsh chemicals.
- Store indoors when not in use to extend product life.

Passenger Riding Tips

- Always pair the seat pad with **wheel guards** and a **passenger running board**.
- Accelerate and brake gradually with a passenger onboard.
- Avoid sharp turns at speed.
- Communicate with the passenger before starting, stopping, or turning.
- Require helmet use for all passengers.

Warranty

All **retrospec** products are backed by a limited warranty. Scan the QR code below or visit retrospec.com/pages/warranty-policy for full details.






retrospec

Contact Us

Need some help with your new gear? Just want to say “hey” and talk to someone on our team? We’re here for that too.

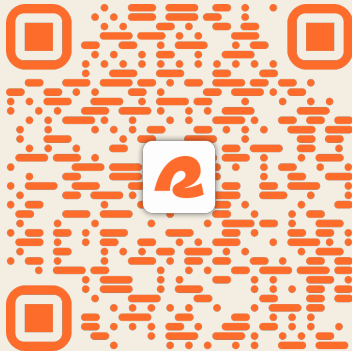

Give us a follow, while you're at it:

@retrospec

#retrospec

#readytooutdoor