

NBS

Single-stage end-suction pumps with split coupled design

Installation and operating instructions



NBS
Installation and operating instructions
(all available languages)
<http://net.grundfos.com/qr/i/99932034>

NBS

English (US)

| | |
|---|-----------|
| Installation and operating instructions | 4 |
| Limited consumer warranty | 24 |
| Limited manufacturer's warranty | 26 |

Original installation and operating instructions

Table of contents

| | |
|--|-----------|
| 1. General information | 4 |
| 1.1 Hazard statements | 4 |
| 1.2 Notes | 4 |
| 1.3 Target group | 4 |
| 2. Product introduction | 5 |
| 2.1 Product description | 5 |
| 2.2 Pumped liquids | 5 |
| 2.3 Identification | 5 |
| 3. Receiving the product | 10 |
| 3.1 Performance test | 10 |
| 3.2 Transporting the product | 10 |
| 3.3 Inspecting the product | 10 |
| 3.4 Storage after delivery | 10 |
| 3.5 Lifting the product | 10 |
| 4. Installation requirements | 11 |
| 4.1 Location | 11 |
| 4.2 Installation positions | 11 |
| 5. Mechanical installation | 12 |
| 5.1 Foundation | 12 |
| 5.2 Pipes and connections | 13 |
| 5.3 Expansion joints | 14 |
| 5.4 Measuring instruments | 15 |
| 6. Electrical connection | 15 |
| 6.1 Voltage and frequency variation | 15 |
| 6.2 Motor protection | 15 |
| 6.3 Frequency converter operation | 15 |
| 7. Startup | 15 |
| 7.1 Flushing the pipe system | 15 |
| 7.2 Priming the product | 16 |
| 7.3 Checking the direction of rotation | 16 |
| 7.4 Starting up the pump | 17 |
| 7.5 Shaft seal run-in period | 17 |
| 7.6 Reference readings of monitoring equipment | 17 |
| 8. Service | 17 |
| 8.1 Contaminated products | 17 |
| 8.2 Maintenance | 17 |
| 8.3 Service kits | 18 |
| 9. Taking the product out of operation | 18 |
| 9.1 Protecting the pump during periods of inactivity and frost | 18 |
| 9.2 Short-term shutdown | 19 |
| 9.3 Long-term shutdown | 19 |
| 9.4 Storing the product | 19 |
| 10. Fault finding | 20 |
| 11. Technical data | 22 |
| 11.1 Operating conditions | 22 |
| 11.2 Electrical data | 23 |
| 12. Disposing of the product | 23 |
| 13. Document quality feedback | 23 |

1. General information



Read this document before you install the product. Installation and operation must comply with local regulations and accepted codes of good practice.

1.1 Hazard statements

The symbols and hazard statements below may appear in Grundfos installation and operating instructions, safety instructions and service instructions.

**DANGER**

Indicates a hazardous situation which, if not avoided, will result in death or serious personal injury.

**WARNING**

Indicates a hazardous situation which, if not avoided, could result in death or serious personal injury.

**CAUTION**

Indicates a hazardous situation which, if not avoided, could result in minor or moderate personal injury.

The hazard statements are structured in the following way:

**SIGNAL WORD****Description of the hazard**

Consequence of ignoring the warning

- Action to avoid the hazard.

1.2 Notes

The symbols and notes below may appear in Grundfos installation and operating instructions, safety instructions and service instructions.



Observe these instructions for explosion-proof products.



A blue or grey circle with a white graphical symbol indicates that an action must be taken.



A red or grey circle with a diagonal bar, possibly with a black graphical symbol, indicates that an action must not be taken or must be stopped.



If these instructions are not observed, it may result in malfunction or damage to the equipment.



Tips and advice that make the work easier.

1.3 Target group

These installation and operating instructions are intended for professional installers and for the operators of the product.

We recommend that installation is carried out by skilled persons with technical qualifications required by the specific legislation in force.

2. Product introduction

2.1 Product description


The product is a non-self-priming, single stage, centrifugal volute pump with axial inlet port and radial outlet port.

2.2 Pumped liquids

Pumped liquids must be clean, thin and without particles or fibers. The pump end has a sleeve bearing which is lubricated by the pumped liquid.

2.3 Identification

2.3.1 Nameplate for NBS

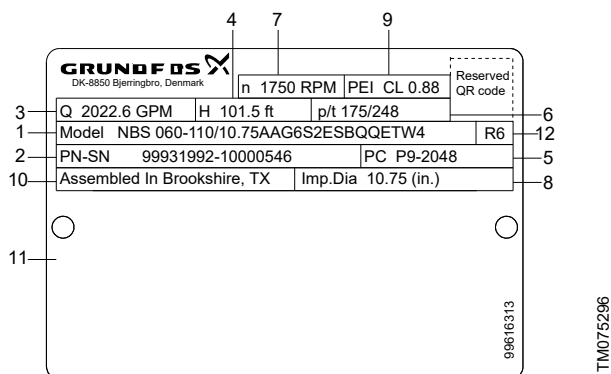

NBS nameplate

| Pos. | Description |
|------|--|
| 1 | Type designation |
| 2 | Product number and production serial number |
| 3 | Flow |
| 4 | Head |
| 5 | Production code |
| 6 | Pressure and temperature |
| 7 | Pump speed |
| 8 | Impeller diameter |
| 9 | PEI CL: Pump Energy Index, constant load PEI VL: Pump Energy Index, variable load |
| 10 | Place of production |
| 11 | Field for approval marks and associated texts |
| 12 | Range identification (service range code) |

2.3.2 Type key

Example 1: NBS 025-095/08.43AAEG6S3ESBQQETX2

Example 2: NBS 040-150/16.77AFEG7TBESDQQE1X4

Example 3: NBS 060-135/1291-1276AAEG7TBESDQQEWX4

Example 4: NBSE 025-110/11.02ASFEG6S2ESBQQENDA

Example 5: NBSE 030-110/1094-1063ACAEG7S7FSDAQFODA

| Pos. | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 |
|-----------|------|-----|------|------------|---|---|---|----|---|----|----|----|----|------|----|----|----|
| Example 1 | NBS | 025 | -095 | /08.43 | | A | | AE | G | 6 | S3 | E | S | BQQE | T | X | 2 |
| Example 2 | NBS | 040 | -150 | /16.77 | | A | | FE | G | 7 | TB | E | S | DQQE | 1 | X | 4 |
| Example 3 | NBS | 060 | -135 | /1291-1276 | | A | | AE | G | 7 | TB | E | S | DQQE | W | X | 4 |
| Example 4 | NBSE | 025 | -110 | /11.02 | | A | S | FE | G | 6 | S2 | E | S | BQQE | N | D | A |
| Example 5 | NBSE | 030 | -110 | /1094-1063 | | A | C | AE | G | 7 | S7 | F | S | DAQF | O | D | A |

| Pos. | Explanation |
|------|--|
| 1 | Type range |
| 2 | Nominal diameter of outlet port (DN) |
| 3 | Nominal impeller diameter [inch] |
| 4 | Actual impeller diameter [inch] |
| | Impeller type |
| | 'blank': Closed impeller, cylindrical trim. If one dimension is shown the impeller has a cylindrical trim, for example 11.02 |
| 5 | 'blank': Closed impeller, conical trim. If two dimensions are shown the impeller has a conical trim, for example 1094-1063 S: Special open impeller V: Super vortex impeller |
| | Hydraulic version |
| | A: 1st version B: 2nd version C: 3rd version D: 4th version |
| | Sensor/motor version |
| | 'blank': Pump without sensor |
| 7 | C: Without built-in sensor, one cable and one pressure sensor are supplied with the pump S: Pump with built-in differential-pressure sensor, Series 2000 G: Non -E pump/ -E pump with semi-integrated VFD/CUE: Motor with Grounding ring: Non drive-end |
| | Code for pump version; the codes may be combined |
| | A: Basic version B: Oversize motor C: Without motor |
| 8 | (+E): With ATEX approval, certificate or test report, the second character of the code for pump version is an E F: Design with base frame (+S): With support rails, the second character of the pump version code is an S X: Special version; used in case of further customization than already listed |
| | Pipe connection |
| | G: ANSI flange |
| | Flange pressure rating (PN - rated pressure) |
| 10 | 5: Other pressure rating 6: Class 125, 175 PSI 7: Class 300, 363 PSI |

| Pos. | Explanation | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|-------|--|--------------|--------------|----------|-----------|-------|----|--------------|-----|--------------|-----|----|--------------|-----|--------------|-----|----|--------------|-----|--------------|-----|----|--------------|-----|--------------|----------|----|--------------|-----|--------------|-----|----|--------------|-----|--------------|-----|----|--------------|-----|--------------|-----|----|--------------|-----|--------------|----------|-------|----------|-----|--------------|-----|-------|----------|-----|--------------|-----|-------|----------|-----|--------------|-----|-------|----------|-----|--------------|----------|-------|----------|-----|--------------|-----|-------|----------|-----|--------------|-----|-------|----------|-----|--------------|-----|-------|----------|-----|--------------|----------|-------|--------------|--------------|--------------|----------|-------|----------|--------------|--------------|----------|------|-----------------|--|--|--|
| | Code for materials | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | <table border="1"> <thead> <tr> <th>Code</th> <th>Pump housing</th> <th>Impeller</th> <th>Wear ring</th> <th>Shaft</th> </tr> </thead> <tbody> <tr> <td>S2</td> <td>A48 Class 35</td> <td>304</td> <td>No wear ring</td> <td>420</td> </tr> <tr> <td>S3</td> <td>A48 Class 35</td> <td>304</td> <td>No wear ring</td> <td>304</td> </tr> <tr> <td>S4</td> <td>A48 Class 35</td> <td>304</td> <td>No wear ring</td> <td>316</td> </tr> <tr> <td>S5</td> <td>A48 Class 35</td> <td>304</td> <td>No wear ring</td> <td>SAF 2205</td> </tr> <tr> <td>S6</td> <td>A48 Class 35</td> <td>316</td> <td>No wear ring</td> <td>420</td> </tr> <tr> <td>S7</td> <td>A48 Class 35</td> <td>316</td> <td>No wear ring</td> <td>304</td> </tr> <tr> <td>S8</td> <td>A48 Class 35</td> <td>316</td> <td>No wear ring</td> <td>316</td> </tr> <tr> <td>S9</td> <td>A48 Class 35</td> <td>316</td> <td>No wear ring</td> <td>SAF 2205</td> </tr> <tr> <td>11 SA</td> <td>70-50-05</td> <td>304</td> <td>No wear ring</td> <td>420</td> </tr> <tr> <td>11 SB</td> <td>70-50-05</td> <td>304</td> <td>No wear ring</td> <td>304</td> </tr> <tr> <td>11 SC</td> <td>70-50-05</td> <td>304</td> <td>No wear ring</td> <td>316</td> </tr> <tr> <td>11 SD</td> <td>70-50-05</td> <td>304</td> <td>No wear ring</td> <td>SAF 2205</td> </tr> <tr> <td>11 SE</td> <td>70-50-05</td> <td>316</td> <td>No wear ring</td> <td>420</td> </tr> <tr> <td>11 SF</td> <td>70-50-05</td> <td>316</td> <td>No wear ring</td> <td>304</td> </tr> <tr> <td>11 SG</td> <td>70-50-05</td> <td>316</td> <td>No wear ring</td> <td>316</td> </tr> <tr> <td>11 SH</td> <td>70-50-05</td> <td>316</td> <td>No wear ring</td> <td>SAF 2205</td> </tr> <tr> <td>11 T2</td> <td>A48 Class 35</td> <td>CD4MCuN/A890</td> <td>No wear ring</td> <td>SAF 2205</td> </tr> <tr> <td>11 TA</td> <td>70-50-05</td> <td>CD4MCuN/A890</td> <td>No wear ring</td> <td>SAF 2205</td> </tr> <tr> <td>11 X</td> <td>Special version</td> <td></td> <td></td> <td></td> </tr> </tbody> </table> | Code | Pump housing | Impeller | Wear ring | Shaft | S2 | A48 Class 35 | 304 | No wear ring | 420 | S3 | A48 Class 35 | 304 | No wear ring | 304 | S4 | A48 Class 35 | 304 | No wear ring | 316 | S5 | A48 Class 35 | 304 | No wear ring | SAF 2205 | S6 | A48 Class 35 | 316 | No wear ring | 420 | S7 | A48 Class 35 | 316 | No wear ring | 304 | S8 | A48 Class 35 | 316 | No wear ring | 316 | S9 | A48 Class 35 | 316 | No wear ring | SAF 2205 | 11 SA | 70-50-05 | 304 | No wear ring | 420 | 11 SB | 70-50-05 | 304 | No wear ring | 304 | 11 SC | 70-50-05 | 304 | No wear ring | 316 | 11 SD | 70-50-05 | 304 | No wear ring | SAF 2205 | 11 SE | 70-50-05 | 316 | No wear ring | 420 | 11 SF | 70-50-05 | 316 | No wear ring | 304 | 11 SG | 70-50-05 | 316 | No wear ring | 316 | 11 SH | 70-50-05 | 316 | No wear ring | SAF 2205 | 11 T2 | A48 Class 35 | CD4MCuN/A890 | No wear ring | SAF 2205 | 11 TA | 70-50-05 | CD4MCuN/A890 | No wear ring | SAF 2205 | 11 X | Special version | | | |
| Code | Pump housing | Impeller | Wear ring | Shaft | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| S2 | A48 Class 35 | 304 | No wear ring | 420 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| S3 | A48 Class 35 | 304 | No wear ring | 304 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| S4 | A48 Class 35 | 304 | No wear ring | 316 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| S5 | A48 Class 35 | 304 | No wear ring | SAF 2205 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| S6 | A48 Class 35 | 316 | No wear ring | 420 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| S7 | A48 Class 35 | 316 | No wear ring | 304 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| S8 | A48 Class 35 | 316 | No wear ring | 316 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| S9 | A48 Class 35 | 316 | No wear ring | SAF 2205 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 11 SA | 70-50-05 | 304 | No wear ring | 420 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 11 SB | 70-50-05 | 304 | No wear ring | 304 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 11 SC | 70-50-05 | 304 | No wear ring | 316 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 11 SD | 70-50-05 | 304 | No wear ring | SAF 2205 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 11 SE | 70-50-05 | 316 | No wear ring | 420 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 11 SF | 70-50-05 | 316 | No wear ring | 304 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 11 SG | 70-50-05 | 316 | No wear ring | 316 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 11 SH | 70-50-05 | 316 | No wear ring | SAF 2205 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 11 T2 | A48 Class 35 | CD4MCuN/A890 | No wear ring | SAF 2205 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 11 TA | 70-50-05 | CD4MCuN/A890 | No wear ring | SAF 2205 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 11 X | Special version | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Rubber parts in pump | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | E: EPDM | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 12 | F: FXM (Fluoraz [®]) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | K: FFKM (Kalrez [®]) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | M: FEPS (PTFE-sheathed silicone O-ring) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | O: HNBR | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | V: FKM (Viton [®]) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 13 | Shaft seal arrangement | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | S: Single seal | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 14 | Shaft seal in pump | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Letter code for mechanical shaft seal and shaft seal rubber parts. See Letter codes for shaft seals. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 15 | Code for rated motor power [kW]. See Codes for rated motor power. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 16 | Code for DOE identification. See Code for DOE identification. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 17 | Code for speed variant [rpm]. See Codes for speed variant. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

2.3.2.1 Letter codes for shaft seals

Pos. 14 in NBS type key example.

| Code | Description | Code explanation |
|------|---|--|
| B | Shaft seal type | A: O-ring seal with fixed driver B: Rubber bellows seal D: O-ring seal, balanced |
| Q | Material of rotating seal face | A: Carbon, metal-impregnated with antimony which is not approved for potable water B: Carbon, resin-impregnated Q: Silicon carbide |
| Q | Material of stationary seal | A: Carbon, metal-impregnated with antimony which is not approved for potable water Q: Silicon carbide |
| E | Material of secondary seal and other rubber and composite parts, except the wear ring | E: EPDM V: FKM (Viton®) F: FXM (Fluoraz®) K: FFKM (Kalrez®) X: HNBR U: Dynamic O-rings in FFKM and static O-rings in PTFE |

2.3.2.2 Codes for rated motor power

Pos. 15 in NBS type key example.

| Code | Description | |
|------|-----------------------|-----------------------|
| | [hp] | [kW] |
| A | 0.16 | 0.12 |
| B | 0.25 | 0.18 |
| C | 0.33 | 0.25 |
| D | 0.5 | 0.37 |
| E | 0.75 | 0.55 |
| F | 1 | 0.75 |
| G | 1.5 | 1.1 |
| H | 2 | 1.5 |
| I | 3 | 2.2 |
| J | 4 | 3 |
| K | 5 (5.5 ¹) | 3.7 (4 ¹) |
| L | 7.5 | 5.5 |
| M | 10 | 7.5 |
| N | 15 | 11 |
| O | 20 | 15 |
| P | 25 | 18.5 |
| Q | 30 | 22 |
| R | 40 | 30 |
| S | 50 | 37 |
| T | 60 | 45 |
| U | 75 | 55 |
| V | 100 | 75 |
| W | 125 | 90 |
| X | Bare shaft pump | |
| Y | > 200 ² | > 150 ² |
| 1 | 150 | 110 |
| 2 | 175 | 132 |
| 3 | 200 | 150 |
| 4 | 215 ³ | 160 ³ |
| 5 | 250 ³ | 185 ³ |
| 6 | - | 26 |

1) Value in bracket is for the standard IEC motor size. Value outside bracket is for the motor size according to NEMA standards.

2) Used for pumps where the pump shaft input power exceeds 200 hp (150 kW) and is not regulated under the DOE pump rule.

3) Special cases with power sizes above 200 hp (150 kW) which are still regulated under the DOE pump rule. For example: Pump has a P2 value of 198 hp (147.6 kW) in its duty point (in DOE scope) but customer wants the 215 hp (160 kW) motor instead of the 200 hp (150 kW). The pump is in scope of the DOE regulation and requires a PEI value and a motor code.

2.3.2.3 Code for DOE identification

Pos. 16 in NBS type key example.

| Code | Description |
|------|--|
| A | DOE reported with E-motor (ECM ⁴⁾), 1 × 200-240 V |
| B | DOE reported with E-motor (ECM ⁴⁾), 3 × 200-240 V |
| C | DOE reported with E-motor (ECM ⁴⁾), 3 × 440-480 V |
| D | DOE reported with E-motor (ECM ⁴⁾), 3 × 380-500 V |
| E | DOE reported with E-motor (ECM ⁴⁾), 3 × 525-600 V |
| F | DOE reported with E-motor (ECM ⁴⁾), 3 × 525-690 V |
| W | In DOE scope but not compliant with or not for sale in North America |
| X | DOE reported, sell as bare shaft pump or DOE regulated Motor (CC marked motor) |
| Y | Pumps not subject to the DOE regulation |
| Z | DOE reported with Asynchronous E-Motor |

⁴⁾ ECM: Electronically Commutated Motor.

2.3.2.4 Codes for speed variant

Pos. 17 in NBS type key example.

| Code | Description |
|------|---|
| A | 1450-2200 RPM, E-motor (ECM ⁵⁾) |
| B | 2900-4000 RPM, E-motor (ECM ⁵⁾) |
| C | 4000-5900 RPM, E-motor (ECM ⁵⁾) |
| D | 1450-2200 RPM, CUE + WEG PM motor |
| E | 2900-4000 RPM, CUE + WEG PM motor |
| 1 | 2-pole, 50 Hz (Asynchronous motor) |
| 2 | 2-pole, 60 Hz (Asynchronous motor) |
| 3 | 4-pole, 50 Hz (Asynchronous motor) |
| 4 | 4-pole, 60 Hz (Asynchronous motor) |
| 5 | 6-pole, 50 Hz (Asynchronous motor) |
| 6 | 6-pole, 60 Hz (Asynchronous motor) |
| 7 | 8-pole, 50 Hz (Asynchronous motor) |
| 8 | 8-pole, 60 Hz (Asynchronous motor) |

⁵⁾ ECM: Electronically Commutated Motor.

3. Receiving the product

3.1 Performance test

The pumps are not tested for performance before leaving the factory unless it was specifically ordered.

3.2 Transporting the product

WARNING

Overhead load

Death or serious personal injury



- Pay attention to the pump weight, and take precautions to prevent personal injury if the pump topples or falls by accident.

- Always transport the pump in the specified position.
- Securely fasten the pump to prevent damage to the shaft and shaft seal caused by excessive vibrations and knocks.
- Do not lift the pump by the shaft.

3.3 Inspecting the product

- Confirm that the product received is in accordance with the order.
- Confirm that the voltage, phase and frequency of the product match the voltage, phase and frequency of the installation site. See Identification.
- Check the product for defects or damages immediately upon receipt. Any accessory ordered will be packed in a separate container and shipped with the product.
- If any equipment is damaged in transit, report it immediately to the carrier's agent. Make complete notations on the freight bill.

Related information

[2.3.1 Nameplate for NBS](#)

3.4 Storage after delivery

The contractor must inspect the equipment on delivery and make sure it is stored so as to avoid corrosion or damage. See Storing the product.

Related information

[9.4 Storing the product](#)


3.5 Lifting the product

Weight: See the label on the packing.




Motors from 5 hp (4 kW) and up are supplied with lifting eyes that must not be used for lifting the entire pump unit.

- Lift the pump by nylon straps and shackles or a hook as shown in the figures below.

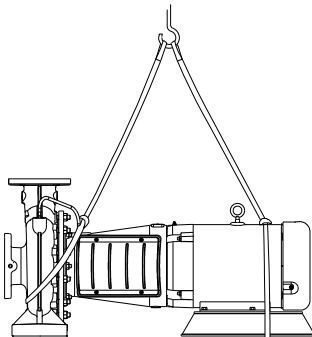


Correct lifting of pump without base frame

TM075311

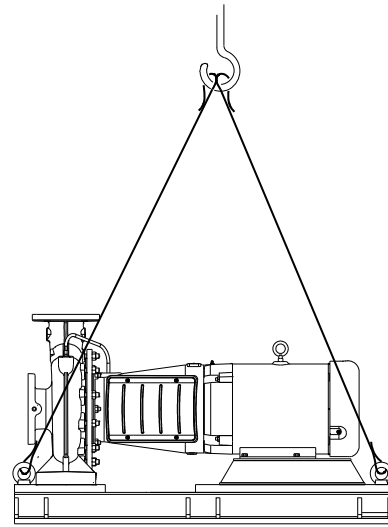


Correct lifting of pump with base frame

TM075310

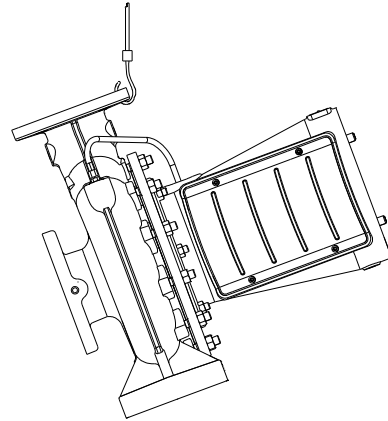

Correct lifting of pump without motor

TM075312

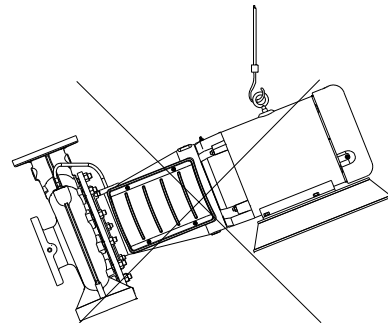

Incorrect lifting of pump

TM075313

4. Installation requirements

4.1 Location



CAUTION

Hot or cold surface

Minor or moderate personal injury




- When pumping hot or cold liquids, make sure that no one can accidentally come into contact with hot or cold surfaces.

The pump must be sited in a well-ventilated, but frost-free location.

4.1.1 Minimum clearance

For inspection and repair, allow suitable clearance for pump and motor removal.


- Pumps fitted with motors up to and including 5 hp (4 kW) require a 12 inches (0.3 m) clearance behind the motor.

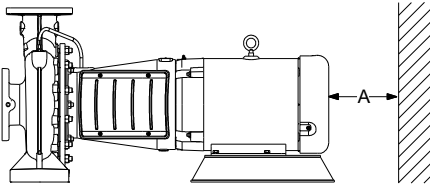

TM075314

| Motor | Minimum clearance, A |
|---------------------------|----------------------|
| 0.33 - 5 hp (0.25 - 4 kW) | 12 inches (0.3 m) |

- Pumps fitted with motors of 7.5 hp (5.5 kW) and up require a 12 inches (0.3 m) clearance behind the motor and at least a clearance of 40 inches (1 m) above the motor to allow for the use of lifting equipment.

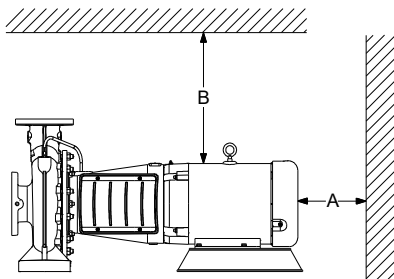

TM075399


| Motor | Minimum clearance | |
|-------------------|-------------------|-----------------|
| | A | B |
| ≥ 7.5 hp (5.5 kW) | 12 inches (0.3 m) | 40 inches (1 m) |

4.2 Installation positions

Arrows on the pump housing show the direction of the flow of liquid through the pump.

Only horizontal installation is allowed for NBS pumps. Contact Grundfos for information on extra installation requirements if special installation positions are needed.

The motor must never be positioned below the horizontal plane. Horizontal motors with feet must always be supported.


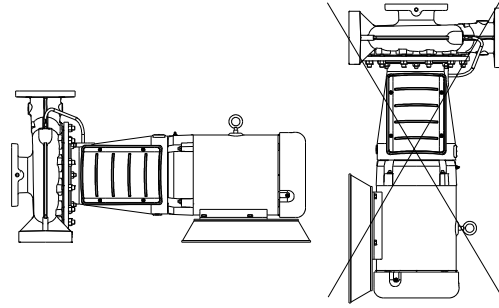


TM075316

5. Mechanical installation

5.1 Foundation

- We recommend that you install the pump on a flat concrete foundation that is heavy enough to provide permanent support for the entire pump.
- The foundation must be adequate for absorbing any vibration, normal strain or shock.
- The foundation may float on springs or be a raised part of the floor.
- Optimally, the weight of the concrete foundation must be at least 1.5 times the weight of the pump.
- The foundation must have a completely even surface.
- The foundation length and width must always be 8 inches (200 mm) larger than the length and width of the pump. See the figure below.

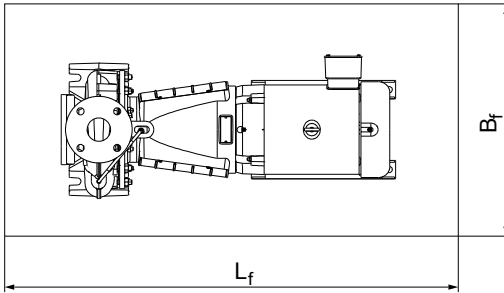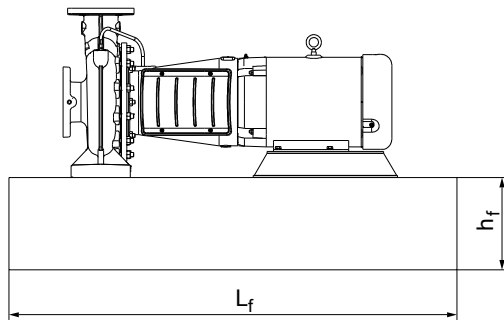

- The minimum height of the foundation, indicated by h_f , can be calculated with the following formula:

$$h_f = \frac{m_{\text{pump}} \times 1.5}{L_f \times B_f \times \delta_{\text{concrete}}}$$

| | |
|----------------------------|--|
| h_f | Height of the foundation [in] ([m]) |
| L_f | Length of the foundation [in] ([m]) |
| B_f | Width of the foundation [in] ([m]) |
| m_{pump} | Mass of the pump [lbs] ([kg]) |
| δ_{concrete} | Density of the concrete [lb/in ³] ([kg/m ³]) |

The density of concrete, indicated by δ , is usually taken as 0.08 lb/in³ (2,200 kg/m³)

- In installations where noiseless operation is particularly important, we recommend a foundation with a mass up to 5 times that of the pump.




After installation is finished, tighten the screws connecting the flange, feet and the anchor bolts according to the tightening torques. You must apply an anti-loose method, such as mounting lock washers.

5.1.1 Preparing the foundation

We recommend the following procedures to ensure a good foundation:

1. Pour the foundation without interruption to 0.75 - 1.25 in. (19-32 mm) of the final level.
Use an approved, non-shrinking concrete. Contact your concrete supplier for advice if any doubts.
2. Use vibrators to ensure that the concrete is evenly distributed. The top surface must be well scored and grooved before the concrete sets. This provides a bonding surface for the grout.
3. Embed anchor bolts in the concrete.
Allow enough bolt length to reach through grout, shims, the lower part of the support rail, nuts and washers.

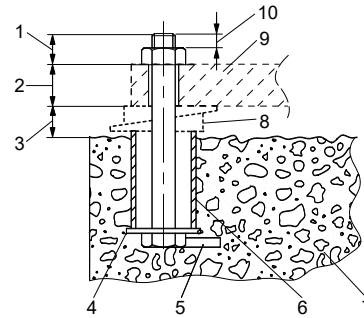

TM075514



| Pos. | Description |
|------|--|
| 1 | Bolt length above the support rail |
| 2 | Thickness of the support rail |
| 3 | 0.75 - 1.25 in. (19-32 mm) allowance for grout |
| 4 | Washer |
| 5 | Lug |
| 6 | Pipe sleeve |
| 7 | Foundation with rough top |
| 8 | Wedges and shims left in place |
| 9 | Support rail |
| 10 | 0.2 - 0.4 in. (5-10 mm) |

4. Let the foundation cure for several days before levelling and grouting the support rail.
5. Apply grout if needed.

NBS pumps do not require grouting to maintain shaft alignment, but grouting will increase pump stability within the pipe system. Grouting compensates for an uneven foundation, distributes the weight of the unit, dampens vibrations and prevents shifting. Use an approved, non-shrinking grout. If you have questions or doubts about the grouting, please contact an expert on grouting.

5.1.2 Levelling of the product without base frame

1. Level the pump shaft and the flanges by using a spirit level and adjusting the wedges or shims as required.

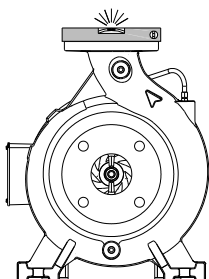
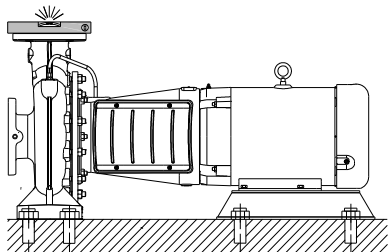


2. Tighten the anchor bolt nuts. Make sure the piping can be aligned to the pump flanges without putting strain on the pipes or the flanges.

5.1.3 Levelling of the product with base frame

1. Lift or jack up the base frame to the final level, 0.75 - 1.26 in. (19-32 mm) above the concrete foundation. Level the pump shaft and flanges by using a spirit level and adjusting the wedges or shims, as required.

A indicates an allowance of 0.75 - 1.26 in. (19-32 mm).

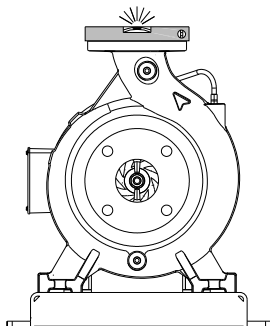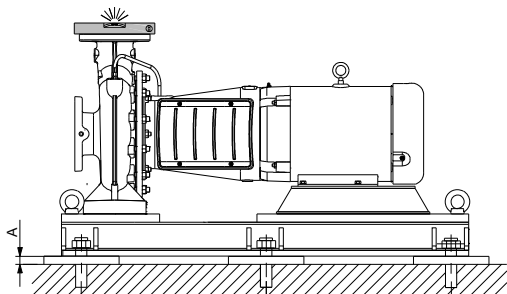

2. Tighten the anchor bolt nuts. Make sure the piping can be aligned to the pump flanges without putting strain on the pipes or the flanges.

5.2 Pipes and connections


5.2.1 Pipe system

When installing the pipes, the pump housing must not be stressed by the pipes.


The inlet and outlet pipes must be of an adequate size, taking the pump inlet pressure into account.

The pipes must be installed in a way that air pockets are avoided, especially on the inlet side of the pump.

TM075331

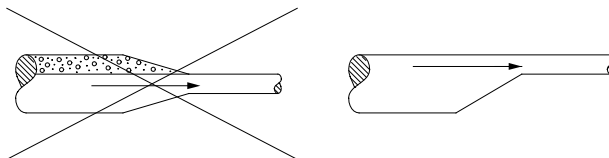

TM075332

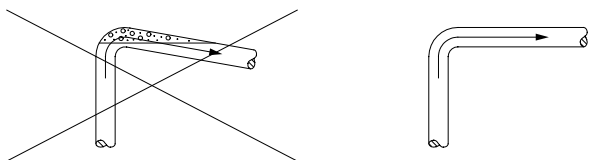

TM002263

Recommended pipe installation to avoid friction and air pockets

The pipes must be as straight as possible, so as to avoid unnecessary bends and fittings. Where necessary, use 45 ° or long-sweep 90 ° pipe bends to decrease friction loss.

Where flanged joints are used, internal diameters must match properly and mounting holes must be aligned.



Do not apply force to pipes when making any connections.

5.2.2 Connecting the inlet pipes

- Run the inlet pipe as direct as possible, and optimally, make sure the length is at least ten times the pipe diameter. A short inlet pipe can be the same diameter as the inlet port. A long inlet pipe must be one or two sizes larger than the inlet port, depending on the length, and with a reducer between the pipe and the inlet port.
- If possible, run a horizontal inlet line along an even gradient. We recommend a gradual upward slope to the pump under suction lift conditions, and a gradual downward slope under positive inlet pressure conditions.
- Avoid any high points, such as pipe loops, as this may create air pockets and throttle the system, or cause erratic pumping.
- Install a valve on the inlet line to allow for isolation of the pump during shutdown and maintenance, and to facilitate pump removal.



Where two or more pumps are connected to the same inlet line, install valves to isolate each pump from the line.

- Always install valves in positions that do not yield air pockets.
- During pumping operation, the valves on the inlet line must always be fully open.


TM075317

TM075318

5.2.3 Connecting the outlet pipes

We recommend that you use long horizontal outlet pipes.

- Install a valve near the outlet port to allow for isolation of the pump during shutdown and maintenance, and to facilitate pump removal.
- Avoid high points in the outlet pipe because it might entrap air or gas, and thus retard pump operation.
- If water hammer occurs, for example when check valves are used, close the outlet valve before pump shutdown.
- Make sure the pipes are adequately supported as close to the pump as possible, both on the inlet and the outlet side.

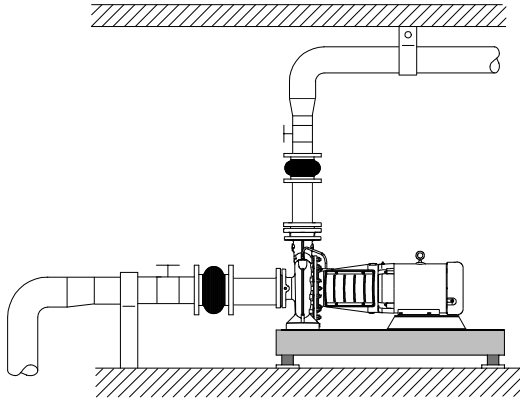

TM075319

Pump installation

The counterflanges must be properly aligned so that the pump is not strained while the flange bolts are tightened.

5.3 Expansion joints


Expansion joints provide these advantages:

- absorption of thermal expansion and contraction of pipes caused by variations in liquid temperature
- reduction of mechanical influences in connection with pressure surges in the pipes
- isolation of structure-borne noise in the pipes, applying only to rubber bellows expansion joints.

! Do not install expansion joints to make up for inaccuracies in the pipes, such as center displacement or misalignment of flanges.

The expansion joints must be fitted at a minimum distance of 1 to 1.5 times of the pipe diameter away from the pump on the inlet and the outlet side. This will prevent turbulence in the expansion joints, thus ensuring optimum inlet conditions and minimum pressure loss on the outlet side. At flow velocities greater than 16.4 ft/s (5 m/s), we recommend that you fit larger expansion joints matching the pipes.

The figures below show examples of rubber bellows expansion joints with or without limiting rods.

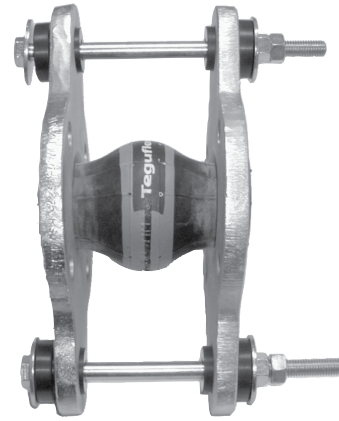

TM024979

Rubber bellows expansion joint with limiting rods




TM024981

Rubber bellows expansion joint without limiting rods

We always recommend that you use expansion joints with limiting rods for flanges larger than 4 inches in order to reduce the effects of the expansion or contraction forces on the pipes. Follow the supplier's instructions and pass them on to advisers or pipe installers.

You must anchor the pipes in such a way that they do not stress the expansion joints and the pump.

The figure below shows an example of a metal bellows expansion joint with limiting rods.

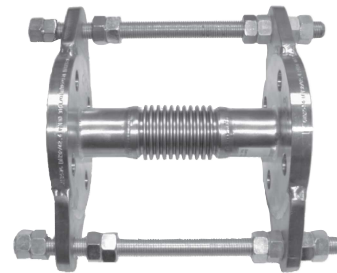

TM024980

Metal bellows expansion joint with limiting rods

Due to the risk of rupture of the rubber bellows, we recommend that you use metal bellows expansion joints at temperatures above 212 °F (100 °C) combined with high pressure.

5.4 Measuring instruments

5.4.1 Pressure gauge and mano-vacuum gauge

To ensure continuous monitoring of the operation, we recommend that you install a pressure gauge on the outlet side and a mano-vacuum gauge on the inlet side. The pressure gauge tapings must only be opened for test purposes. The measuring range of the gauges must be 20 % above the maximum pump pressure. When measuring with pressure gauge on the pump flanges, note that a pressure gauge does not register dynamic pressure.

On all pumps, the diameters of the inlet and outlet flanges are different which results in different flow velocities at the two flanges. Consequently, the pressure gauge on the outlet flange will not show the pressure stated in the technical documentation, but a value which may be up to 22 PSI (1.5 bar) or approximately 50 ft (15 m) of head lower.

5.4.2 Ammeter

We recommend connecting an ammeter to check the motor load.

6. Electrical connection

The electrical connection must be carried out by a qualified electrician in accordance with local regulations.

DANGER

Electric shock

Death or serious personal injury



- Before removing the terminal box cover, and before removing or dismantling the pump, make sure that the power supply has been switched off and that it cannot be accidentally switched on again. Use lockout-tagout if available. The pump must be connected to an external main switch.

DANGER

Explosive environment

Death or serious personal injury



- Whenever powered equipment is used in explosive surroundings, the rules and regulations generally or specifically imposed by the relevant authorities or trade organizations must be observed.

The operating voltage and frequency are stated on the nameplate. Make sure that the motor is suitable for the power supply of the installation site.

The electrical connection must be carried out as shown in the wiring diagram inside the terminal box cover.

6.1 Voltage and frequency variation

The motor will operate satisfactorily under the following voltage and frequency variations, but not necessarily in accordance with the standards established for operation under rated conditions:

- The voltage variation must not exceed 10 % above or below the rating specified on the motor nameplate.
- The frequency variation must not exceed 5 % above or below the motor rating.

6.2 Motor protection

DANGER

Automatic startup

Death or serious personal injury



- Before starting any repair work on motors incorporating a thermal switch or thermistors, make sure that the motor cannot restart automatically after cooling.

Three-phase motors must be connected to a motor-protective circuit breaker. The electrical connection must be carried out as shown in the wiring diagram on the back side of the terminal box cover.

6.3 Frequency converter operation

All three-phase motors can be connected to frequency converters. Frequency converter operation will often expose the motor insulation system to a heavier load causing the motor to be noisier than usual due to eddy currents caused by voltage peaks.

A large motor driven by a frequency converter will be loaded with bearing currents.

Check these operating conditions if the pump is driven by a frequency converter:

| Operating conditions | Requirements |
|--|---|
| 2-, 4- and 6-pole motors, 100 hp (75 kW) and above | The motor must have an Aegis ground ring and the bearings must be electrically isolated. Contact Grundfos. |
| Noise-critical applications | An output filter must be fitted between the motor and the frequency converter. This reduces the voltage peaks and thus the noise. |
| Particularly noise-critical applications | A sinusoidal filter must be fitted. |
| Cable length | A cable must be fitted that meets the specifications provided by the frequency converter supplier. |
| Supply voltage | The motor voltage must be suitable for frequency converter operation. |
| High-peak voltages | A sinusoidal filter must be fitted between the motor and the frequency converter. The motor must have reinforced insulation. |
| High voltage or current harmonics or harmonic sensitivity applications | A sinusoidal filter must be fitted and the motor must have reinforced insulation. |

7. Startup



Do not start the pump until it has been filled with liquid and vented.

7.1 Flushing the pipe system

CAUTION

Biological hazard

Minor or moderate personal injury



- When pumping drinking water, the pump must be flushed thoroughly with clean water before startup in order to remove any foreign matters, such as preservatives, test liquid, or grease.
- Before starting up the pump, thoroughly clean, flush and fill the pipe system with clean water.



The warranty does not cover any damage caused by flushing the pipe system by means of the pump.



The pump is not designed to pump liquids containing solid particles such as pipe debris and welding slag.

7.2 Priming the product

7.2.1 Priming the product in closed systems or open systems where the liquid level is above the pump inlet

1. Close the isolating valve in the outlet pipe and slowly open the isolating valve in the inlet pipe. Both the pump and the inlet pipe must be completely filled with liquid.

WARNING

Escaping liquid

Death or serious personal injury




- Pay attention to the orientation of the priming hole to ensure that the escaping liquid does not cause personal injury or damage to the motor or other components.
- In hot-liquid installations, pay special attention to the risk of personal injury caused by scalding hot liquid.
- In cold-liquid installations, pay special attention to the risk of personal injury caused by cold liquid.

2. Loosen the priming plug in order to vent the pump. Once liquid runs out, tighten the priming plug.

7.2.2 Priming the product in inlet operation with check valve

The inlet pipe and the pump must be filled with liquid and vented before the pump is started.

1. Close the isolating valve in the outlet pipe and slowly open the isolating valve in the inlet pipe.
2. Remove the priming plug indicated by M.
3. Pour liquid through the hole until the inlet pipe and the pump are completely filled with liquid.
4. Fit the priming plug indicated by M.
5. The inlet pipe may be filled and vented via the priming plug. Alternatively, a priming device with funnel can be installed before the pump.

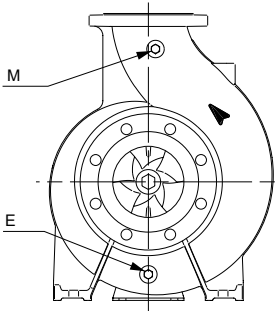


Drain plug (E), priming and venting plug (M)

TM033935

7.2.3 Priming the product in open systems where the liquid level is below the pump inlet

1. If an isolating valve is fitted on the inlet side of the pump, the valve must be fully open.
2. Close the isolating valve in the outlet pipe, and tighten the priming and drain plugs.

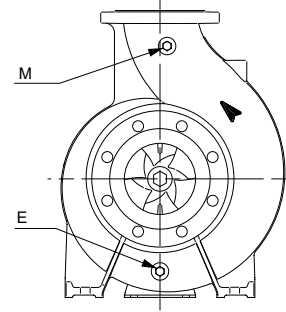

Drain plug (E), priming and venting plug (M)


3. Connect a manual venting pump with the funnel instead of a priming device.
4. Install a slide valve between the venting pump and the centrifugal pump in order to protect the venting pump against excessive pressure.
5. Once the slide valve at the manual venting pump has been opened, vent the inlet pipe using short, rapid pump strokes until the liquid runs out on the outlet side.
6. Close the valve at the venting pump.

7.3 Checking the direction of rotation



The pump must be filled with liquid when checking the direction of rotation.

The correct direction of rotation is shown by arrows on the pump housing. See the figure below.

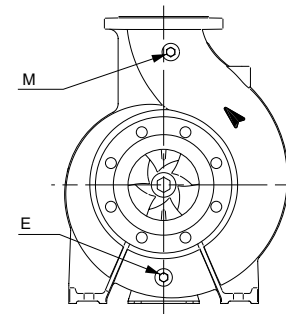

M is priming plug (venting plug), E is drain plug.

1. Check the direction of rotation by watching the motor fan rotation.
2. Turn the motor on for a brief while to ensure that the direction of rotation is correct as indicated by the arrow cast into the pump housing.
This should only be done for three-phase motors.
3. If the direction of rotation is incorrect, interchange two wires at the motor starter terminals T1 and T2.



Use extreme caution to ensure that motors are turned on only briefly when determining proper direction of rotation.

TM033935

TM033935

7.4 Starting up the pump

1. Fully open the isolating valve on the inlet side of the pump and leave the isolating valve on the outlet side almost closed.
2. Start the pump.
3. Vent the pump during startup by loosening the air vent screw in the pump head or pump head cover until a steady stream of liquid runs out of the vent hole.

WARNING

Escaping liquid

Death or serious personal injury



- Pay attention to the orientation of the vent hole to ensure that the escaping liquid does not cause personal injury or damage to the motor or other components.
- In hot-liquid installations, pay special attention to the risk of personal injury caused by scalding hot liquid.
- In cold-liquid installations, pay special attention to the risk of personal injury caused by cold liquid.

4. When the pipes have been filled with liquid, slowly open the isolating valve on the outlet side until it is fully open.
5. Check the overload by measuring the motor current consumption and comparing the value to the rated current stated on the motor nameplate. In case of overload, throttle the valve on the outlet side until the motor is no longer overloaded.



If the pump is fitted with a motor with an output selected on the basis of a specific maximum flow rate, the motor may be overloaded if the differential pressure is lower than anticipated.

6. Always measure the motor current consumption during startup.



At the moment of startup, the input current of the pump motor is up to six times higher than the full-load current stated on the motor nameplate.

7.5 Shaft seal run-in period

The seal faces are lubricated by the pumped liquid, meaning that there may be a certain amount of leakage from the shaft seal. When the pump is started for the first time, or when a new shaft seal is installed, a certain run-in period is required before the leakage is reduced to an acceptable level. The time required depends on the operating conditions, that is, every time the operating conditions change, a new run-in period is started.

Under normal conditions, the leaking liquid evaporates, and as a result, no leakage will be detected.

Liquids such as kerosene do not evaporate, and drops are visible, but it is not a shaft seal failure.

7.5.1 Mechanical shaft seals

Mechanical shaft seals are precision components. If the mechanical shaft seal of a recently installed pump fails, it normally happens within the first few hours of operation. The main cause of such failures is improper installation of the shaft seals and/or mishandling of the pump during installation.

7.6 Reference readings of monitoring equipment

We recommend that you take initial readings of the inlet and outlet pressures by using pressure gauges.

The readings can be used as reference in case of abnormal operation.

8. Service

DANGER

Moving machine parts

Death or serious personal injury



- Before any inspection, maintenance, service or repair of the product, make sure the motor controls are in the "OFF" position, locked and tagged.

DANGER

Electric shock and unintended pump start

Death or serious personal injury



- Before starting work on the product, switch off the power supply. Make sure the power supply cannot be accidentally switched on. Use logout-tagout if available.

8.1 Contaminated products

CAUTION

Biological hazard

Minor or moderate personal injury



- Flush the pump thoroughly with clean water and rinse the pump parts in water after disassembling.

The product will be classified as contaminated if it has been used for a liquid which is injurious to health or toxic. If you request Grundfos to service the product, contact Grundfos with details about the pumped liquid before returning the product for service. Otherwise, Grundfos can refuse to accept the product for service.

Any application for service must include details about the pumped liquid.

Clean the product in the best possible way before you return it. Costs of returning the product are to be paid by the customer.

8.2 Maintenance

DANGER

Moving machine parts

Death or serious personal injury



- Before any inspection, maintenance, service or repair of the product, make sure the motor controls are in the "OFF" position, locked and tagged.

DANGER

Electric shock and unintended pump start

Death or serious personal injury



- Before starting work on the product, switch off the power supply. Make sure the power supply cannot be accidentally switched on. Use logout-tagout if available.

8.2.1 Maintenance of the pump

The pump is maintenance-free.

8.2.2 Maintaining the mechanical shaft seals

Mechanical shaft seals are maintenance-free, working almost without any leakages.

- If any considerable or increasing seepage occurs, check the mechanical shaft seal immediately.
- If the sliding surfaces are damaged, replace the entire shaft seal. Treat mechanical shaft seals with utmost care.

End suction pumps equipped with mechanical shaft seals are matched to the operating conditions for which the pump was sold. Observe the following precautions to avoid shaft seal damage and achieve maximum shaft seal life.



Do not run the pump dry or against a closed valve. Dry running will cause shaft seal failure.



Do not exceed the temperature or pressure limitations for the mechanical shaft seal in use.

8.2.3 Maintaining the motor

It is important to keep the motor clean in order to ensure adequate ventilation.

- Check the motor at regular intervals.
- If the pump is installed in a dusty environment, check and clean it regularly.

8.2.3.1 Lubrication of motor

Always follow the motor manufacturer's lubricating instructions. Some information is stated on the motor nameplate, and additional information can be found in the installation and operating manual from the motor manufacturer.

8.2.4 Changing the mechanical shaft seal

8.2.4.1 Dismounting the mechanical shaft seal

1. Remove coupling guards.
2. Remove fork tool from the motor stool.
3. Loosen the coupling set screws and bolts.
4. Take the split coupling out from the motor stool window.
5. Loosen bolts from the seal cover and take out the seal cover from the motor stool window.
6. Remove the shaft seal from the shaft and seal cover.


8.2.4.2 Installing the mechanical shaft seal

1. Lubricate the shaft with glycerine.
2. Install the rotating part of the shaft seal onto shaft.
 - For 175 PSI pumps (class 125):
Assemble rotational ring on the shaft.
 - For 363 PSI pumps (class 300):
Assemble the rotational ring and spacer on the shaft.
Use thread locker (Loctite 2700) to the set screws in seal, and tighten the screw.



Keep the seal surfaces clean and lubricate seal faces with the pumped liquid.

3. Assemble the stationary shaft seal part into seal cover. Make sure that the O-ring is in the seal cover.
4. Assemble seal cover to the cover and tighten bolts.
5. Lift the shaft and mount fork tool.
6. Install the keys to the shafts. Place the shoulders of two half couplings on the same plane with the surface of pump shaft. Connect two half couplings by coupling bolts. Lubricate the bolts with anti-seize grease and cross tighten the bolts with correct torque (M10: 85 ± 5 Nm, M12: 90 ± 9 Nm).
7. Add thread locker (Loctite 2700) to the set screws in coupling and tighten to fixate keys in shaft.
8. Remove the fork tool and measure the run-out (A: 0.004 inch/0.1 mm) on the shaft.

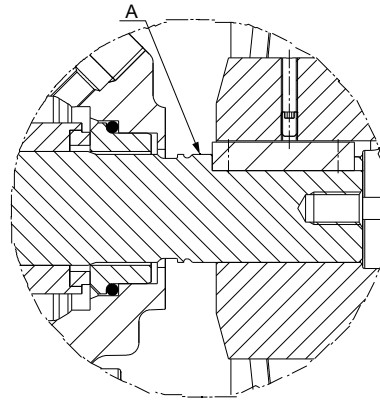

9. Assemble the fork tool into motor stool.

10. Install the coupling guards.

8.3 Service kits

For the service kits, see Grundfos Product Center at www.grundfos.com or in the Service Kit Catalog.

9. Taking the product out of operation

9.1 Protecting the pump during periods of inactivity and frost

Pumps that are not being used during periods of frost must be drained to avoid damage.

WARNING


Escaping liquid

Death or serious personal injury



- Ensure that the escaping liquid does not cause personal injury or damage to the motor or other components.
- In hot-liquid installations, pay special attention to the risk of personal injury caused by scalding hot liquid.
- In cold-liquid installations, pay special attention to the risk of personal injury caused by cold liquid.

1. Drain the pump by removing the drain plug.

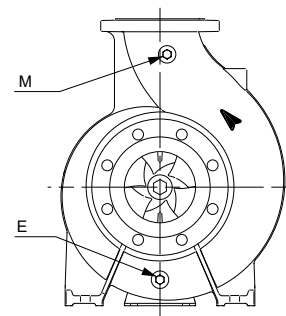

Drain plug (E), priming and venting plug (M)

2. Do not tighten the priming plug or replace the drain plug until the pump is to be used again.
3. If the pump is to be drained before a long period of inactivity, inject a few drops of silicone oil on the shaft at the bearing bracket. This will prevent the shaft seal faces from seizing up.

9.2 Short-term shutdown

For overnight or temporary shutdown periods under nonfreezing conditions, the pump may remain filled with liquid. The pump must be fully primed before restarting.

For short or frequent shutdown periods under freezing conditions, the liquid must be kept moving within the pump housing and the pump exterior must be insulated or heated to prevent freezing.

9.3 Long-term shutdown

For long shutdown periods, or to isolate the pump for maintenance, the inlet gate valve must be closed. If no inlet valve is used and the pump has positive inlet pressure, all liquid must be drained from the inlet line to stop the liquid flow from entering the pump inlet. The plug in the pump drain and vent holes must be removed, as required, and all liquid must be drained from the pump housing.

If there are freezing conditions during long shutdown periods, the pump must be drained completely, and all liquid passages and pockets must be blown out with compressed air. Freezing of the pumped liquid can also be prevented by filling the pump with antifreeze solution.

9.4 Storing the product

1. If you do not operate the pump soon after arrival, store it in a clean, dry place under slow, moderate changes in ambient temperature.
2. Protect the pump from moisture, dust, dirt and foreign bodies. Before and during storage we recommend the following precautions:
 - a. Make sure that the inlet and outlet ports and all other openings are covered with cardboard, wood or masking tape to prevent foreign objects from entering the pump.
 - b. If the unit is to be stored where there is no protective covering, cover it with a tarpaulin or waterproof material, or other suitable covering.
 - c. Rotate the shaft two turns every two weeks to prevent corrosion of the bearing surfaces and the stuffing box or shaft seal faces caused by moisture.

3. If the pump is to be stored for more than six months before being put into operation, apply a suitable corrosion inhibitor to the internal pump parts.

Make sure that the corrosion inhibitor used does not affect the rubber parts with which it comes into contact.

Commercially available preservatives can be used for this purpose. Please observe the manufacturer's instructions for application or removal.

4. Keep all openings covered until the pipes are ready to be fitted to prevent water and dust from entering the pump.

The cost of having to dismantle the pump during startup to remove foreign objects can be very high.

10. Fault finding

DANGER

Electric shock

Death or serious personal injury



- Before removing the terminal box cover and before removing or dismantling the pump, make sure that the power supply has been switched off and that it cannot be accidentally switched on again. Use logout-tagout if available.

WARNING

Escaping liquid

Death or serious personal injury



- Pay attention to the orientation of the vent hole to ensure that the escaping liquid does not cause personal injury or damage to the motor or other components.
- In hot-liquid installations, pay special attention to the risk of personal injury caused by scalding hot liquid.
- In cold-liquid installations, pay special attention to the risk of personal injury caused by cold liquid.



CAUTION

Cold surface or Hot surface

Minor or moderate personal injury



- When pumping hot or cold liquids, make sure that no one can accidentally come into contact with hot or cold surfaces.

| Fault | Cause | Remedy |
|--|--|--|
| 1. The pump delivers no or too little liquid. | a) The electrical connection is wrong, for instance two phases. | <ol style="list-style-type: none"> 1. Check the electrical connection. 2. Remedy, if necessary. |
| | b) The direction of rotation is wrong. | <ul style="list-style-type: none"> • Interchange two phases of the power supply. |
| | c) There is air in inlet pipe. | <ul style="list-style-type: none"> • Vent the inlet pipe or the pump. |
| | d) The counterpressure is too high. | <ol style="list-style-type: none"> 1. Set the duty point according to the flow and head that the pump is selected for. 2. Check the system for debris. 3. Clean the system, if necessary. |
| | e) The inlet pressure is too low. | <ul style="list-style-type: none"> • Increase the liquid level on the inlet side. • Open the isolating valve in the inlet pipe. • Make sure that all the conditions in section Pipes are complied with. |
| | f) The inlet pipe or impeller is blocked by debris. | <ul style="list-style-type: none"> • Clean the inlet pipe or pump. |
| | g) The pump draws in air due to a defective seal. | <ol style="list-style-type: none"> 1. Check the pipeline seals, pump housing gaskets and shaft seals. 2. Replace gaskets and seals, if necessary. |
| | h) The pump draws in air due to low liquid level. | <ol style="list-style-type: none"> 1. Increase the liquid level on the inlet side. 2. Keep the liquid level as constant as possible. |
| 2. The motor-protective circuit breaker has tripped because the motor is overloaded. | a) The pump is blocked by debris. | <ul style="list-style-type: none"> • Clean the pump. |
| | b) The pump is running above rated duty point. | <ul style="list-style-type: none"> • Set the duty point according to the flow and head that the pump is selected for. |
| | c) The density or viscosity of the liquid is higher than specified upon order. | <ul style="list-style-type: none"> • If less flow is sufficient, reduce the flow on the outlet side. • If less flow is insufficient, fit a more powerful motor. |
| | d) The motor-protective circuit breaker overload setting is incorrect. | <ol style="list-style-type: none"> 1. Check the setting of the motor-protective circuit breaker. 2. Adjust the setting if necessary. |
| | e) The motor runs on two phases. | <ol style="list-style-type: none"> 1. Check the electrical connection. 2. Replace the fuse, if defective. |
| | f) The motor may be faulty | <ol style="list-style-type: none"> 1. Check the motor. 2. Replace the motor if necessary. |

| Fault | Cause | Remedy |
|--|--|---|
| 3. The pump makes too much noise. The pump runs unevenly and vibrates. | a) The inlet pressure is too low, resulting in cavitation in the pump. | <ul style="list-style-type: none"> • Increase the liquid level on the inlet side. • Open the isolating valve in the inlet pipe. • Make sure that all the conditions in section Pipes are complied with. |
| | b) There is air in the inlet pipe or pump. | <ul style="list-style-type: none"> • Vent the inlet pipe or the pump. |
| | c) The counterpressure is lower than specified. | <ul style="list-style-type: none"> • Set the duty point according to the flow and head that the pump is selected for. |
| | d) The pump draws in air due to low liquid level. | <ul style="list-style-type: none"> • Increase the liquid level on the inlet side and keep it as constant as possible. |
| | e) The impeller is out of balance or the impeller blades are clogged. | <ol style="list-style-type: none"> 1. Clean the impeller. 2. Check the impeller blades, clean them if necessary. |
| | f) The split coupling is out of balance. | <ol style="list-style-type: none"> 1. Check coupling gap and that set screws in split coupling are tightened. 2. Disassemble split coupling to inspect keys and keyways and their alignment with coupling pieces. |
| | g) The inner parts are worn. | <ul style="list-style-type: none"> • Replace the defective parts. |
| | h) The pump is stressed by the pipes thus causing starting noise. | <ul style="list-style-type: none"> • Mount the pump so that it is not stressed. • Support the pipes. |
| | i) The bearings are defective. | <ul style="list-style-type: none"> • Replace the bearings. |
| | j) The motor fan is defective. | <ul style="list-style-type: none"> • Replace the fan. |
| | k) There are foreign bodies in the pump. | <ul style="list-style-type: none"> • Clean the pump. |
| l) Frequency converter operation causes noise. | <ul style="list-style-type: none"> • Find the different remedies in Frequency converter operation section. See section Frequency converter operation. | |
| 4. The pump, connections or mechanical shaft seal is leaking. | a) The pump is stressed by the pipes which causes leaks in the pump housing or at connections. | <ul style="list-style-type: none"> • Mount the pump so that it is not stressed. • Support the pipes. |
| | b) Pump housing gaskets and gaskets at connections are defective. | <ul style="list-style-type: none"> • Replace the pump housing gaskets or gaskets at connections. |
| | c) The mechanical shaft seal is dirty or stuck together. | <ul style="list-style-type: none"> • Check and clean the mechanical shaft seal. |
| | d) The mechanical shaft seal is defective. | <ul style="list-style-type: none"> • Replace the mechanical shaft seal. |
| | e) The shaft surface is defective. | <ul style="list-style-type: none"> • Replace the shaft. |
| 5. The temperature in the pump or motor is too high. | a) There is air in the inlet pipe or pump. | <ol style="list-style-type: none"> 1. Vent the inlet pipe or the pump. 2. Fill up the inlet pipe and the pump again. |
| | b) The inlet pressure is too low. | <ul style="list-style-type: none"> • Increase the liquid level on the inlet side. • Open the isolating valve in the inlet pipe. • Make sure that all the conditions in section Pipes are complied with. |
| | c) The bearings are lubricated with too little, too much or unsuitable lubricant. | <ul style="list-style-type: none"> • Replenish, reduce or replace the lubricant. |
| | d) The axial pressure is too high. | <ol style="list-style-type: none"> 1. Check the relief holes of the impeller on the inlet side. 2. Clean the holes, if necessary |
| | e) The motor-protective circuit breaker is defective or the setting is incorrect. | <ol style="list-style-type: none"> 1. Check the setting of the motor-protective circuit breaker. 2. Replace the circuit breaker if necessary. |
| | f) The motor is overloaded. | <ul style="list-style-type: none"> • Reduce the flow rate. |

11. Technical data

11.1 Operating conditions

11.1.1 Ambient temperature and altitude

The ambient temperature and the installation altitude are important factors for the motor.

All motors are able to operate without power derating for temperatures up to +104 °F (+40 °C) or below altitude of 3280.8 ft (1000 m) above sea level. Above these two limits, it may be necessary to use a motor with a higher output, or de-rated. Contact the motor manufacturer if the motor is to be operated above these limits. Consult the motor manufacturer before operating the motor above these limits.

11.1.2 Liquid temperature


Liquid temperature: -13 to 284 °F (-25 to +140 °C).

The maximum liquid temperature is stated on the pump nameplate, and depends on the shaft seal chosen.

11.1.3 Maximum operating pressure



Do not exceed the maximum operating pressure stated on the pump nameplate.

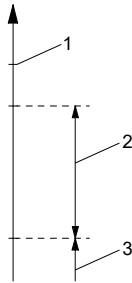

TM075513

Pressures in the pump

| Pos. | Description |
|------|---|
| 1 | Maximum operating pressure, that is pressure above atmospheric pressure |
| 2 | Pump pressure |
| 3 | Inlet pressure |

The total value of the inlet pressure and the pump pressure must be lower than the maximum operating pressure stated on the pump nameplate. Operation against a closed valve gives the highest operating pressure.

11.1.4 Minimum inlet pressure

Monitor the minimum inlet pressure to avoid cavitation. The risk of cavitation is higher in the following situations:

- The liquid temperature is high.
- The flow rate is considerably higher than the rated flow rate of the pump.
- The pump is operating in an open system with suction lift.

11.1.5 Maximum inlet pressure

The total value of the inlet pressure and the pump pressure must be lower than the maximum operating pressure stated on the pump nameplate. Operation against a closed valve yields the highest operating pressure.


11.1.6 Minimum flow rate

The pump must not run against a closed valve as it causes an increase in temperature and a formation of steam in the pump. That may result in shaft damage, impeller erosion, short life of bearings and damage to the stuffing boxes or mechanical shaft seals due to stress or vibration. The continuous stable flow rate must be at least 10 % of the rated flow rate. The rated flow rate is stated on the pump nameplate.

11.1.7 Maximum flow rate

Do not exceed the maximum flow rate, otherwise there is a risk of cavitation or overload, for instance.

The minimum and maximum flow rates are indicated either on the performance curve pages in the relevant data booklets, or on a curve for a specific pump when selecting it in the Grundfos Product Center. See www.grundfos.com.

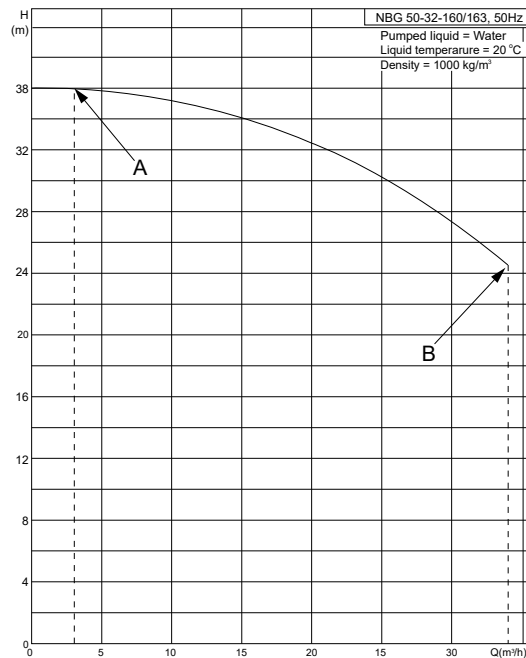

TM052444

Example from Grundfos Product Center in www.grundfos.com showing minimum and maximum flow rate

| Pos. | Description |
|------|-------------------|
| A | Minimum flow rate |
| B | Maximum flow rate |



11.1.8 Shaft seals

The operating range of the seals is described for two main applications: pumping of water or pumping of coolants.

Seals with a temperature range of 32 °F (0 °C) and up are mainly used for pumping water, while seals for temperatures below 32 °F (0 °C) are mainly intended for coolants.



We do not recommend that you operate the pump at maximum temperature and maximum pressure at the same time, as it results in reduced seal life and the occurrence of periodic noise.

| Shaft seal diameter [mm] | | | | 28, 38 | | 48 | 55 | 60 |
|---|-------------------------------|--------|------|------------------------------------|-----------------------------|----------|----------|----------|
| Shaft seal type | Seal faces | Rubber | Code | Temperature range | Max. pressure [PSI] ([bar]) | | | |
|  Bellows seal, type B, unbalanced | BQ ₇ | FKM | BBQV | 32-194 °F (0-90 °C) | 232 (16) | 232 (16) | 232 (16) | 232 (16) |
| | Q ₇ Q ₇ | EPDM | BQQE | -13 to +248 °F (-25 to +120 °C) | 232 (16) | 232 (16) | 232 (16) | 232 (16) |
| | Q ₇ Q ₇ | FKM | BQQV | 14 to 194 °F (-10 to +90 °C) | 232 (16) | 232 (16) | 232 (16) | 232 (16) |
|  O-ring seal, type D, balanced | AQ ₇ | FXM | DAQF | 32-284 °F (0-140 °C) | 363 (25) | 363 (25) | 363 (25) | 363 (25) |
| | Q ₆ Q ₇ | EPDM | DQQE | -4 to +284 °F (-20 to +140 °C) | 363 (25) | 363 (25) | 363 (25) | 363 (25) |

11.2 Electrical data

See the motor nameplate.

12. Disposing of the product

This product or parts of it must be disposed of in an environmentally sound way.

1. Use the public or private waste collection service.
2. If this is not possible, contact the nearest Grundfos company or service workshop.



The crossed-out wheeled bin symbol on a product means that it must be disposed of separately from household waste. When a product marked with this symbol reaches its end of life, take it to a collection point designated by the local waste disposal authorities. The separate collection and recycling of such products will help protect the environment and human health.

See also end-of-life information at www.grundfos.com/product-recycling.

13. Document quality feedback

To provide feedback about this document, scan the QR-code using your phone's camera or a QR code app.



FEEDBACK98932034

[Click here to submit your feedback](#)

Limited consumer warranty

1. Limited consumer warranty

This Limited Warranty is provided for Consumer Products sold in the United States only and applies to Consumer Transactions as defined in and applicable under the Magnusson-Moss Warranty Act and any other applicable Federal and/or State laws. In case of non-Consumer Products, please refer to Grundfos' warranty terms defined in clause 10 of Grundfos US Terms and Conditions of Sale of Product and Services available at <https://www.grundfos.com/legal/grundfos-customer-terms/usa-grundfos-general-terms-for-sales-of-products-and-services>

This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

New products manufactured by Grundfos are warranted to the original purchaser only and are to be free from defects in design, material and workmanship under normal use and service for no greater than a period of thirty (30) months from the date of manufacture which is set forth on the product's nameplate and on the product's packaging or the minimum period required by the applicable State law. For New Jersey, the applicable period is one year from the date of purchase.

The warranty period for replacement products, parts and components expires thirty (30) months from the original date of manufacture of the product originally purchased, unless a longer period is required under the applicable State law. For New Jersey, the warranty period for replacement products, parts and components expires one year from the original date of purchase of the product, not the date of replacement.

Products sold by Grundfos that are manufactured by others are not covered by this warranty.

Note that when purchasing a Grundfos product online, it is important to check the date of manufacture and the duration of the warranty with the seller as the product might no longer be covered under this Limited Warranty.

When a product is subject to this Limited Warranty a purchaser should contact the seller from which it purchased the product to make a claim.

If the seller of a product is no longer in business, the purchaser should contact a Grundfos Authorized Service Partner, which can be found at www.grundfos.com/us under > Support > Contact Service.

As part of making a claim, a purchaser shall return a defective product at the purchaser's cost, to the extent allowed by applicable law, along with proof of purchase and an explanation of the defect, date the defect occurred and circumstances surrounding the defect. For New Jersey there is no prohibition on returning a defective product at a purchaser's cost. If Grundfos is required by applicable State law to pay for the cost of shipment under applicable State law, then a purchaser should contact a Grundfos Authorized Service Partner to arrange for shipment. A purchaser also needs to promptly respond to Grundfos as to any inquiries regarding a warranty claim.

Grundfos' liability under this Limited Warranty to purchaser is limited to the repair or replacement of a product (at Grundfos' decision) that is the sole and exclusive remedy for purchaser to the extent permissible by applicable law. For New Jersey this limitation is permissible.

This warranty does not cover the following: ordinary wear and tear; use of a product for applications for which it is not intended; use of a product in an unsuitable environment; modifications, alterations or repair undertaken by anyone not acting with Grundfos' written authorization; failure to follow Grundfos' instructions, operations manuals, any other guidelines or good industry practice; use of faulty or inadequate ancillary equipment in combination with a product; application of spare or replacement parts not provided or authorized by Grundfos; accidental or intentional damage or misuse of a product.

The time period for making a claim under the implied warranty of merchantability and implied warranty of fitness are limited to the same time period as provided by this warranty to the extent permissible by applicable law. For residents of New Jersey, this limitation is permissible, but note that some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Grundfos shall not be liable for any incidental and consequential damages in connection with a product to the extent permissible by applicable law. For residents of New Jersey, this limitation is permissible, but note that some states do not allow limitations of incidental or consequential damages, so the above limitation may not apply to you.

2. Garantía limitada del consumidor

Esta garantía limitada se proporciona únicamente para los productos de consumo vendidos en los Estados Unidos y es aplicable a las transacciones de consumo tal y como se define en y resulta aplicable en virtud de la ley de Garantías Magnusson-Moss y cualquier otra legislación federal y/o estatal aplicable. Para el caso de productos que no sean de consumo, consulte los términos de la garantía de Grundfos definidos en la cláusula 10 de los términos y condiciones de venta de productos y servicios de Grundfos para los EE. UU., disponibles en <https://www.grundfos.com/legal/grundfos-customer-terms/usa-grundfos-general-terms-for-sales-of-products-and-services>.

Esta garantía limitada le confiere derechos legales específicos. Puede que también tenga otros derechos en virtud de su jurisdicción estatal.

Se garantiza únicamente al comprador original que los productos fabricados por Grundfos estarán libres de defectos de diseño, materiales y mano de obra en condiciones normales de uso y servicio durante un periodo no mayor a treinta (30) meses a partir de la fecha de fabricación que figura en la placa de datos del producto y en el empaque del mismo o el periodo mínimo exigido por la legislación estatal aplicable. Para Nueva Jersey, el periodo aplicable es de un año a partir de la fecha de compra.

El periodo de garantía para los productos, partes y componentes de repuesto vence a los treinta (30) meses contados a partir de la fecha de fabricación original del producto adquirido en primer lugar, a menos que la legislación estatal aplicable exija un periodo más largo. Para Nueva Jersey, el periodo de garantía de los productos, partes y componentes de repuesto vence un año contado a partir de la fecha original de compra del producto, no de la fecha de sustitución.

Los productos vendidos por Grundfos que sean producidos por otros fabricantes no están cubiertos por esta garantía.

Tenga en cuenta que, al comprar un producto Grundfos en línea, es importante revisar la fecha de fabricación y la duración de la garantía con el vendedor, ya que es posible que el producto ya no esté cubierto por esta garantía limitada.

Cuando un producto esté sujeto a esta garantía limitada, el comprador deberá ponerse en contacto con el vendedor al que haya comprado el producto para presentar una reclamación.

Si el vendedor de un producto ya no está en el negocio, el comprador debe ponerse en contacto con socio de servicio autorizado por Grundfos, que puede encontrar en la dirección www.grundfos.com/us, en la sección "Support" > "Contact Service".

Como parte de la presentación de una reclamación, el comprador deberá devolver el producto descompuesto a su costa, en la medida en la que lo permita la legislación aplicable, junto con el comprobante de compra y una explicación del defecto, la fecha en que este se haya producido y las circunstancias en torno al defecto. En Nueva Jersey no existe ninguna prohibición de devolver un producto descompuesto a costa del comprador. Si la legislación estatal aplicable obliga a Grundfos a hacerse cargo de los gastos de envío, el comprador deberá ponerse en contacto con un servicio técnico autorizado por Grundfos para organizar el envío. El comprador también debe responder con prontitud a Grundfos cualquier consulta relacionada con una reclamación de garantía.

La responsabilidad de Grundfos hacia el comprador en virtud de esta garantía limitada se limita a la reparación o sustitución de un producto (a decisión de Grundfos), que es el único y exclusivo remedio para el comprador en la medida permitida por la legislación aplicable. Para Nueva Jersey, esta limitación resulta permisible.

Esta garantía no cubre lo siguiente: el desgaste ordinario; el uso de un producto para aplicaciones para las que no está diseñado; el uso de un producto en un entorno inadecuado; las modificaciones, alteraciones o reparaciones realizadas por cualquier persona que no actúe con la autorización por escrito de Grundfos; el incumplimiento de las instrucciones, manuales de operación, cualquier otro lineamiento o las buenas prácticas industriales de Grundfos; el uso de equipos auxiliares descompuestos o inadecuados en combinación con un producto; el uso de repuestos o partes de sustitución no proporcionados ni autorizados por Grundfos; el daño accidental o deliberado o el uso indebido de un producto.

El periodo para presentar una reclamación en virtud de la garantía implícita de comerciabilidad y la garantía implícita de idoneidad se limita al mismo periodo previsto por esta garantía en la medida permitida por la legislación aplicable. Para los residentes de Nueva Jersey, esta limitación resulta permisible, si bien se debe tener en cuenta que algunos estados no permiten limitaciones en cuanto a la duración de una garantía implícita, por lo que la limitación anterior puede no resultar aplicable en su caso.

Grundfos no será responsable de ningún daño indirecto o consecuente en relación con un producto en la medida en la que lo permita la legislación aplicable. Para los residentes de Nueva Jersey, esta limitación resulta permisible, si bien debe tenerse en cuenta que algunos estados no permiten limitaciones en cuanto a daños indirectos o consecuentes, por lo que la limitación anterior puede no resultar aplicable en su caso.

Limited manufacturer's warranty

1. Limited manufacturer's warranty

This Limited Manufacturer's Warranty outlines applicable coverage and claims procedures for the pumps manufactured by Grundfos (the "Product").

This Limited Manufacturer's Warranty is provided for consumer products sold and used in Canada only and applies to consumer transactions as defined in the applicable provincial and territorial laws. In case of non-consumer products, please refer to Grundfos' warranty terms defined in clause 10 of Grundfos Canada Terms and Conditions of Sale of Product and Services available at: <https://www.grundfos.com/ca/legal/general-terms-and-conditions-of-sales-and-delivery>

This Limited Manufacturer's Warranty provides specific rights and limitations. Some of the limitations may not apply to you, and you may also have other rights that vary from province to province.

Scope of the Limited Manufacturer's Warranty

Subject to the following warranty terms and conditions, Grundfos Canada Inc. of 2941 Brighton Rd, Oakville, ON L6H 6C9, Canada ("Grundfos"), warrants to the original consumer (the "Purchaser") that the new Product manufactured by Grundfos is free from defects in design, material and workmanship under normal use and service for a period of twenty-four (24) months from the date of retail purchase but no greater than a period of thirty (30) months from the date of manufacture which is set forth on the Product's nameplate and on the Product's packaging (the "Warranty Period").

Note that when purchasing a Grundfos Product online, it is important to check the date of manufacture and the duration of the warranty with the seller as the Product might no longer be covered under this Limited Manufacturer's Warranty.

This Limited Manufacturer's Warranty applies exclusively to a new Grundfos Product sold and used in Canada. This Limited Manufacturer's Warranty does not apply to any Product sold "as is" or "sales final". This Limited Manufacturer's Warranty is not transferrable by the original Purchaser. Products sold by Grundfos that are manufactured by others are not covered by this warranty.

The sole and exclusive remedy under this Limited Manufacturer's Warranty is the repair or, at the discretion of Grundfos, the replacement of the Product, as set out below. Defects or damages are not covered by the Limited Manufacturer's Warranty if they are due to:

- ordinary wear and tear;
- use of the Product for an application for which it is not intended;
- installation of the Product in an environment not suitable for the Product;
- any modification, alteration or repair of the Product undertaken by the Purchaser or a third party (not acting on Grundfos' behalf);
- failure to follow Grundfos' instructions, including in the installation manual, operation manual, maintenance manual or service manual;
- installation, commissioning, operation (including the use of the Product or any Grundfos product outside its specifications) or maintenance of the Product other than in accordance with Grundfos installation manual, operation manual, maintenance manual or service manual or with good industry practice;
- use of faulty or inadequate ancillary equipment in combination with the Product;
- the application of spare parts of poor quality (excluding the application of any Grundfos original spare parts);
- accidental or intentional damage or misuse of the Products or services by the Purchaser or a third party (not acting on Grundfos' behalf); or
- the non-compliance of the Purchaser or of the Purchaser's own products with applicable law and regulation.

How to get service under the Limited Manufacturer's Warranty:

When a Product is subject to this Limited Manufacturer's Warranty, the Purchaser should contact the seller from which it purchased the Product to make a claim within 24 months from the date of retail purchase but no later than thirty (30) months from the date of manufacture which is set forth on the Product's nameplate and on the Product's packaging (the "Warranty Notification Period").

If the seller of a Product is no longer in business, the Purchaser should contact Grundfos Service at www.grundfos.com/us under **Support > Contact Service**.

To exercise the rights under this Limited Manufacturer's Warranty, the Purchaser shall return a defective Product at the Purchaser's cost, to the extent allowed by applicable law, along with proof of purchase and an explanation of the defect, date the defect occurred and circumstances surrounding the defect.

The Purchaser is responsible for any expenses for dismounting and mounting the Product and for any and costs related to removal, reinstallation, transportation, and insurance. If Grundfos is required by applicable provincial or territorial law to pay for the cost of transportation, then the Purchaser should contact Grundfos Service Partner to arrange for shipment. The Purchaser also needs to promptly respond to Grundfos as to any inquiries regarding a warranty claim.

Unless requested by Grundfos, the Product may not be disassembled prior to remedy. Any failure to comply herewith will render this Limited Manufacturer's Warranty void.

Grundfos will either arrange the repair of the defective Product under this Limited Manufacturer's Warranty or, at Grundfos' option, provide the Purchaser with a replacement of the defective Product. The replacement unit can be new or remanufactured.

To the extent permissible by applicable law, Grundfos shall not be liable for any incidental and consequential damages or losses of any kind whatsoever arising under, relating to or in connection with the Product, use of the Product or the inability to use the Product.

2. Garantie limitée du fabricant

Cette garantie limitée du fabricant décrit la couverture applicable et les procédures de réclamation pour les pompes fabriquées par Grundfos (ci-après le « Produit »).

Cette garantie limitée du fabricant est fournie pour les produits de consommation vendus et utilisés au Canada uniquement et s'applique aux transactions de consommateurs telles que définies dans les lois provinciales et territoriales applicables. Dans le cas de produits non destinés aux consommateurs, se référer aux conditions de garantie de Grundfos définies à l'article 10 des Conditions générales de vente des produits et services de Grundfos Canada, qui sont disponibles à l'adresse suivante : <https://www.grundfos.com/ca/fr/legal/general-terms-and-conditions-of-sales-and-delivery>

Cette garantie limitée du fabricant prévoit des droits et des limitations spécifiques. Certaines des limitations peuvent ne pas s'appliquer à vous, et vous pouvez également bénéficier d'autres droits qui varient d'une province à l'autre.

Champ d'application de la garantie limitée du fabricant

Sous réserve des conditions générales de garantie suivantes, Grundfos Canada Inc., dont le siège social est situé au 2941, Brighton Rd, Oakville, ON L6H 6C9, Canada (ci-après « Grundfos »), garantit au consommateur initial (ci-après « l'Acheteur ») que le nouveau Produit fabriqué par Grundfos est exempt de défauts de conception, de matériaux et de fabrication dans des conditions normales d'utilisation et d'entretien pendant une période de vingt-quatre (24) mois à compter de la date d'achat au détail, mais pas plus de trente (30) mois à compter de la date de fabrication indiquée sur la plaque signalétique et sur l'emballage du Produit (« Période de garantie »).

Lors de l'achat d'un Produit Grundfos en ligne, il est important de vérifier la date de fabrication et la durée de la garantie auprès du vendeur, car le Produit pourrait ne plus être couvert par cette garantie limitée du fabricant.

Cette garantie limitée du fabricant s'applique exclusivement à un Produit Grundfos neuf vendu et utilisé au Canada. Cette garantie limitée du fabricant ne s'applique pas aux Produits vendus « en l'état » ou « vente finale ». La présente garantie limitée du fabricant n'est pas transférable par l'Acheteur initial. Les produits vendus par Grundfos qui sont fabriqués par des tiers ne sont pas couverts par cette garantie.

Le seul et unique recours dans le cadre de cette garantie limitée du fabricant est la réparation ou, à la discrétion de Grundfos, le remplacement du Produit, comme indiqué ci-dessous. Les défauts ou dommages ne sont pas couverts par la garantie limitée du fabricant s'ils sont dus à :

- l'usure normale ;
- l'utilisation du Produit pour une application pour laquelle il n'est pas prévu ;
- l'installation du Produit dans un environnement non adapté au Produit ;
- toute modification, altération ou réparation du Produit entreprise par l'Acheteur ou un tiers (n'agissant pas pour le compte de Grundfos) ;
- la non-observation des instructions de Grundfos, y compris dans les notices d'installation, d'utilisation, de maintenance ou d'entretien ;
- l'installation, la mise en service, l'utilisation (y compris l'utilisation du Produit ou de tout produit Grundfos en dehors de ses spécifications) ou l'entretien du Produit autrement que conformément aux notices d'installation, d'utilisation, de maintenance ou d'entretien Grundfos ou aux bonnes pratiques de l'industrie ;
- l'utilisation d'un équipement auxiliaire défectueux ou inadéquat en combinaison avec le Produit ;
- l'utilisation de pièces de rechange de mauvaise qualité (à l'exclusion de l'utilisation de pièces de rechange d'origine Grundfos) ;
- tout dommage accidentel ou intentionnel ou toute mauvaise utilisation des Produits ou des services par l'Acheteur ou un tiers (n'agissant pas pour le compte de Grundfos) ; ou
- la non-conformité de l'Acheteur ou de ses propres produits aux lois et règlements applicables.

Procédure à suivre pour bénéficier d'un service dans le cadre de la garantie limitée du fabricant :

Lorsqu'un Produit est soumis à la présente garantie limitée du fabricant, l'Acheteur doit contacter le vendeur auprès duquel il a acheté le produit pour faire une réclamation dans les 24 mois suivant la date d'achat au détail, mais au plus tard trente (30) mois à compter de la date de fabrication indiquée sur la plaque signalétique du Produit et sur l'emballage du Produit (« Période de notification de garantie »).

Si le vendeur d'un Produit n'est plus en activité, l'Acheteur doit contacter le service Grundfos à l'adresse www.grundfos.com/us sous **Support > Contact Service**.

Pour exercer les droits prévus par la présente garantie limitée du fabricant, l'Acheteur doit renvoyer le Produit défectueux à ses frais, dans la mesure où la loi applicable le permet, accompagné de la preuve d'achat et d'une explication du défaut, de la date à laquelle le défaut s'est produit et des circonstances entourant le défaut.

L'Acheteur est responsable de tous les frais de démontage et de montage du Produit et de tous les frais liés à l'enlèvement, à la réinstallation, au transport et à l'assurance. Si Grundfos est tenu par la loi provinciale ou territoriale applicable de payer les frais de transport, l'Acheteur doit contacter le partenaire de service Grundfos pour organiser l'expédition. L'Acheteur doit également répondre rapidement à Grundfos pour toute demande concernant une réclamation au titre de la garantie.

Sauf demande de Grundfos, le Produit ne doit pas être démonté avant d'être remis en état. Tout manquement à ces dispositions entraînera l'annulation de la présente garantie limitée du fabricant.

Grundfos procédera à la réparation du Produit défectueux dans le cadre de cette garantie limitée du fabricant ou, à la convenance de Grundfos, fournira à l'Acheteur un produit de remplacement du Produit défectueux. L'unité de remplacement peut être neuve ou refabriquée.

Dans la mesure autorisée par la loi applicable, Grundfos ne sera pas responsable des dommages accessoires et indirects ou des pertes de quelque nature que ce soit découlant de, liés à ou en rapport avec le Produit, l'utilisation du Produit ou l'incapacité d'utiliser le Produit.

U.S.A.

Global Headquarters for WU
856 Kooamey Road
Brookshire, Texas 77423 USA
Phone: +1-630-236-5500

GRUNDFOS CBS Inc.
902 Kooamey Road
Brookshire, TX 77423 USA
Phone: 281-994-2700
Toll Free: 1-800-955-5847
Fax: 1-800-945-4777

GRUNDFOS Pumps Corporation
9300 Loiret Boulevard
Lenexa, Kansas 66219 USA
Tel.: +1 913 227 3400
Fax: +1 913 227 3500

Canada

GRUNDFOS Canada inc.
2941 Brighton Road
Oakville, Ontario
L6H 6C9
Tel.: +1-905 829 9533
Fax: +1-905 829 9512

Mexico

Bombas GRUNDFOS de México
S.A. de C.V.
Boulevard TLC No. 15
Parque industrial Stiva Aeropuerto
Apodaca, N.L. 66600
Tel.: +52-81-8144 4000
Fax: +52-81-8144 4010

Revision Info

Last revised on 05-2024

| |
|-------------------------|
| 99932034 12.2024 |
| ECM: 1411014 |