

What’s included?

1x Tent Body
(Rainfly permanently attached)



1x Footprint



2x Silver Arch Poles



1x Long Red Ridge Pole



1x Short Red Arch Pole



6x Guy-out Cords
(with knotless hooks attached)



6x Stakes



2x Python Straps



2x Kanga Claw Carabiners



Assembling your Sunda


1 Lay out the footprint

Ensure the footprint is set on a flat surface, free of rocks, sticks, roots, etc.




2 Slide silver poles through silver marked sleeves

2A Slide each silver arch pole through the vertical sleeves, located at the head and foot of the tent. 2B Connect the end of the poles to the tent pole footing.

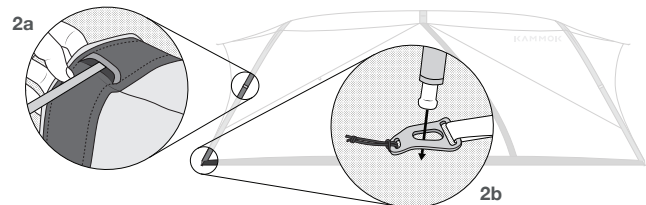


3 Slide long red pole through red marked sleeve

3A Slide the long red ridge pole through the pole sleeve running horizontally along the tent body. 3B Connect pole ball tips to the ends of the attached rainfly.

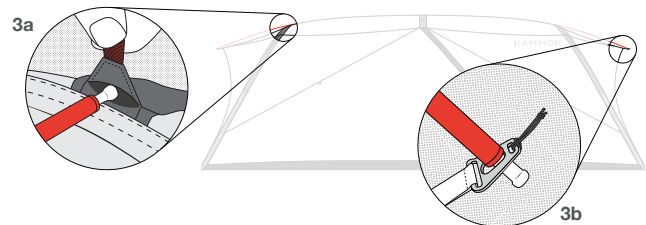


4 Slide short red pole through top ridge sleeve

4A Slide the short red arch pole through the center, arch sleeve. 4B Connect the pole ball tips to the ends of the attached rainfly.

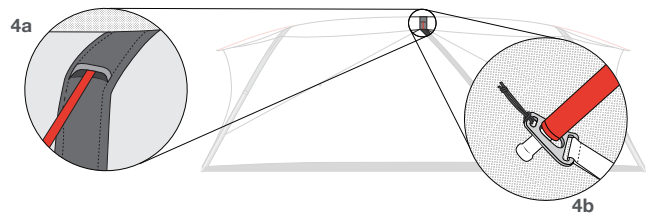


5 Connect tent to footprint

Connect all four lock tip tent pole feet to the footprint as shown below. Skip this step if continuing on to hammock mode.

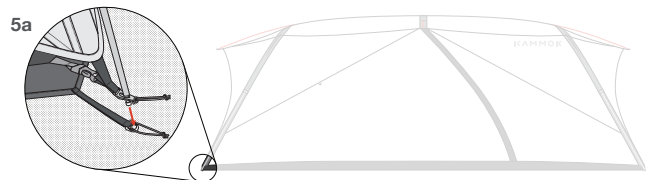


Using Sunda in hammock mode? Continue to Step 6. Otherwise, stake down each corner and relax!

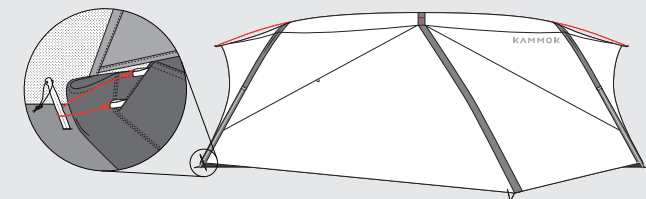

Transitioning to hammock mode


6 Release side buckles

Locate the four side release buckles at the corner of the tent floor. Unclip the buckles to release, the tent floor will hang freely from the rainfly.

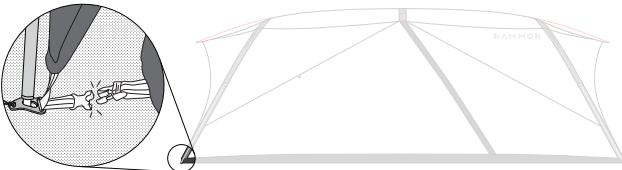


7 Pull cord through each sewn channel

7A Locate the corner loop cords on the tent floor. Unbutton loops and pull ends together. 7B The head and foot of the tent floor should be fully cinched after this step.

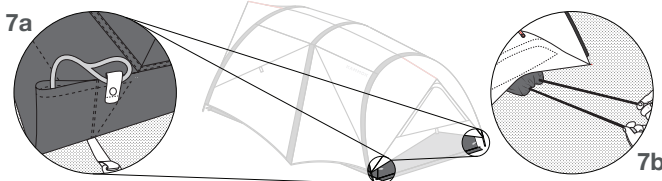


8 Connect carabiner to both loops

8A Connect carabiner to the other corner loop as shown and pull elastic ridge-line adjuster taut to stabilize the tent.

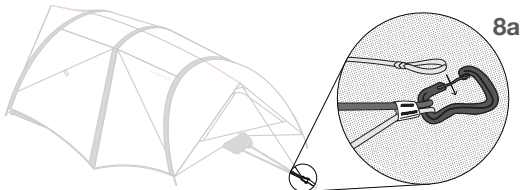

9 Hang Python straps and connect to Sunda

Wrap Python straps around sturdy trees 13-18 feet apart. The straps should hang just above eye level or 5-7 feet above the ground. Clip each of the carabiners into a loop of the Python straps, the straps should roughly hang at a 30-40 degree angle from the ground.

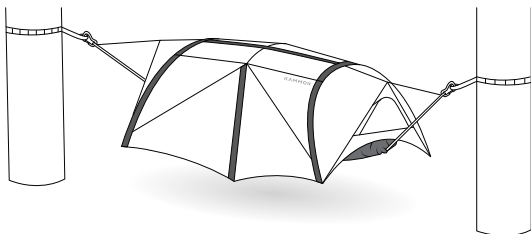

10 Stabilize the tent

Test pressure on elevated tent with hands prior to placing full body weight into the hammock. After adjusting height and comfort, stake out all 4 corners and 2 doors with the included adjustable guyline.

